



Danfoss AK-SM 800AL Alarm Logger Installation Guide

[Home](#) » [Danfoss](#) » Danfoss AK-SM 800AL Alarm Logger Installation Guide 

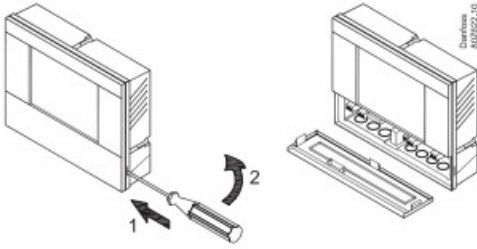
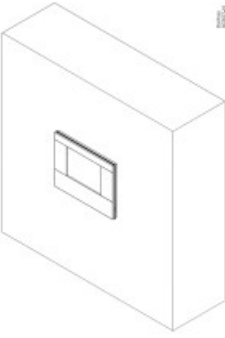
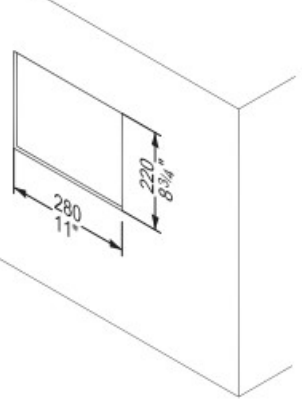
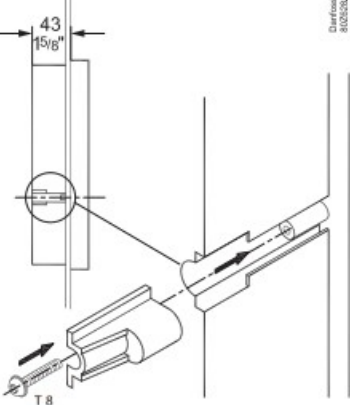
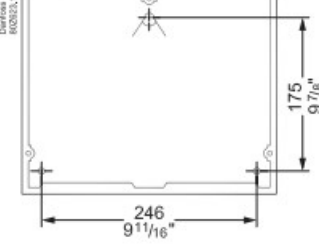
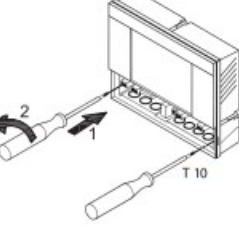
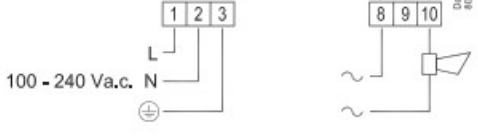
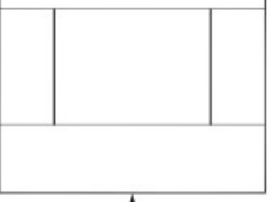
 


Instructions
Alarm logger
AK-SM 800AL

Contents

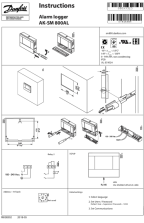
- [1 AK-SM 800AL Alarm
Logger](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

AK-SM 800AL Alarm Logger

	sm800.danfoss.com     089 $-10^{\circ} < t_{amb} < 55^{\circ}C$ $14^{\circ}F < t_{amb} < 130^{\circ}F$ 0 - 95% RH, non condensing IP20 UL: E31024
 	
  	
Relay 2 	TCP/IP  RJ 45 LAN Use shielded ethernet cable
Address = 9 (fixed) 	Initial settings 1. Select language 2. Set Users / Password Default: User = Supervisor / Password = 12345 3. Set Communications



Documents / Resources

	Danfoss AK-SM 800AL Alarm Logger [pdf] Installation Guide AK-SM 800AL Alarm Logger, AK-SM 800AL, Alarm Logger, Logger
---	--

References

- [AK-SM 800 | Download ADAP-KOOL® software free | Danfoss](#)
- [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.