

Danfoss AK-UI55 Info Case Room Controller Installation Guide

Home » Danfoss » Danfoss AK-UI55 Info Case Room Controller Installation Guide 🖫

Danfoss AK-UI55 Info Case Room Controller
Installation Guide



Installation Guide

 
AK-UI55 Info

Contents


- 1 Identification
- 2 Dimensions
- 3 Mounting
- **4 Connection**
- 5 AK-UI55 Info
- 6 Documents / Resources

6.1 References


Identification



Dimensions

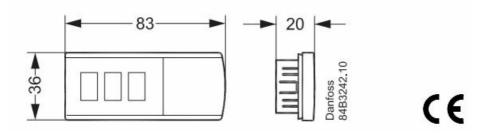


Mounting

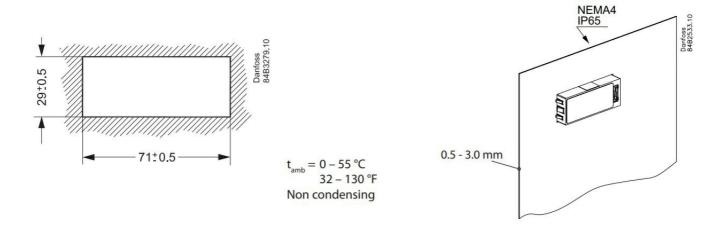

Connection



AK-UI55 Info

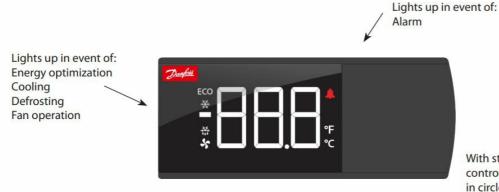

With start-up /connection to a controller, the display will "light up in circles" as it collects data from the controller.

The display can give the following messages:

-d- Defrost is in progress

Err The temperature cannot be displayed due to a sensor error

Fan Appliance cleaning has been initiated. The fans are running

OFF Appliance cleaning is activated and the appliance can be cleaned

OFF The main switch is set to Off

SEr The main switch is set to service / manual operation

CO2 Flashes: Will display in event of a refrigerant leakage alarm, but only if the refrigerant is set up for CO

© Danfoss | DCS (vt) | 2019.12 AN324531493969en-000102 | 1

Documents / Resources



<u>Danfoss AK-UI55 Info Case Room Controller</u> [pdf] Installation Guide

084R8059, 084B4078, 084B4079, AK-UI55 Info Case Room Controller, AK-UI55, Info Case Room Controller, Case Room Controller, Room Controller

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.