

Danfoss AK-XM 208C Stepper Output Module Installation Guide

[Home](#) » [Danfoss](#) » Danfoss AK-XM 208C Stepper Output Module Installation Guide 




Installation Guide
Stepper output module
Type AK-XM 208C

Contents



- [1 AK-XM 208C Stepper Output Module](#)
- [2 Documents / Resources](#)

AK-XM 208C Stepper Output Module

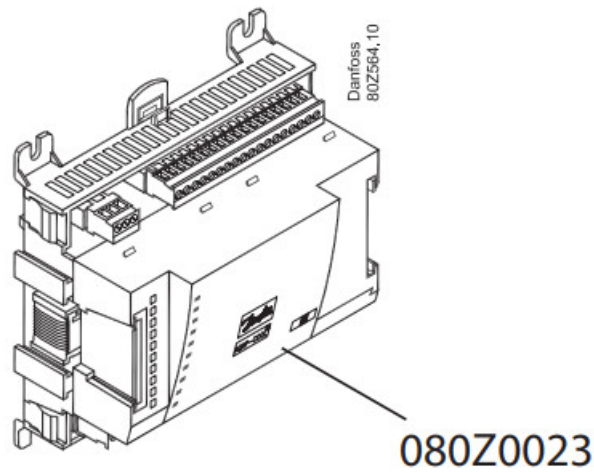

Info for Centralized (Rack) control

- AK-XM 208C opens and closes opposite to how AK-XM 208B
- Ensure AK-XM 208C has a dedicated line up (Comm module + 208C only). No other modules to be added to AK-XM 208C.

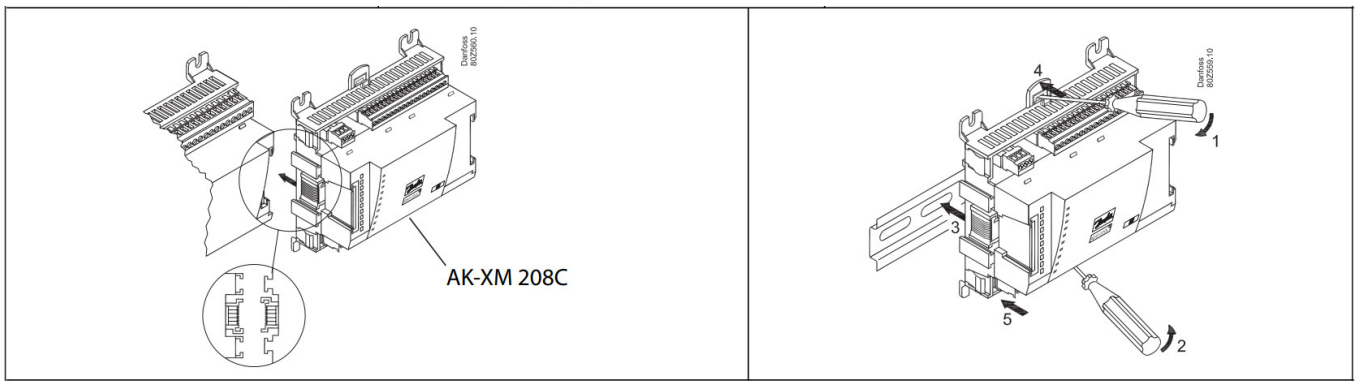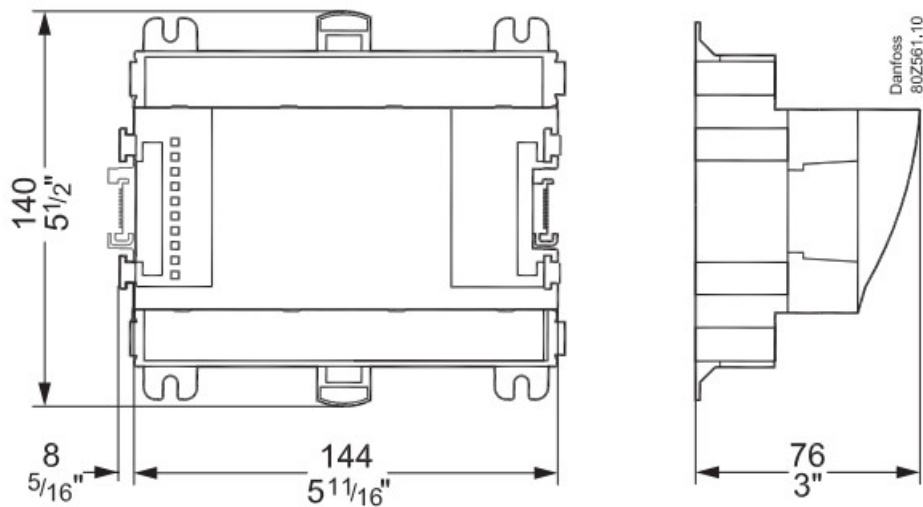

-20 °C < t_{amb} < 55 °C
 -0 °F < t_{amb} < 130 °F
 0 – 95% RH, non condensing

IP10 / VBG4

Controller supply = 5 VA

Valve supply = 7.8 VA + valvesClass II construction



4VR5

UL file: E357029

Class 2 or LPS in accordance with NEC.


For supply connections, use 16 AWG or larger wires rated for at least 90 °C (194 °F).


Use copper conductors only.



Warning

Ensure power is disconnected before adding or removing Modules

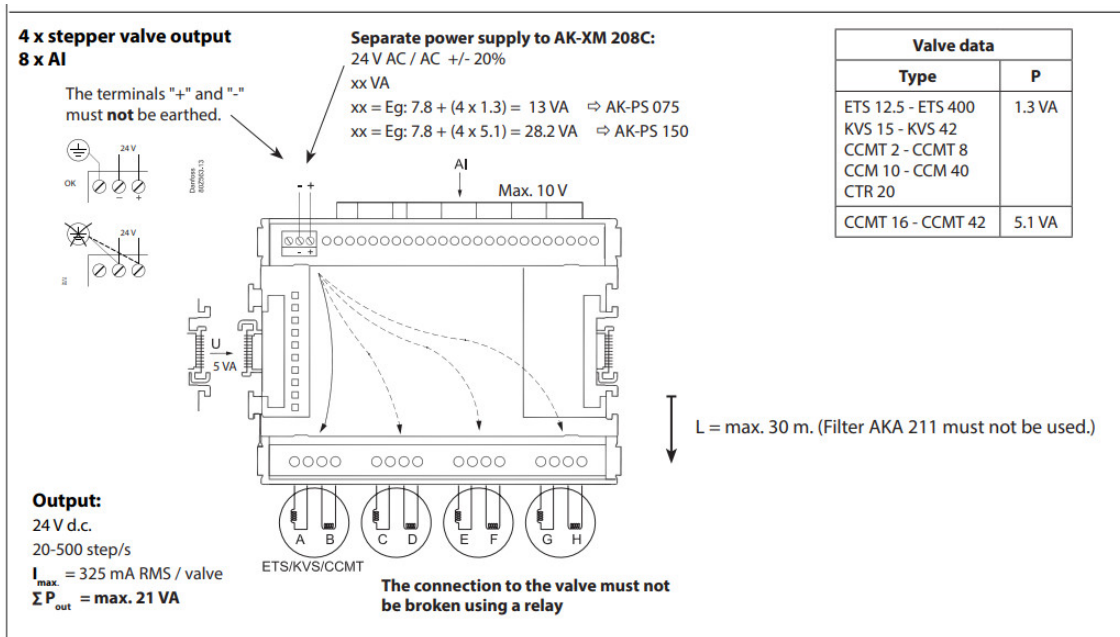

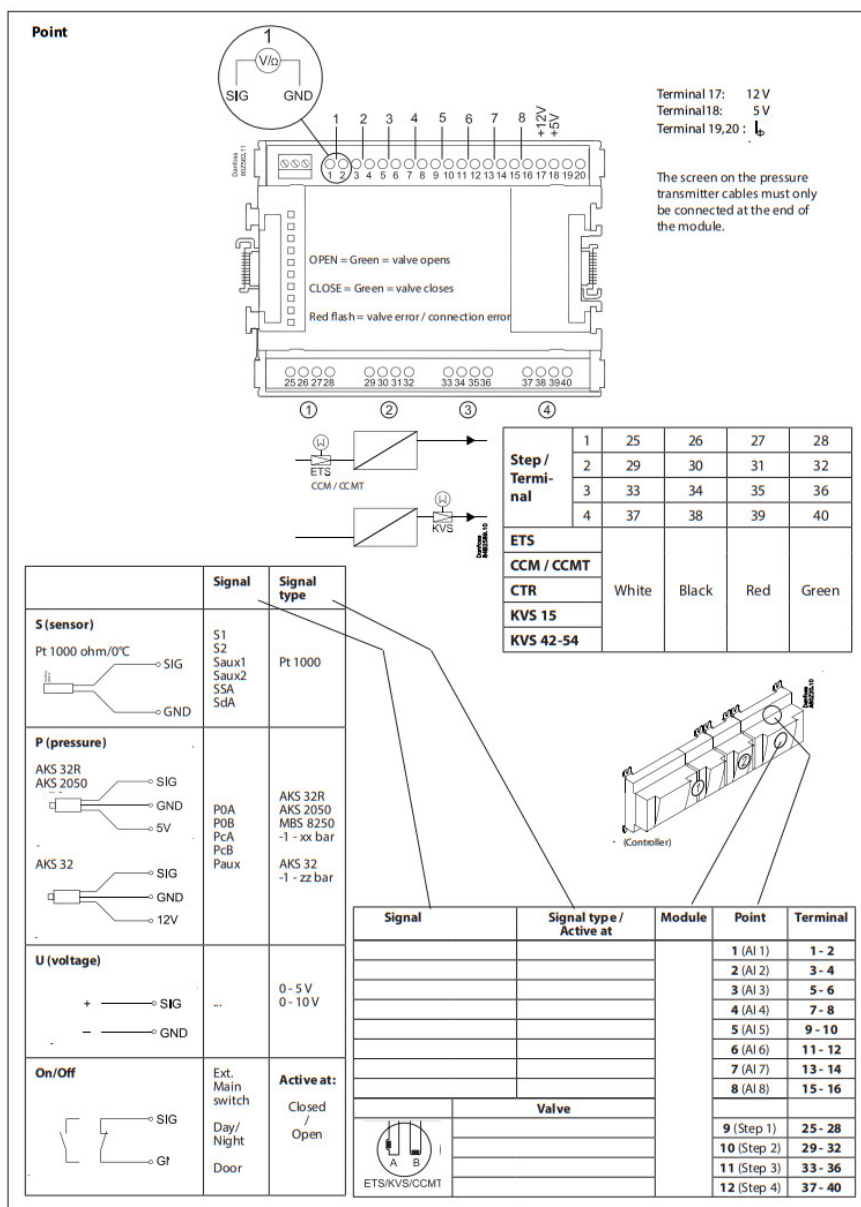

ADAP-KOOL° The Product contains electrical components And may not be d Isposed together with domestic waste. Equipment must be separate collected with Electrical and Elec-tronic waste. According to Local and cu rre m ly val id legislation.

Danfoss


AN055886442238en-000801
© Danfoss I Climate Solutions I 2023.08



080R9299



AN055886442238en-000801

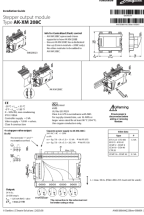	Danfoss AK-XM 208C Stepper Output Module [pdf] Installation Guide AK-XM 208C, AK-XM 208C Stepper Output Module, Stepper Output Module, Output Module, M odule
---	--