

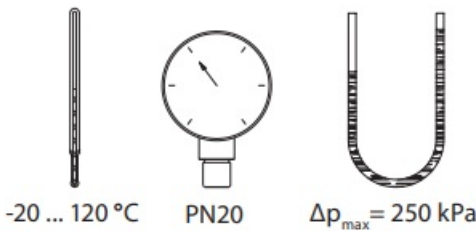


# Danfoss ASV-D DN 15-50 Automatic Balancing Valves User Guide

[Home](#) » [Danfoss](#) » Danfoss ASV-D DN 15-50 Automatic Balancing Valves User Guide 

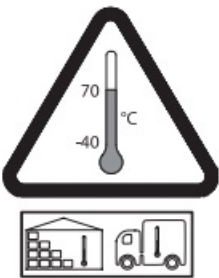




ENGINEERING TOMORROW  
Operating Guide  
ASV-D DN 15-50

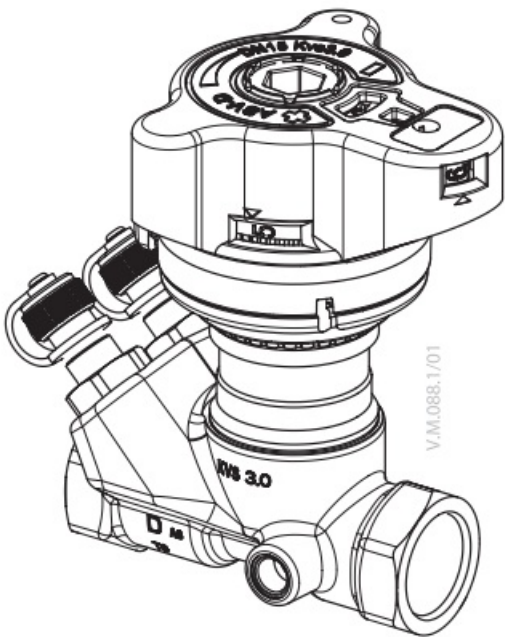

## Contents


- 1 Installation
- 2 Installation direction
- 3 Documents / Resources
- 4 Related Posts

## Installation

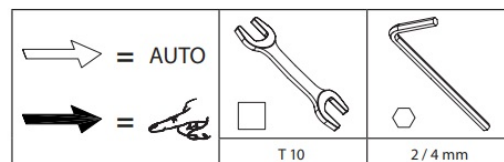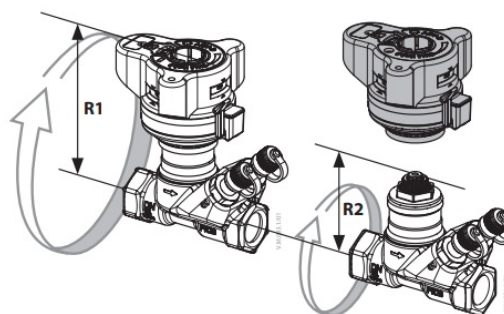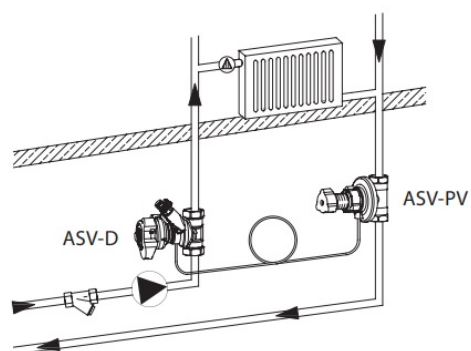


DN	R1/R2 (mm)	Int. thread
15	92/57	Rp 1/2
20	95/60	Rp 3/4
25	98/63	Rp 1
32	121/86	Rp 1 1/4
40	125/90	Rp 1 1/2
50	129/94	Rp 2

## Installation direction

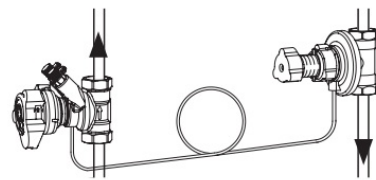


Outside control loop

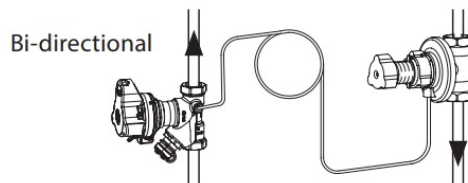




Bi-directional

Inside control loop




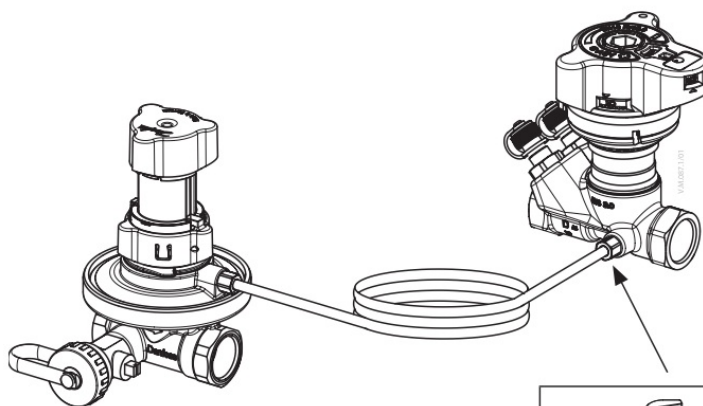



	5 - 8 Nm	
	8 mm	<input type="checkbox"/>

## Remove handle

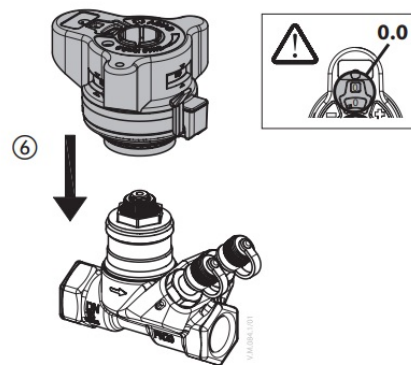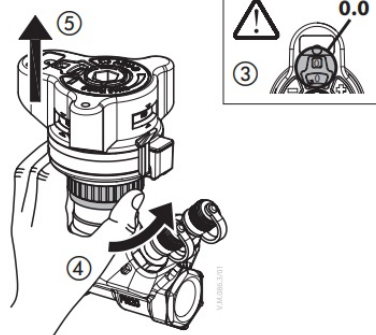
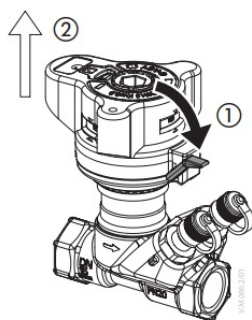


## Setting

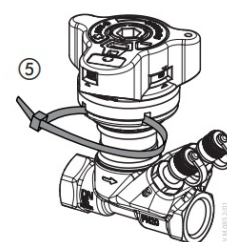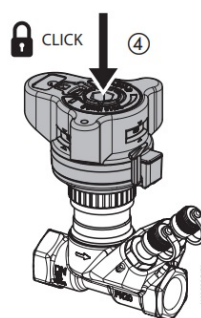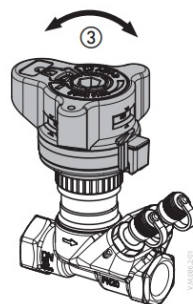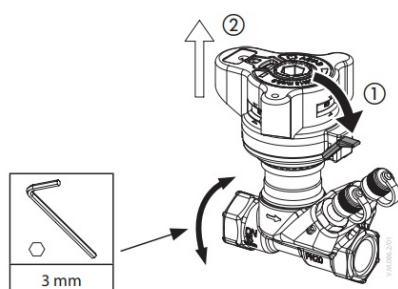

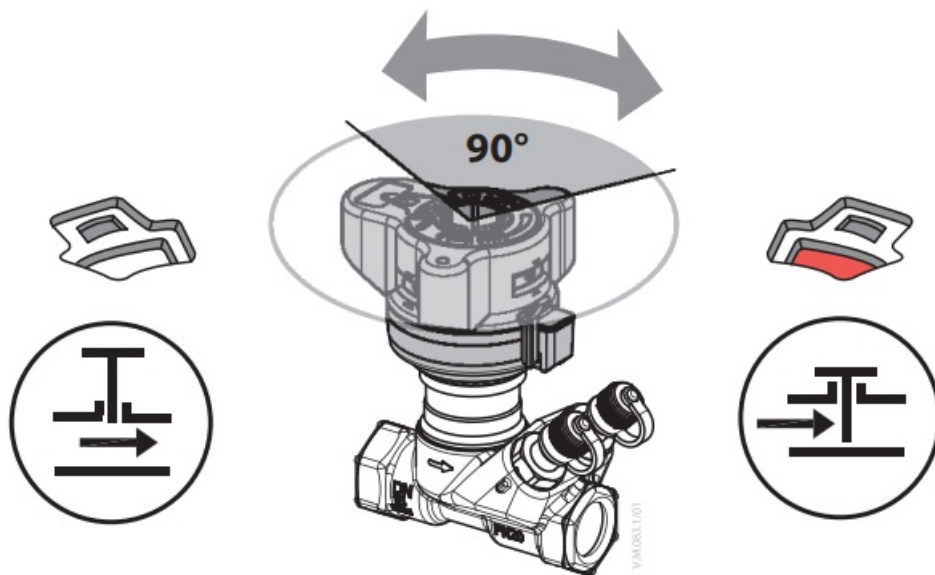

## Measuring

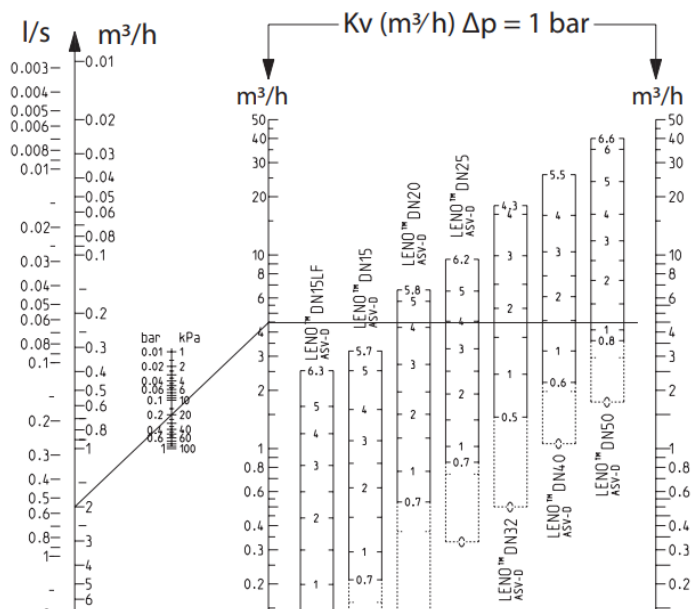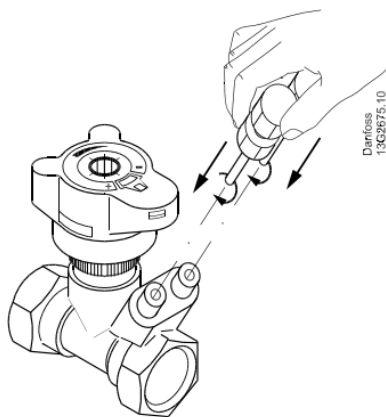

## Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.



Documents / Resources

	<p><a href="#">Danfoss ASV-D DN 15-50 Automatic Balancing Valves</a> [pdf] User Guide</p> <p>ASV-D DN 15-50 Automatic Balancing Valves, ASV-D DN 15-50, Automatic Balancing Valves, Automatic Valves, Balancing Valves, Valves</p>
	<p><a href="#">Danfoss ASV-D DN 15-50 Automatic Balancing Valves</a> [pdf] Installation Guide</p> <p>ASV-D DN 15-50 Automatic Balancing Valves, ASV-D DN 15-50, Automatic Balancing Valves, Balancing Valves, Valves</p>

Manuals+