



Danfoss Aveo RA Thermostatic Sensors Installation Guide

[Home](#) » [Danfoss](#) » Danfoss Aveo RA Thermostatic Sensors Installation Guide 




Danfoss Aveo RA Thermostatic Sensors Installation Guide










Contents


- [1 Installation](#)
- [2 Temperature Limitation](#)
- [3 Blind mark](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)


Installation

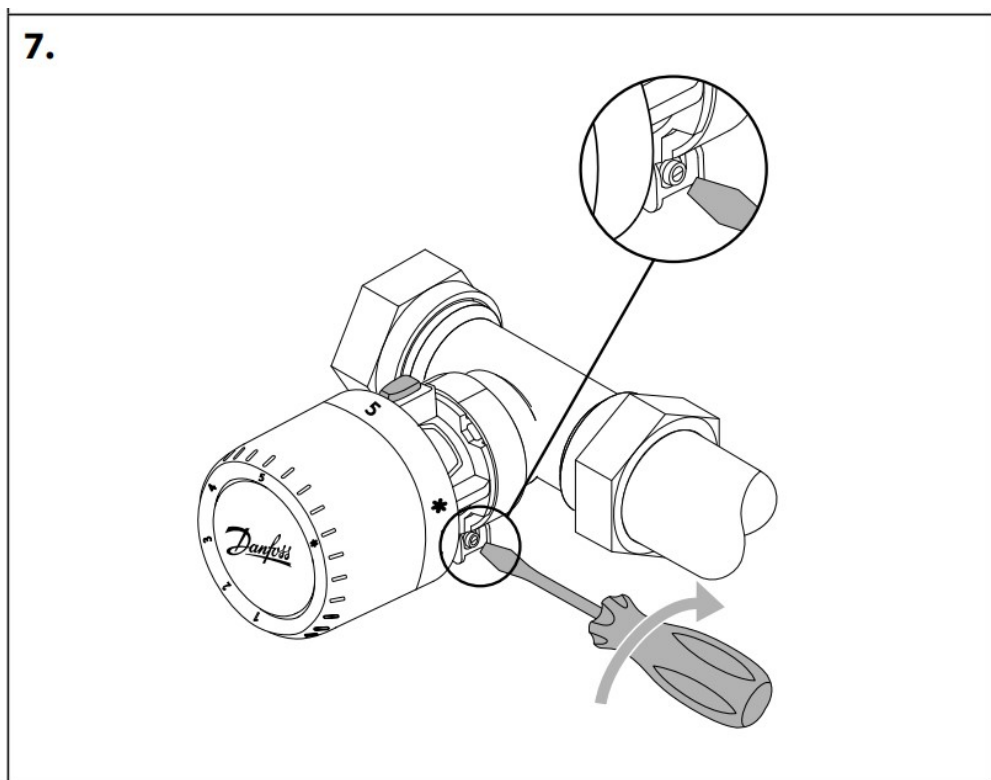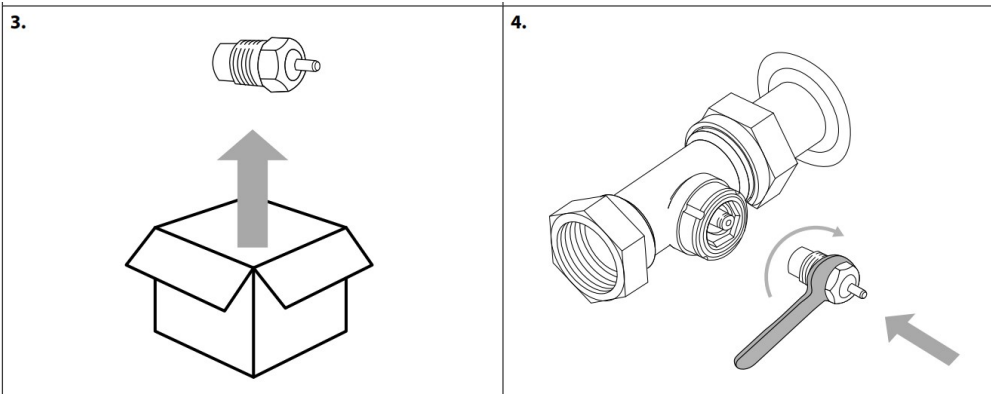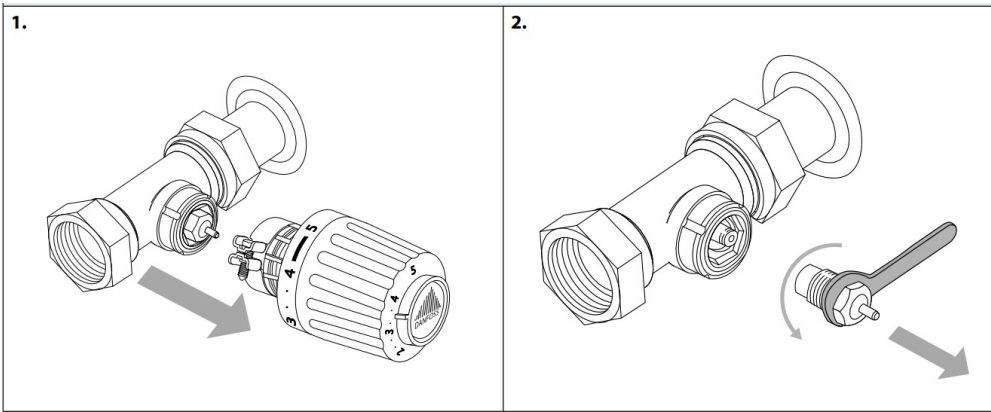


Temperature Limitation

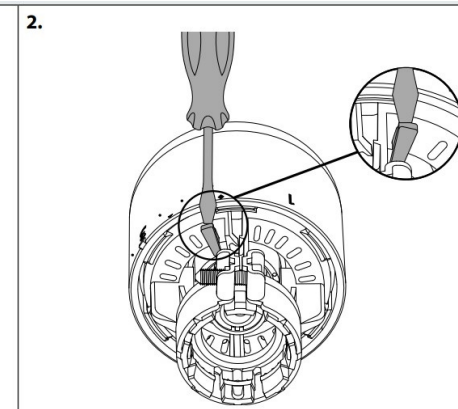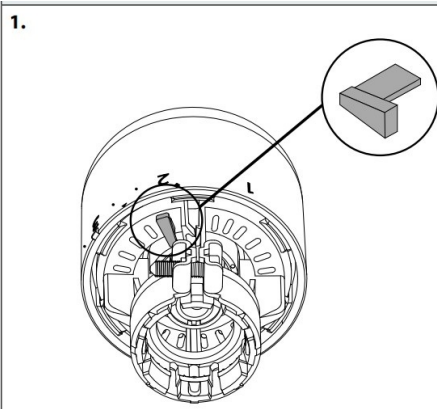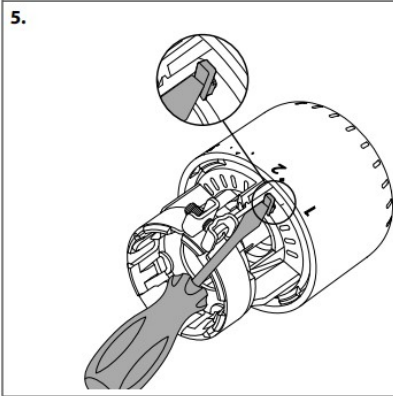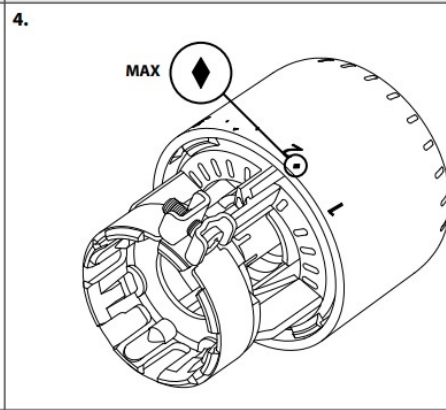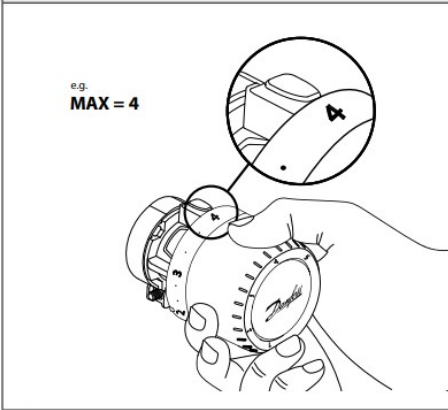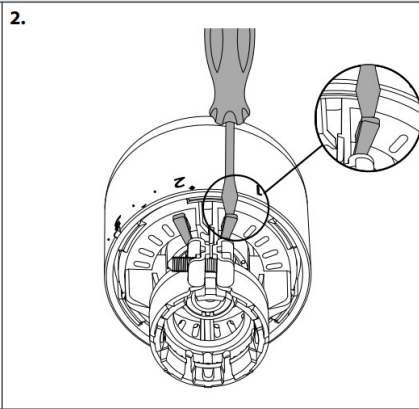
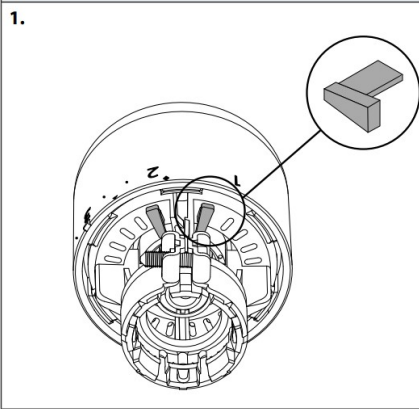


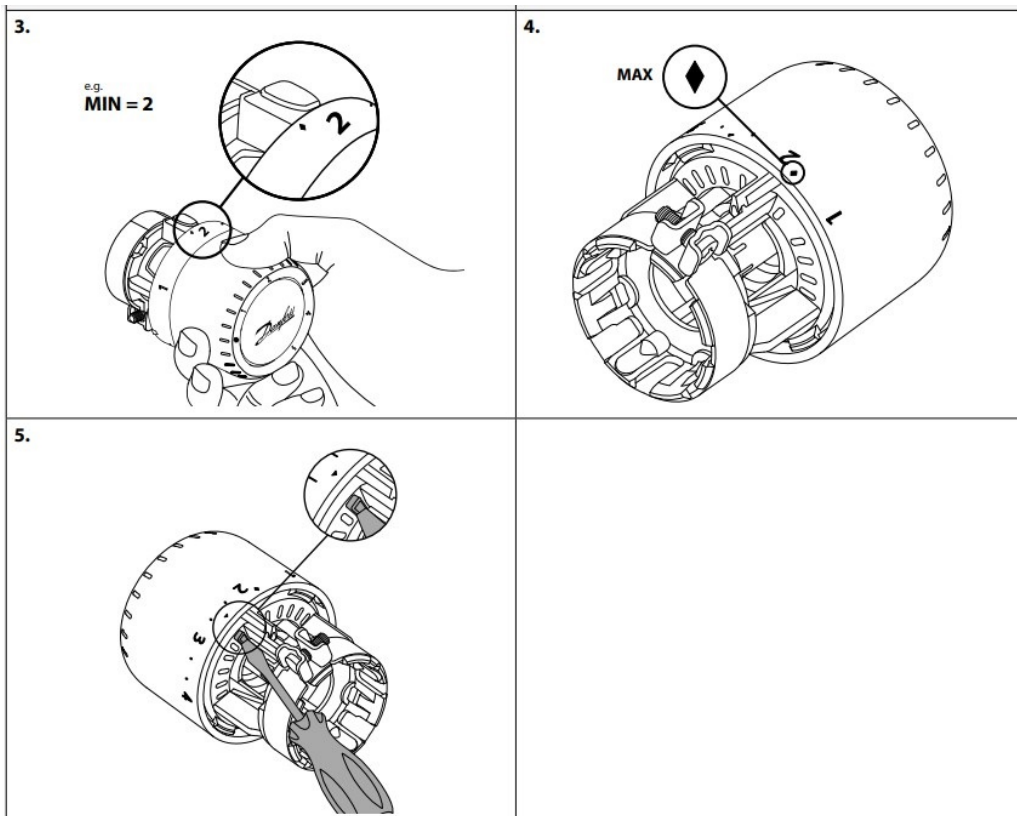


	Code no.
	013G1246

Blind mark

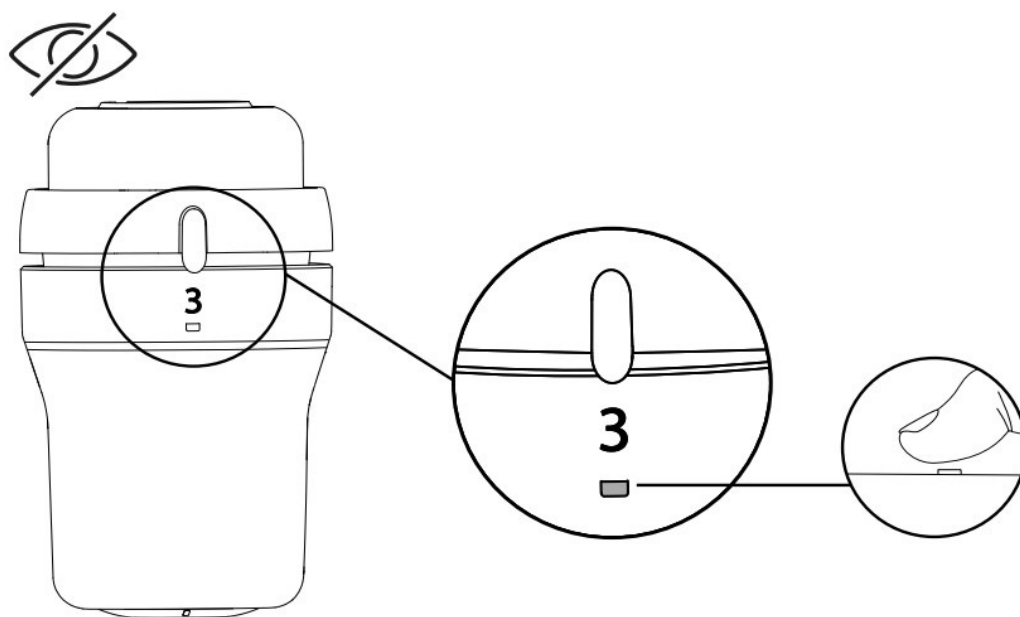

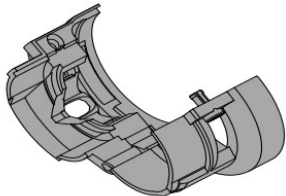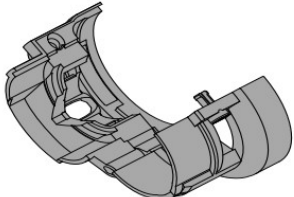	Code no
	015G4950 RA/VL
	015G4951 RA/V



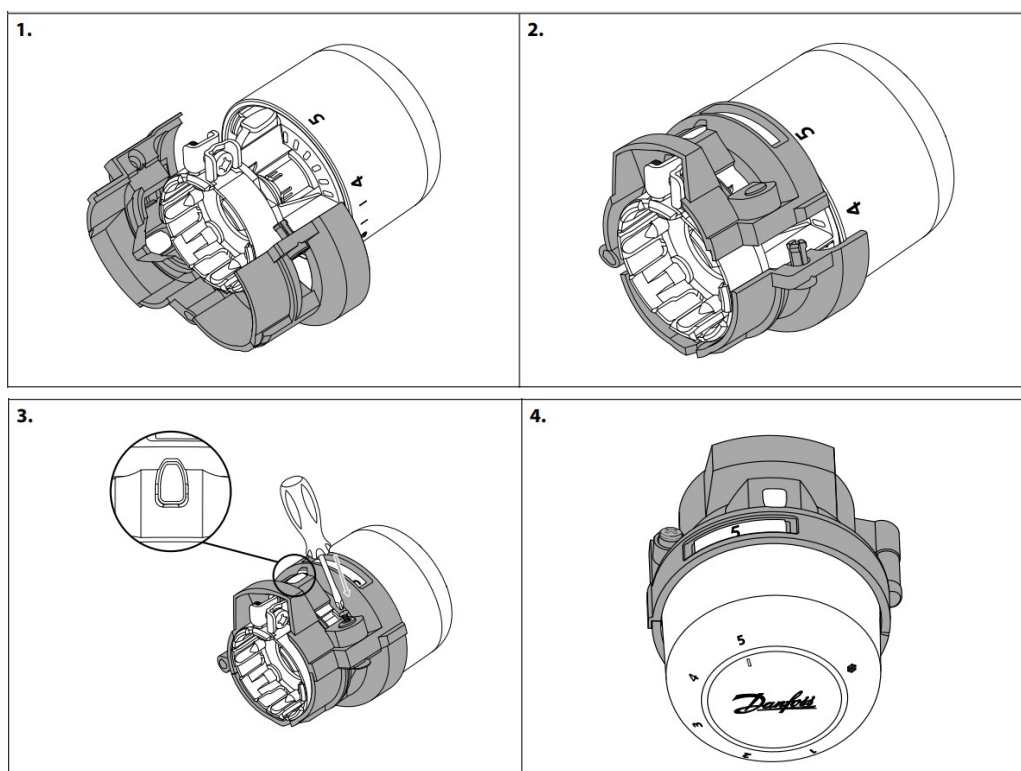


Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

Documents / Resources

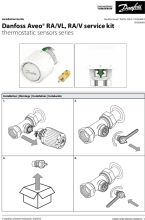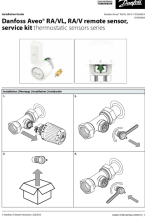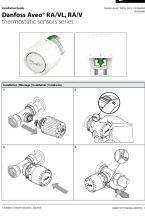 <p>Danfoss Aveo® RA/VL RAV service kit Thermostatic device series</p>	<p>Danfoss Aveo RA Thermostatic Sensors [pdf] Installation Guide Aveo RA Thermostatic Sensors, Aveo RA, Thermostatic Sensors, Sensors</p>
 <p>Danfoss Aveo® RA/VL RAV remote sensor, service kit Thermostatic device series</p>	<p>Danfoss Aveo RA Thermostatic Sensors [pdf] Installation Guide Aveo RA Thermostatic Sensors, Aveo RA, Thermostatic Sensors, Sensors</p>
 <p>Danfoss Aveo® RA/VL RAV Thermostatic device series</p>	<p>Danfoss Aveo RA Thermostatic Sensors [pdf] Installation Guide Aveo RA Thermostatic Sensors, Aveo RA, Thermostatic Sensors, Sensors</p>