

Danfoss
BD50F Electronic
Unit Compressors



Danfoss BD50F Electronic Unit Compressors Instructions

[Home](#) » [Danfoss](#) » Danfoss BD50F Electronic Unit Compressors Instructions 

Contents

- 1 [Danfoss BD50F Electronic Unit Compressors](#)
- 2 [Optional battery protection settings DC](#)
- 3 [Wire dimensions DC](#)
- 4 [Description](#)
- 5 [VDE/UL Approvals for BD Compressors](#)
- 6 [Product Specifications](#)
- 7 [Frequently Asked Questions](#)
- 8 [Documents / Resources](#)
 - 8.1 [References](#)


Danfoss

Danfoss BD50F Electronic Unit Compressors



Optional battery protection settings DC

Fig. 1

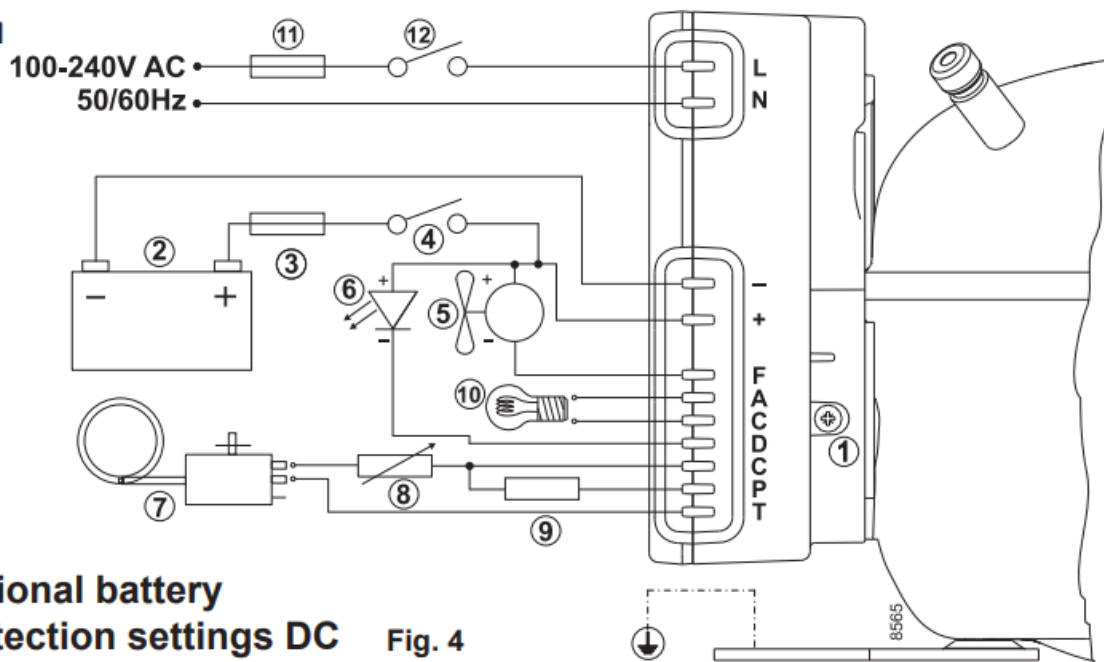

Optional battery protection settings DC

Fig. 4

Resistor (9) kΩ	12V cut-out V	12V cut-in V	12V max. Volt age	24V cut-out V	24V cut-in V	24V max. Volt age
0	9.6	10.9	17.0	21.3	22.7	31.5
1.6	9.7	11.0	17.0	21.5	22.9	31.5
2.4	9.9	11.1	17.0	21.8	23.2	31.5
3.6	10.0	11.3	17.0	22.0	23.4	31.5
4.7	10.1	11.4	17.0	22.3	23.7	31.5
6.2	10.2	11.5	17.0	22.5	23.9	31.5
8.2	10.4	11.7	17.0	22.8	24.2	31.5
11	10.5	11.8	17.0	23.0	24.5	31.5
14	10.6	11.9	17.0	23.3	24.7	31.5
18	10.8	12.0	17.0	23.6	25.0	31.5
24	10.9	12.2	17.0	23.8	25.2	31.5
33	11.0	12.3	17.0	24.1	25.5	31.5
47	11.1	12.4	17.0	24.3	25.7	31.5
82	11.3	12.5	17.0	24.6	26.0	31.5
220	9.6	10.9				31.5

Wire dimensions DC

Size		Max l ength * 12V DC opera tion		Max l ength * 24V DC opera tion		
A W G	C r o s s s e c t i o n m m 2					
1 2	2. 5	8	2. 5	1 6	5	
1 2	4	1 3	4	2 6	8	
1 0	6	2 0	6	3 9	1 2	
8	1 0	3 3	1 0	6 6	2 0	

- Length between battery and electronic unit

Wire dimensions AC

Cross section min. 0.75 mm² or AWG 18

Standard battery protection settings DC

12V cut-out V	12V cut-in V	24V cut-out V	24V cut – in V
10.4	11.7	22.8	24.2

Compressor speed

Electronic unit	Resistor (8) Ω (calculated)	Motor speed rpm	Contr.circ. current mA
	0	2,000	5
	277	2,500	4
	692	3,000	3
	1523	3,500	2

Description

The electronic unit is a multi-voltage device. It can be used in both 12V/24V DC and 100- 240V AC 50/60Hz power supply systems. Max.The voltage is 17V DC for a 12V DC system and 31.5V DC for a 24V DC power supply system. Max. voltage is 265V AC and min. 85V AC for an AC power supply system. Max. The ambient temperature is 55°C. The electronic unit has a built-in thermal protection that is actuated and stops the compressor operation if the electronic unit temperature becomes too high (100°C / 212°F on the PCB). Power consumption is limited to 100W. See datasheet BD50F for details.

Installation (Fig. 1)

Connect the terminal plug from the electronic unit to the compressor terminal. Mount the electronic unit on the compressor by snapping the cover over the screw head (1).

Power supply (Fig. 1)

DC: The electronic unit must always be connected directly to the battery poles (2). Connect the plus to + and the minus to -, otherwise ,the electronic unit will not work. The electronic unit is protected against reverse battery connection. For protection of the installation, a fuse (3) must be mounted in the + cable as close to the battery as possible. It is recommended to use 15A fuses for 12V and 7.5A fuses for 24V circuits. If a main switch (4) is used, it should be rated to a current of min. 20A. The wire dimensions in Fig. 2 must be observed. Avoid extra junctions in the power supply system to prevent voltage drop from affecting the battery protection setting.

AC: The wires must be connected to the terminal marked L and N on the electronic unit. Nominal voltages from 100 to 240 VAC 50/60Hz. Upper safety cut-out limit = 270V AC and lower limit 80V AC. A 4A fuse (11) must be mounted in the live (L) cable to protect the installation. If a main switch (12) is used, it should be rated to a current of min. 6A. The wire dimensions must be min. 0.75 mm² or AWG 18.

NB: Earth connection can be used if required.

General: Both the AC and the DC power supply can be connected to the electronic unit at the same time. In this case, AC will be preferred power supply source. If the AC power supply is disconnected or drop below 85V AC on a 12V DC supplysystem, a time delay of 1 min. will be activated before the compressor continues on DC power supply. If AC power supply is re-established there will be no delay in compressor operation.

Battery protection (Fig. 1)

The compressor stops and restarts again according to the designated voltage limits measured on the + and – terminals of the electronic unit. The standard settings for 12V and 24V power supply systems appear from Fig. 3. Other settings are optional if a connection which includes a resistor (9) is established between terminals C and P. See manual.

Thermostat (Fig. 1)

The thermostat (7) is connected between the terminals C and T. Without any resistor in the control circuit, the compressor will run with a fixed speed of 2,000 rpm when the thermostat is switched on. Other fixed compressor speeds in the range between 2,000 and 3,500 rpm can be obtained when a resistor (8) is installed to adjust the current (mA) of the control circuit. Resistor values for various motor speeds appear from Fig. 5.

Fan (optional, Fig. 1)

A fan (5) can be connected between the terminals + and F. Connect the plus to + and the minus to F. Since the output voltage between the terminals + and F is always regulated to 12V, a 12V fan must be used for both 12V and 24V power supply systems. The fan output can supply a continuous current of 0.5Aavg. A higher current draw is allowed for 2 seconds during start.

Lamp (optional, Fig. 1)

A 12V DC 5 Watt lamp (10) can be connected between the terminals A and C. The output voltage between the terminals A and C is always regulated to 12V DC. A 12V DC lamp must be used for both 12V and 24V power supply systems. The lamp output can supply a continuous current of 0.5Aavg.

LED (optional, Fig. 1)

A 10mA light emitting diode (LED) (6) can be connected between the terminals + and D. If the electronic unit records an operational error, the diode will flash a number of times. The number of flashes depends on what kind of operational error was recorded. Each flash will last 1/4 second. After the actual number of flashes, there will be a delay with no flashes, so that the sequence for each error recording is repeated every 4 seconds.

Number of flashes	Error type
5	Thermal cut-out of electronic unit (If the refrigeration system has been too heavily loaded or if the ambient temperature is high, the electronic unit will run too hot).
4	Minimum motor speed error (If the refrigeration system is too heavily loaded, the motor cannot maintain minimum speed 1,850 rpm).
3	Motor start error (The rotor is blocked or the differential pressure in the refrigeration system is too high (>5 bar)).
2	Fan over-current cut-out (The fan loads the electronic unit with more than 1Apeak).
1	Battery protection cut-out (The voltage is outside the cut-out setting).

VDE/UL Approvals for BD Compressors**Approved Compressor – Electronic Unit Combinations**

Compressors		Electronic nits					
		<i>tandard</i>	<i>E</i>	<i>i h start</i>	<i>i h s eed</i>	<i>AE</i>	<i>AE E</i>
		101N0210	101N0220	101N0230	101N0290	101N0300	101N0320
D35F mm	101Z0 200	L	L			L	
D35F inch	101Z0 204	L	L			L	
D35K (R60 0a)	101Z0 211						
D50F mm	101Z1 220	L	L	L		L	
D50F inch	101Z0 203	L	L	L		L	
DB0F mm	101Z0 280						
D250GH	101Z0 400						
D250GH T win	101Z0 500						
D100CN (R 290)	101Z0 401						

Compressors		Electronic nits					
		<i>olar</i>	<i>AC/DC conv erter</i>	<i>Automotive</i>	<i>Automotive</i>	<i>Telecommuni cation</i>	<i>Extended E</i>
		101N0400	101N0500	101N0600	101N0630	101N0730	101N0900
D35F mm	101Z0 200	L	VDE/ L				
D35F inch	101Z0 204	L	VDE/ L				
D35K (R60 0a)	101Z0 211						
D50F mm	101Z1 220		VDE/ L				
D50F inch	101Z0 203		VDE/ L				
D250GH (4 BV)	101Z0 402					L	

VDE/UL	= Combination possible, VDE or UL approval
	= Combination possible, but no approval
	= Combination not possible

Product Specifications

- Model: Electronic Unit for BD35/BD50F Compressors, 101N0500
- Power Input: 12/24V DC & 100-240V AC 50/60Hz

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

Frequently Asked Questions


Q: How do I know if there is an operational error?

A: The LED connected to terminals + and D will flash a specific number of times, indicating the type of error. Refer to the manual for error code details.

Q: What are the standard battery protection settings for DC operation?

A: The standard cut-out and cut-in voltages for both 12V and 24V operations are provided in the manual.

Documents / Resources

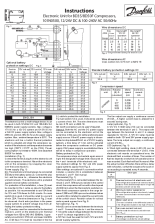	<p>Danfoss BD50F Electronic Unit Compressors [pdf] Instructions 101N0500, BD50F Electronic Unit Compressors, Electronic Unit Compressors, Unit Compressors, Compressors</p>
---	---

References

- [Compressors for refrigeration, A/C and heating | Danfoss](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.