



ECL Comfort 210
Comfort Controllers



Danfoss Comfort 301 District Heating Controller Instruction Manual

[Home](#) » [Danfoss](#) » Danfoss Comfort 301 District Heating Controller Instruction Manual 

Contents

- [1 Danfoss Comfort 301 District Heating Controller](#)
- [2 Arrow buttons](#)
- [3 Adjusting the temperature](#)
- [4 Selecting mode](#)
- [5 Checking your schedules](#)
- [6 Changing Comfort](#)
- [7 Adding an extra period](#)
- [8 Storing a new schedule on your ECL Card](#)
- [9 Frequently Asked Questions](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

 


Danfoss Comfort 301 District Heating Controller



Arrow buttons

change display (move between the lines on the ECL Card)

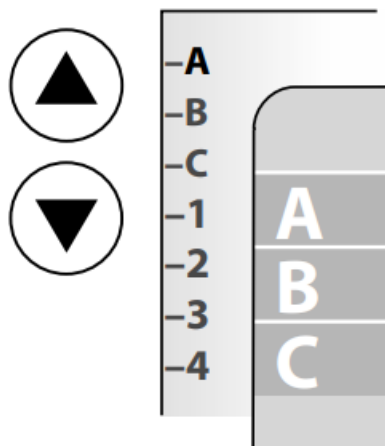

Shift button

move between items in display



Minus and plus buttons

adjust temperature or time



Mode selector

change mode of operation

 
Circuit selector

changes between heating (I) and hot water (II)




Arrow buttons

change display (move between the lines on the ECL Card)

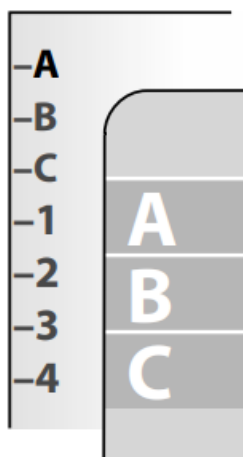

Shift button

 - move between items in display

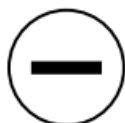

Minus and plus buttons

adjust temperature or time

 


Mode selector

- change mode of operation


Circuit selector

changes between heating (I) and hot water (II)

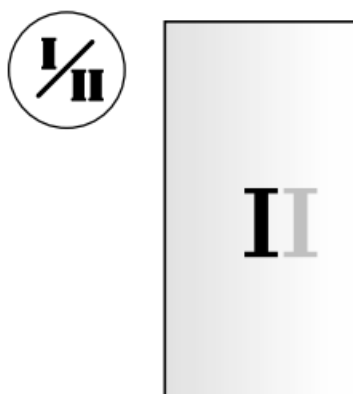

Adjusting the temperature

 of the current heating period

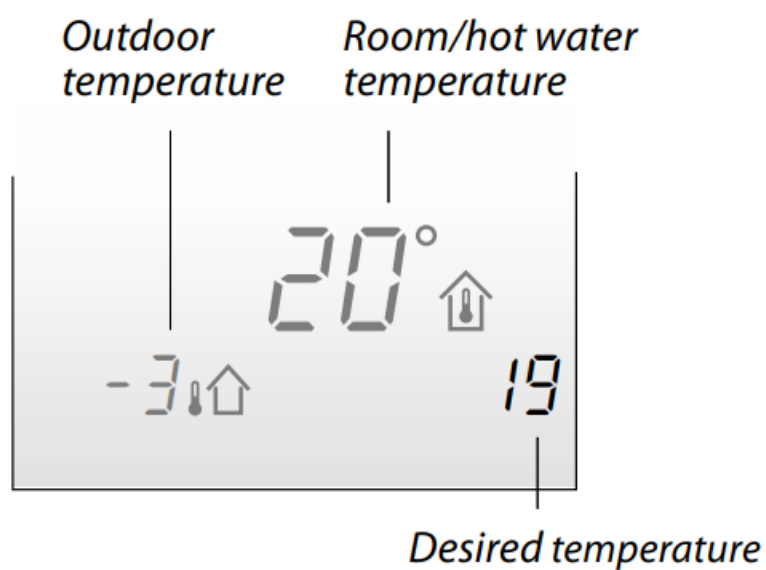

Push to adjust up or down

Adjusting the temperature

 
of another heating period



Hold down while adjusting with minus/plus buttons

Adjusting the temperature

of the current heating period

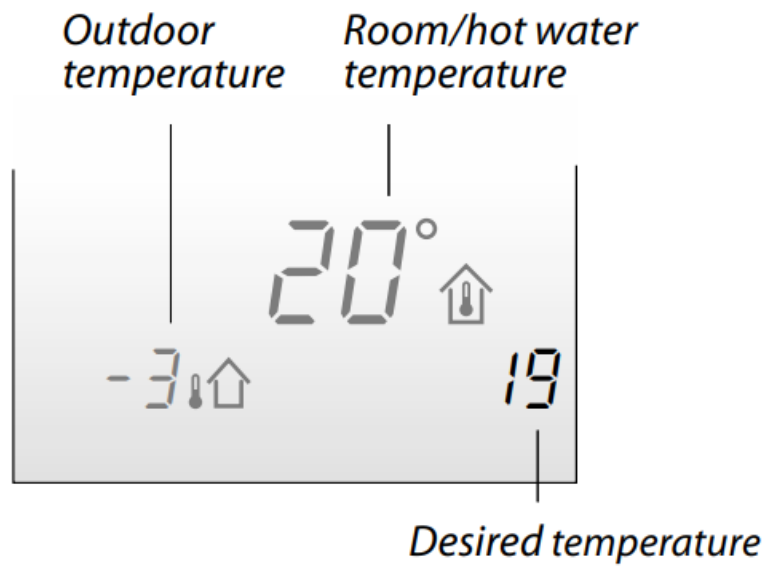

Push to adjust up or down

Adjusting the temperature of another heating period



Hold down while adjusting with minus/plus buttons

Selecting mode

Manual operation
Scheduled operation
Comfort temperature
Setback temperature
Standby



- Push to change the mode of the controller




- The arrow indicates


-  Comfort or Setback temperature when in scheduled operation

Selecting mode

Manual operation
Scheduled operation
Comfort temperature
Setback temperature
Standby

 


-  Push to change the mode of the controller

-  The arrow indicates

-  Comfort or Setback temperature when in scheduled operation

Checking your schedules

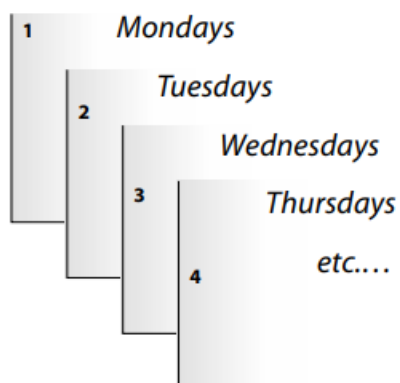


Push to move between week day, weekend or single day plans



Return to display A, B or C

 Checking your schedules

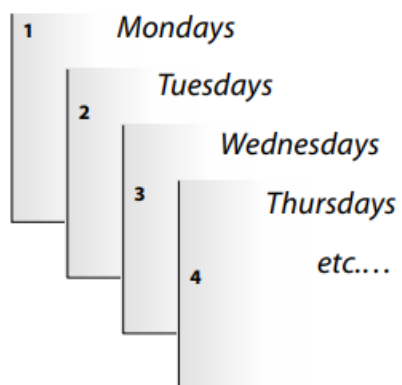


Push to move between week day, weekend or single day plans




Return to display A, B or C

Changing Comfort

 Changeover time

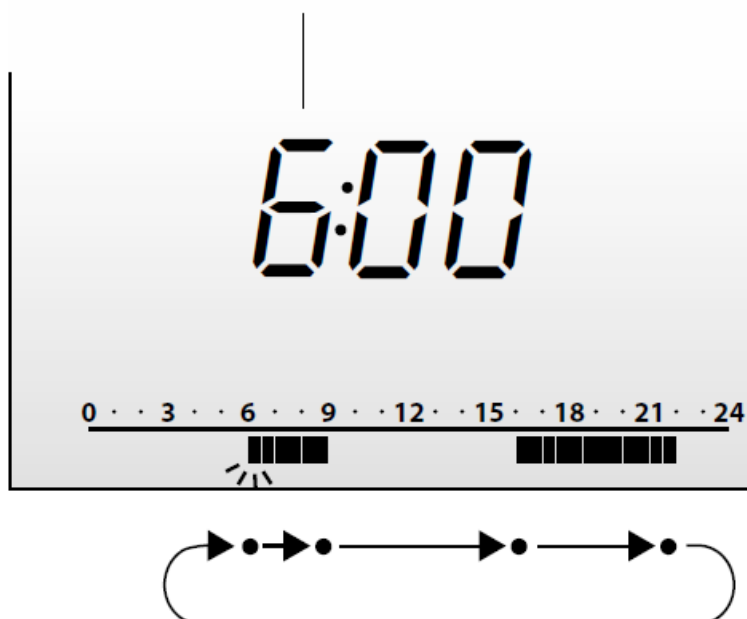


Select changeover time

 

- Adjust backward or forward

 
Removing a period



Push both at the same time for 2 seconds

Changing Comfort

 Changeover time

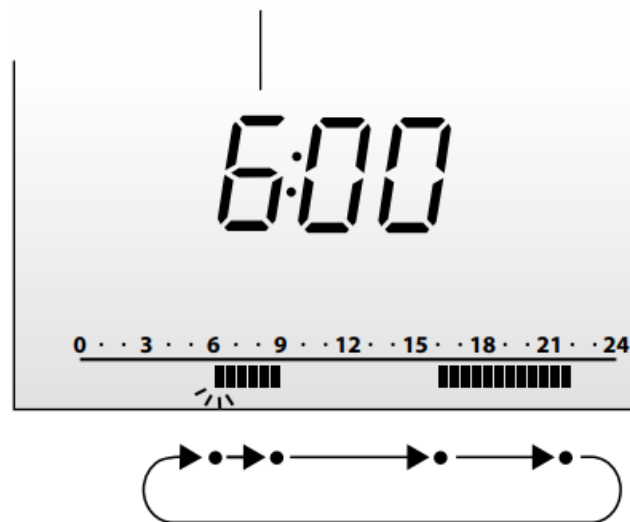

Select changeover time



Adjust backward or forward

 
Removing a period



Push both at the same time for 2 seconds

Adding an extra period

New period

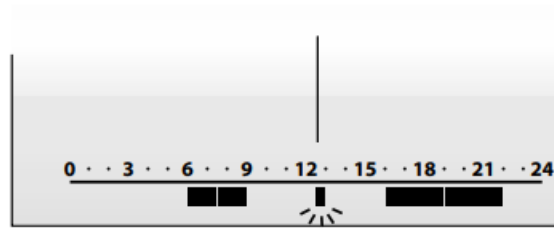

Push both at the same time

 


Adjust the first changeover time



Shift to second changeover time and adjust


Restoring factory set schedule



Push both at the same time for 2 seconds

Adding an extra period

 New period

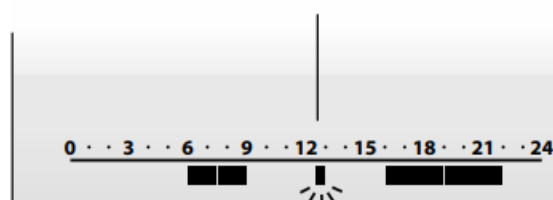

Push both at the same time

 


Adjust the first changeover time



Shift to second changeover time and adjust

Restoring factory set schedule



Push both at the same time for 2 seconds

The factory set schedule

Heating (I)

- Monday – Friday 6:00 – 8:00 16:00 – 22:00
- Saturday – Sunday 8:00 – 23:00

DHW (II)

- Monday – Friday 5:00 – 22:00
- Saturday – Sunday 6:00 – 23:00

Storing a new schedule on your

ECL Card

CPY

Push to line 9:



Update your ECL Card

The factory set schedule

Heating (I)

- Monday – Friday 6:00 – 8:00 16:00 – 22:00
- Saturday – Sunday 8:00 – 23:00

Hot water (II)

- Monday – Friday 5:00 – 22:00
- Saturday – Sunday 6:00 – 23:00

Storing a new schedule on your ECL Card



Push to line 9: CPY



Update your ECL Card

Frequently Asked Questions

 
- **Q: How do I adjust the temperature on the ECL Comfort 301?**

A: You can adjust the temperature by using the minus and plus buttons on the controller.

- **Q: Can I restore factory settings on the ECL Comfort 301?**

A: Yes, you can restore factory settings by pressing both buttons simultaneously for 2 seconds.

Documents / Resources

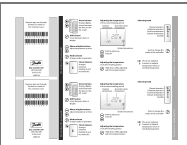

[Danfoss Comfort 301 District Heating Controller](#) [pdf] Instruction Manual
QG-L05, L66, H66, Comfort 301 District Heating Controller, Comfort 301, District Heating Controller, Heating Controller

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.