



Danfoss ECL Comfort 110 AC Drives and Controls Installation Guide

[Home](#) » [Danfoss](#) » Danfoss ECL Comfort 110 AC Drives and Controls Installation Guide 

Danfoss ECL Comfort 110 AC Drives and Controls Installation Guide




Contents

- [1 Installation Guide](#)
- [2 EU-declaration of conformity](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)


Installation Guide

ECL Comfort 110


1

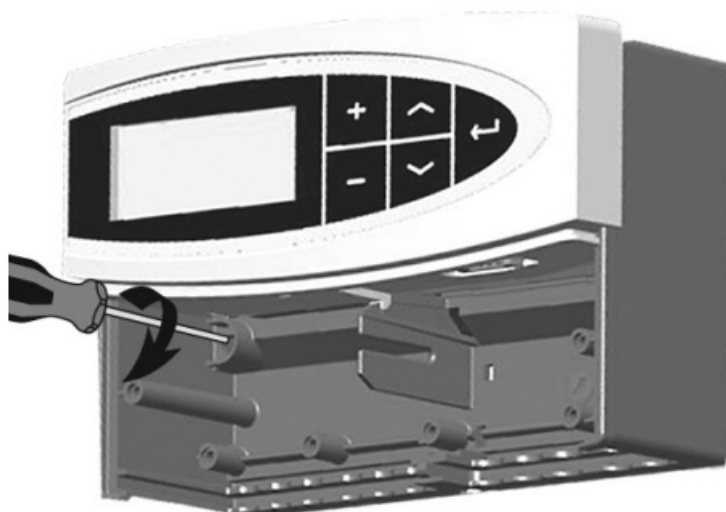


2

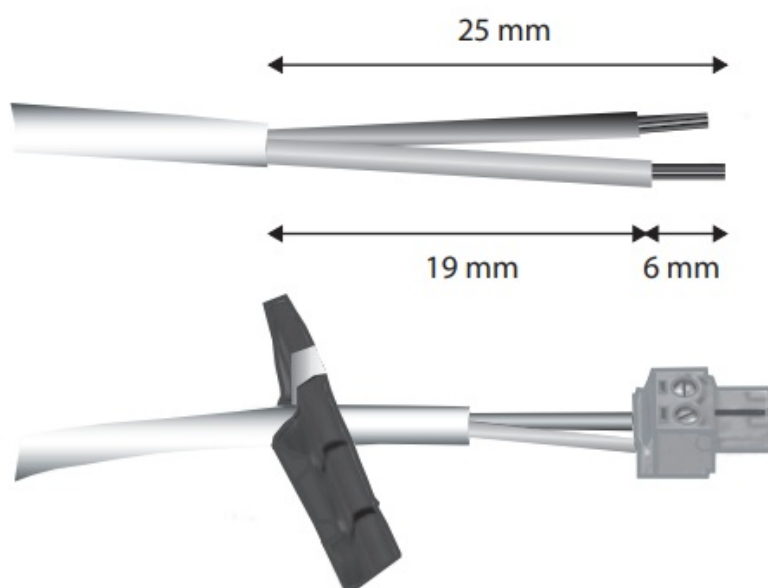

3

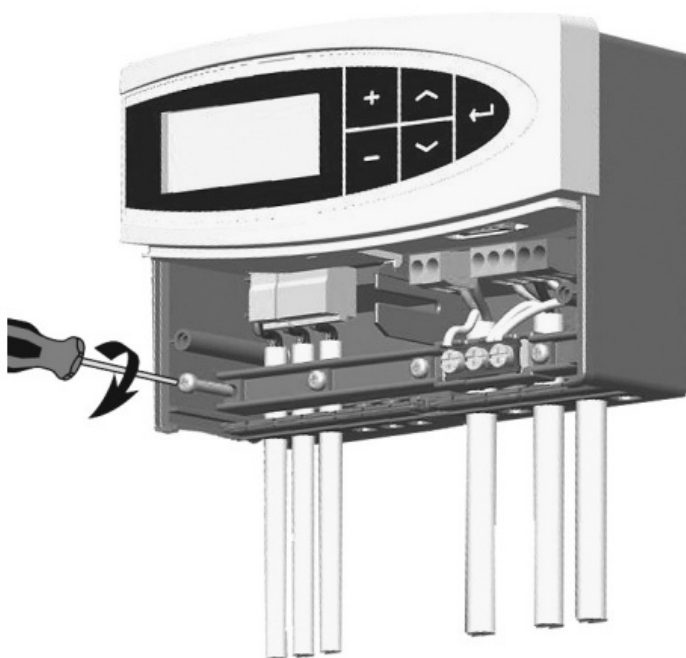


4

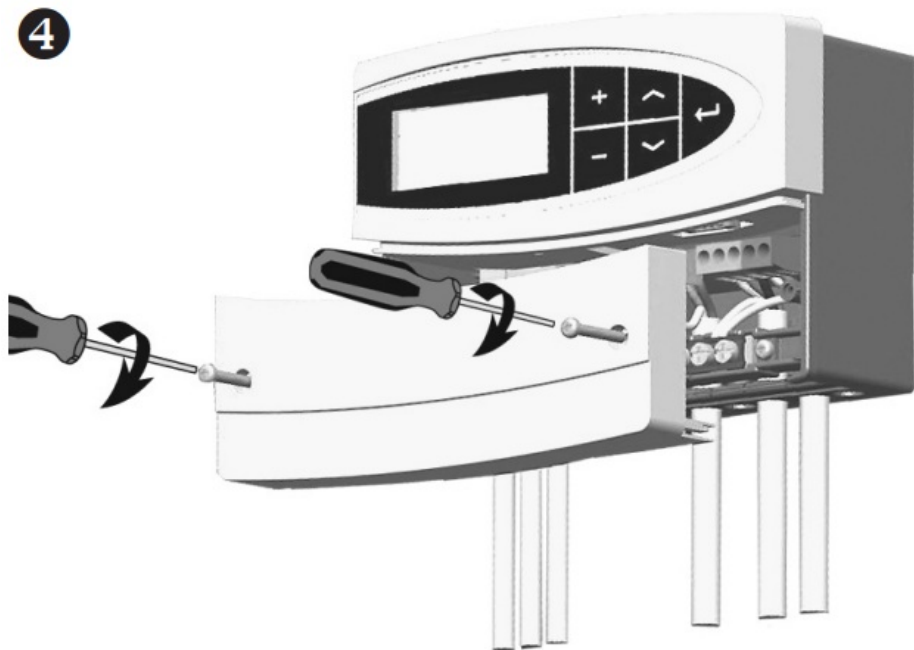


ECL Comfort 110




1

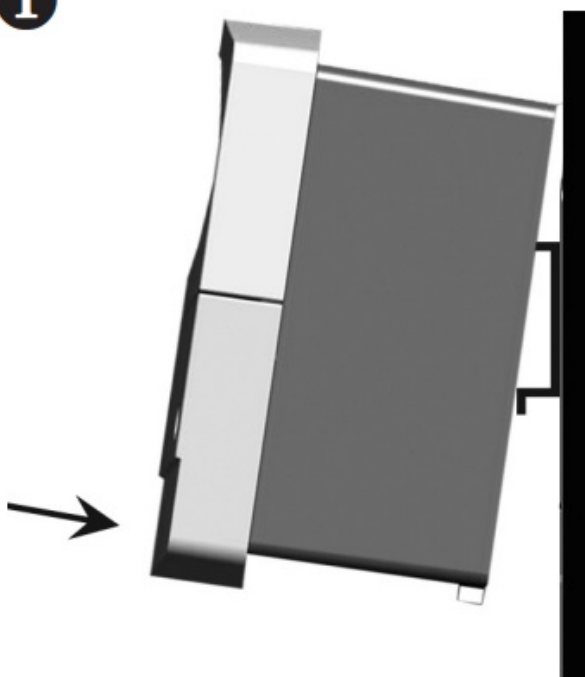


2

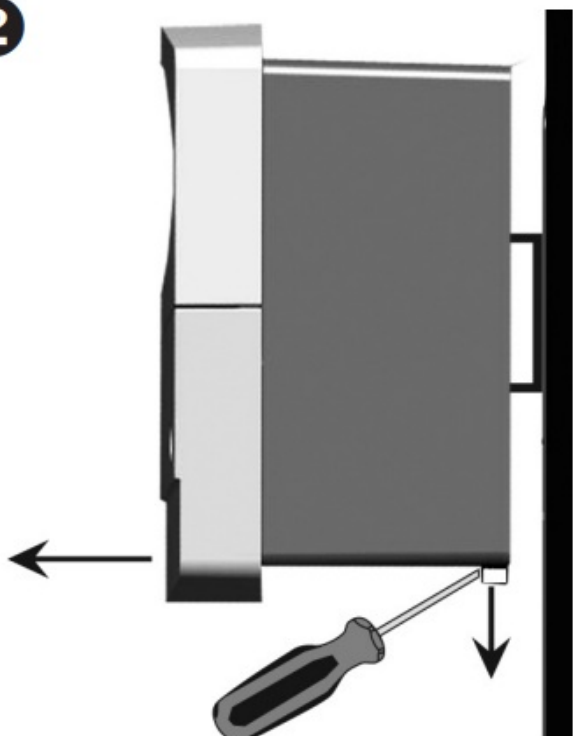


3

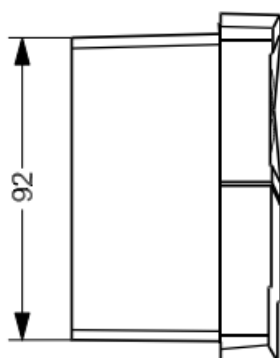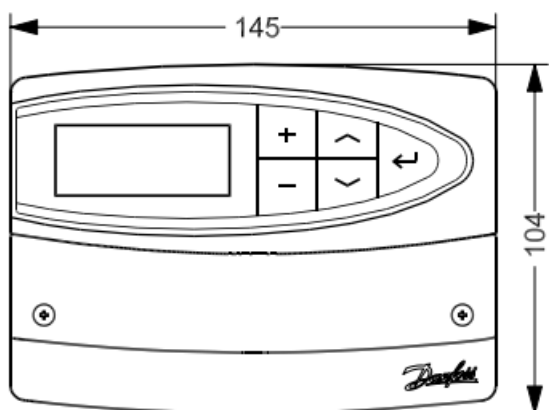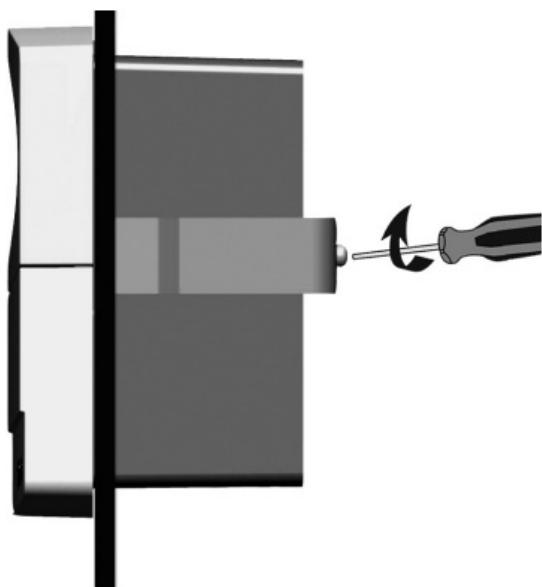

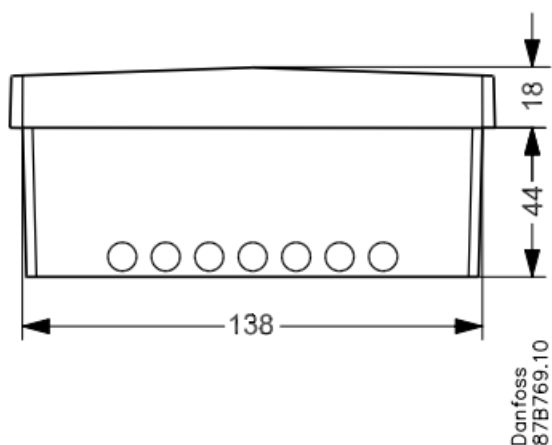


Installation Guide, ECL Comfort 110

230 V a.c.

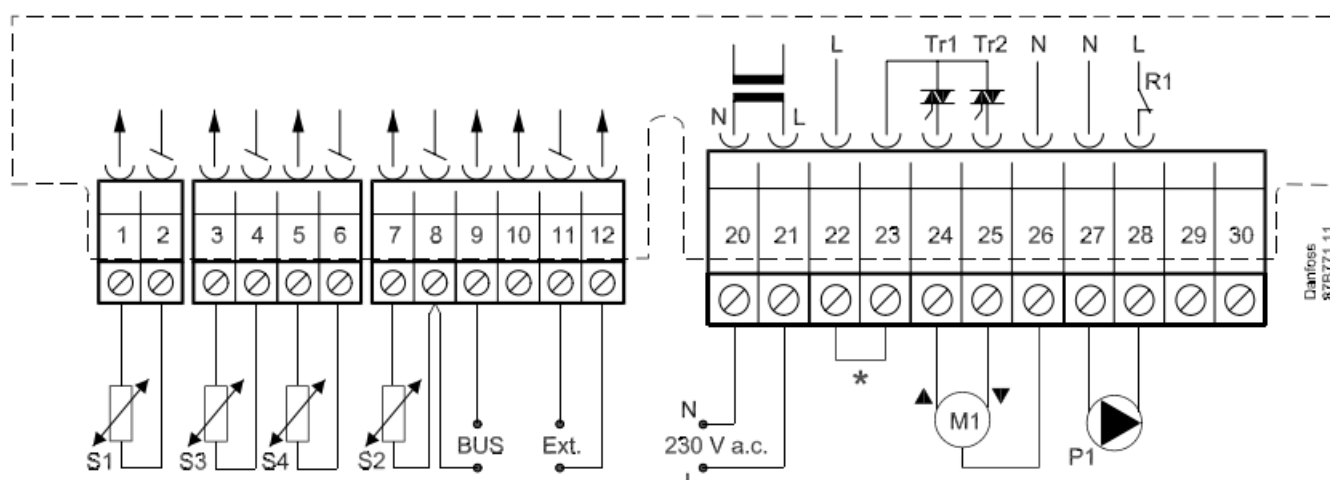

24 V a.c.

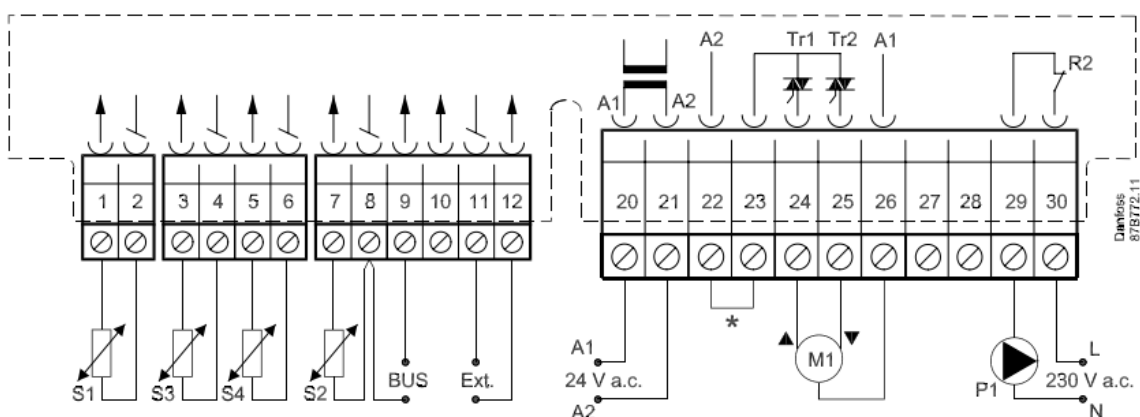

EU-declaration of conformity

Go to:

<https://store.danfoss.com/en/>

Select: ECL Comfort 110 > Documents > EU Declaration:

<https://assets.danfoss.com/approvals/188967/ID389638298581-0101.pdf> or

UK Declaration:

<https://assets.danfoss.com/approvals/188970/ID389638299582-0101.pdf>

?ECL Comfort 110: www.heating.danfoss.com


?<https://www.youtube.com/user/DanfossHeating> -> Playlists -> How-to Videos -> District Energy installation videos



BAR CODE



Documents / Resources

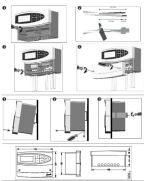	Danfoss ECL Comfort 110 AC Drives and Controls [pdf] Installation Guide ECL Comfort 110 AC Drives and Controls, ECL Comfort 110, AC Drives and Controls
---	--

References

- [Danfoss Climate Solutions for heating | Efficient solutions for superior comfort | Danfoss](#)
- [Danfoss Global Product Store | Homepage](#)