




Danfoss ECL Comfort 120 ECL Controllers Installation Guide

[Home](#) » [Danfoss](#) » Danfoss ECL Comfort 120 ECL Controllers Installation Guide 




ENGINEERING
TOMORROW
Installation Guide
ECL Comfort 120

(code no. 100B1200, 100B1600, 100B1601, 100B1603, 230 V a.c.)


Contents

- [1 ECL Comfort 120 ECL Controllers](#)
- [2 Commissioning:](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)




ECL Comfort 120 ECL Controllers

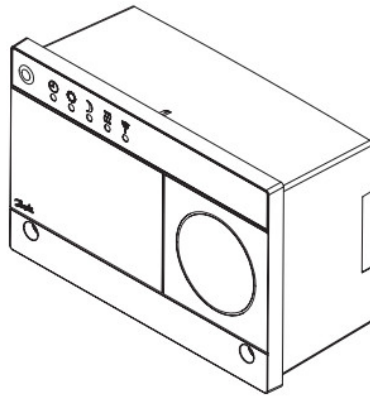




Danfoss
87H1992.10



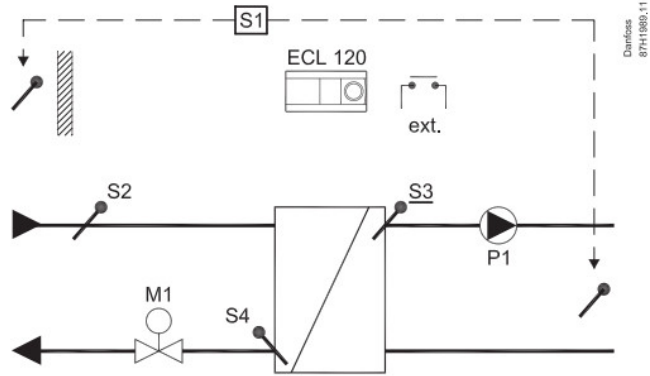


Danfoss
87H1992.11

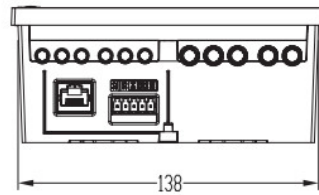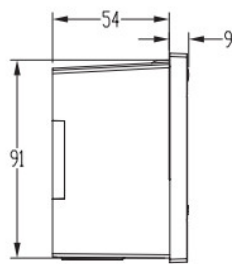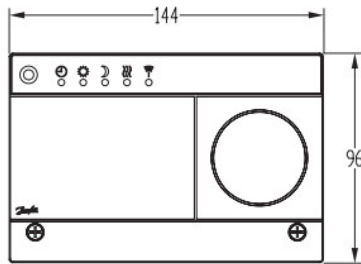



Danfoss
87H1972.10

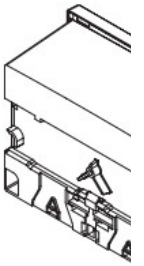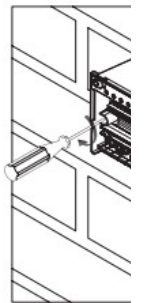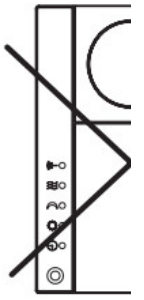

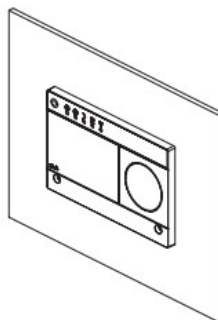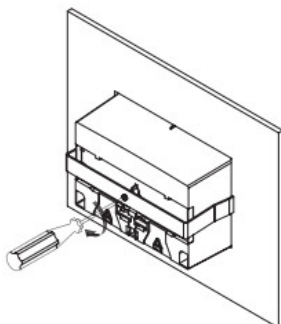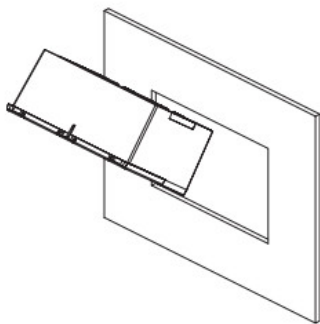


Danfoss
87H1981.10


138 x 92 mm
IEC 6155

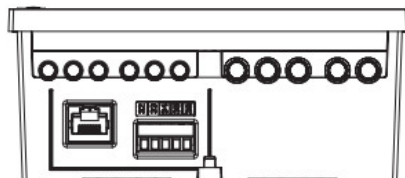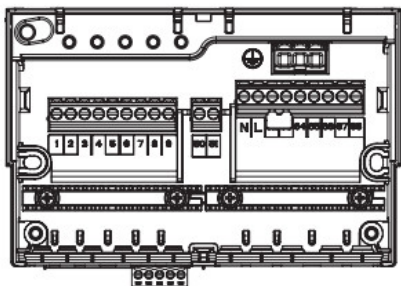



Danfoss
87H1981.10

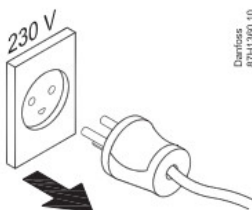

Danfoss
87H1300.10

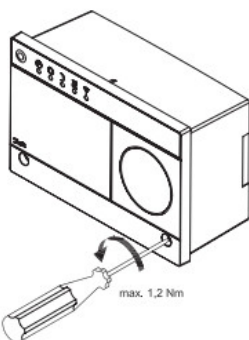



max. 1,2 Nm

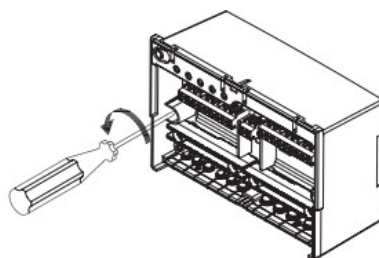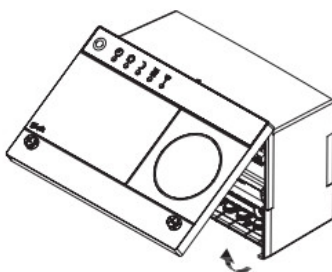


Danfoss
87H1984.10




Max. 0,6 Nm

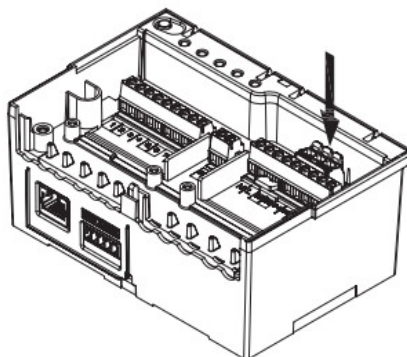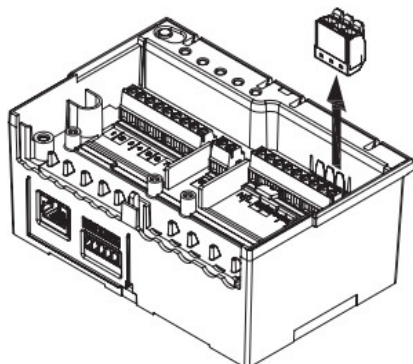

Danfoss
87H1979.10

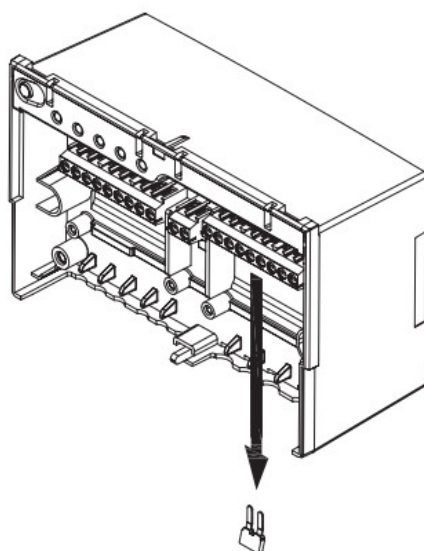

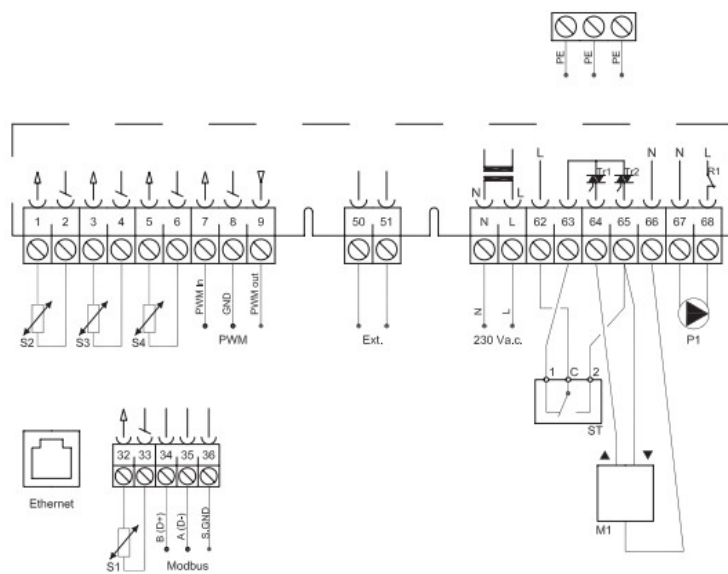


Danfoss
87H1980.10






Danfoss
87H1985.10



EC

R 	4 (2) A / 230 V a.c.
R 	
Tr 	15 VA / 230 V a.c.

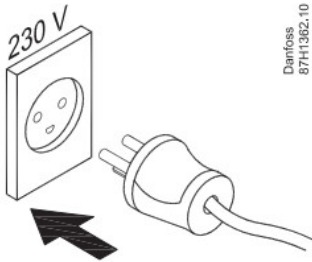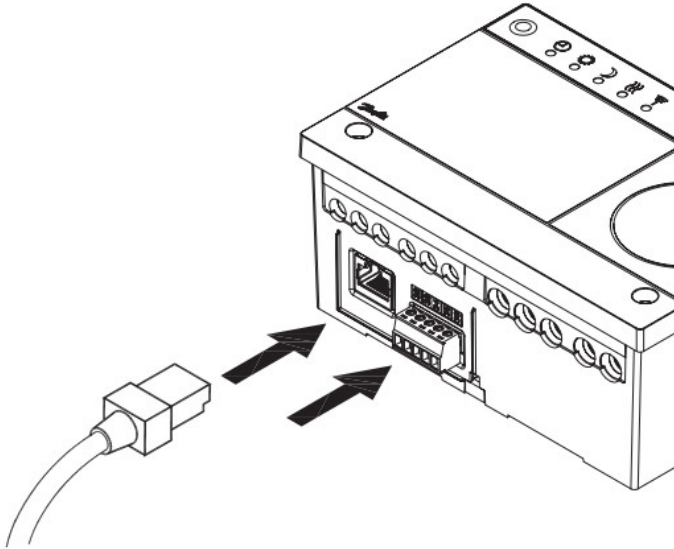
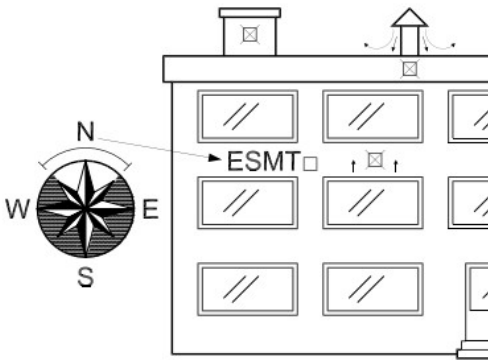


Danfoss
87H1382.10

Commissioning:




<http://scn.by/krzp87a5z2akrv>

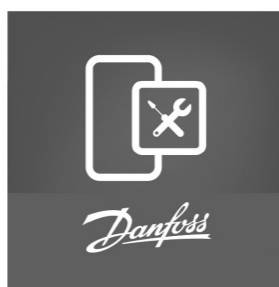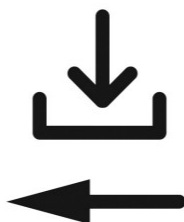

Danfoss
87H1990.10



← →
< 1,5 m

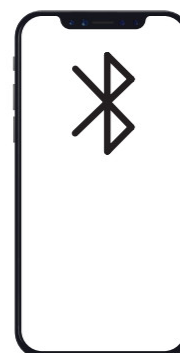

Danfoss
87H1991.10

EU-declaration of conformity

<https://store.danfoss.com/en/>

Select: ECL Comfort 120 > Documents > EU Declaration:

<https://assets.danfoss.com/approvals/192308/ID389638298581-0201.pdf> or UK Declaration:

<https://assets.danfoss.com/approvals/188970/ID389638299582-0101.pdf>



? ECL Comfort 120: www.danfoss.com

? <https://www.youtube.com/user/DanfossHeating> -> Playlists -> How-to Videos -> District Energy installation videos



* 0 8 7 H 9 3 4 5 *

DanfossA/S

Climate Solutions • danfoss.com • +45 7488 2222


Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions,

advertisements, etc. and whether made available in writing, orally, electronically, on line or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

8 | © Danfoss | DCS-SGDPT/DK | 2022.11
AN41913394756900-000201

Documents / Resources

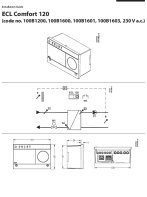	<p>Danfoss ECL Comfort 120 ECL Controllers [pdf] Installation Guide 100B1200, 100B1600, 100B1601, 100B1603, ECL Comfort 120 ECL Controllers, ECL Comfort 120, ECL Controllers, Controllers</p>
---	--

References

-  [Danfoss - Engineering Tomorrow | Danfoss](#)
-  [Danfoss Global Product Store | Homepage](#)