

# **Danfoss ECL Comfort 210 Comfort Controllers Installation Guide**

Home » Danfoss » Danfoss ECL Comfort 210 Comfort Controllers Installation Guide 🖫



- 1 Danfoss ECL Comfort 210 Comfort
- **Controllers**
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 Safety thermostat
- 5 Master / slave
- **6 ECL Comfort**
- **7 Frequently Asked Questions**
- 8 Documents / Resources
  - 8.1 References
- 9 Related Posts



**Danfoss ECL Comfort 210 Comfort Controllers** 



#### **Product Information**


#### **Specifications**

- Model: ECL Comfort 210 / 296 / 310, A267
- Power Supply: ECL Comfort 210 / 296 / 310 230 V a.c., ECL Comfort 310 24 V a.c.
- Current Rating: ECL Comfort 210 / 296 / 310 4 (2) A / 230 V a.c., 0.2 A / 230 V a.c.; ECL Comfort 310 4 (2) A / 24 V a.c., 1 A / 24 V a.c.
- Thermostat Type: Safety thermostat with 1-step closing or 2-step closing


# **Product Usage Instructions**

# **Installation Steps**

- 1. Ensure power supply matches the required voltage (230 V a.c. or 24 V a.c.).
- 2. Connect the thermostat following the specified safety thermostat closing method.
- 3. Install the ECL Comfort device in the designated location.
- 4. Refer to the wiring diagram for proper connection of L, N, and PE connections.

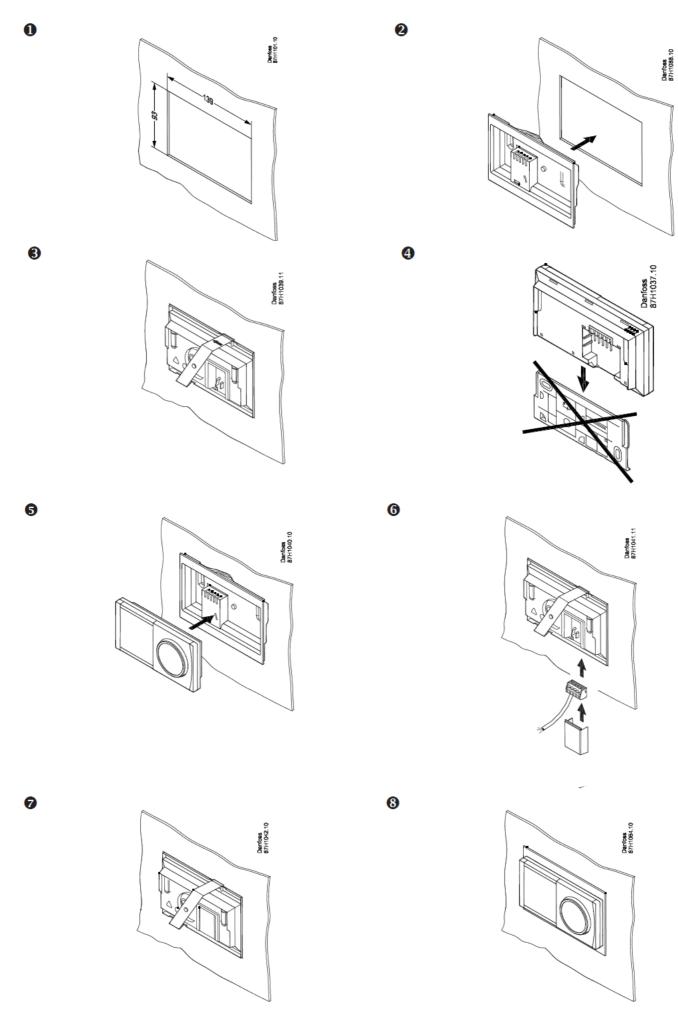

ECL Comfort 210 / 296 / 310: 230 V a.c.

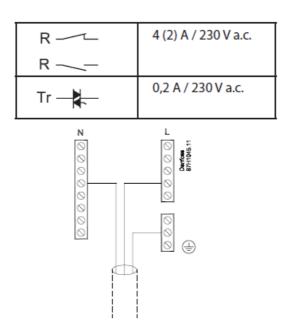



# 230 V a.c.

- A267.1 ex. a, A267.1 ex. d: P2
- A267.1 ex. b, A267.1 ex. f: P2
- A267.1 ex. c, A267.1 ex. e: P2


#### **ECL Comfort 310:**

 24 V a.c.



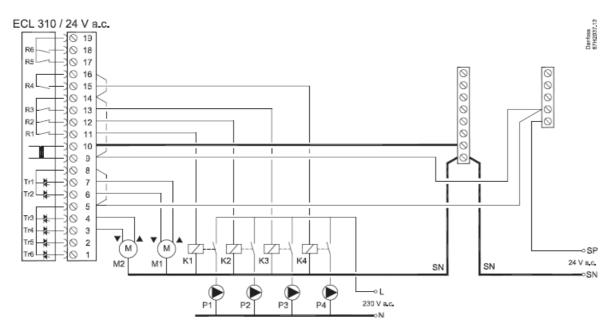



- A267.1 ex. a, A267.1 ex. d: P2
- A267.1 ex. b, A267.1 ex. f: P2
- A267.1 ex. c, A267.1 ex. e: P2

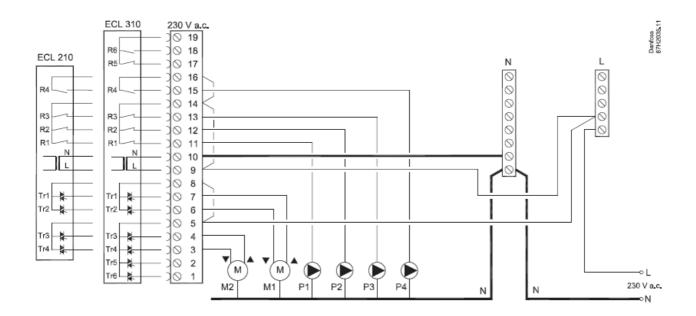


# Safety thermostat

# 1. step closing

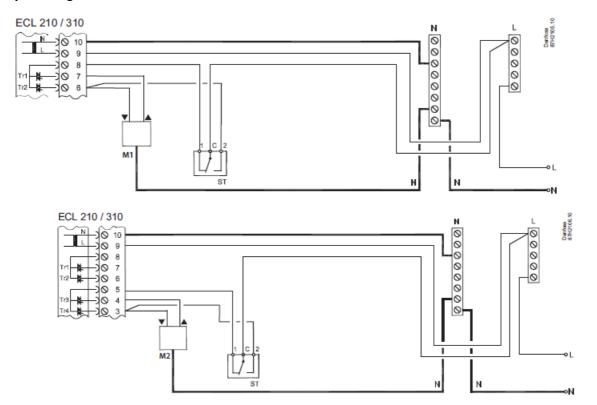


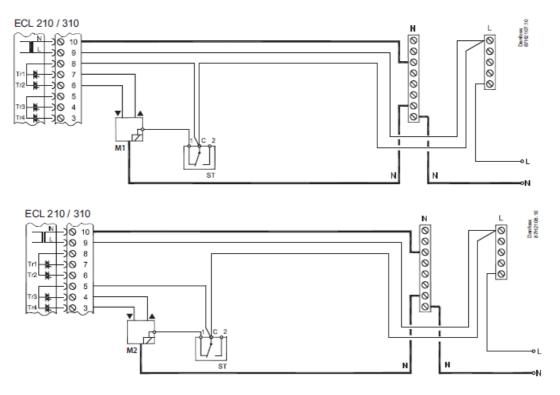


# 2. step closing

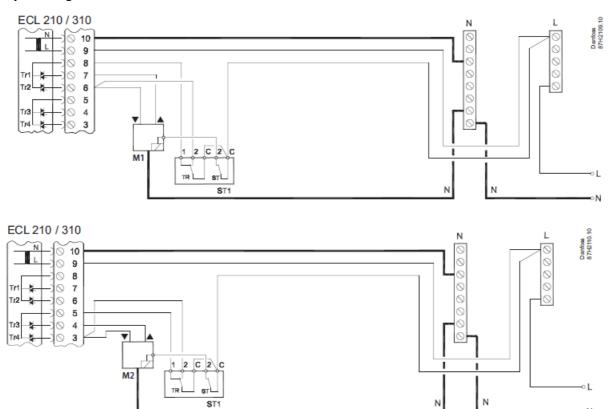




 


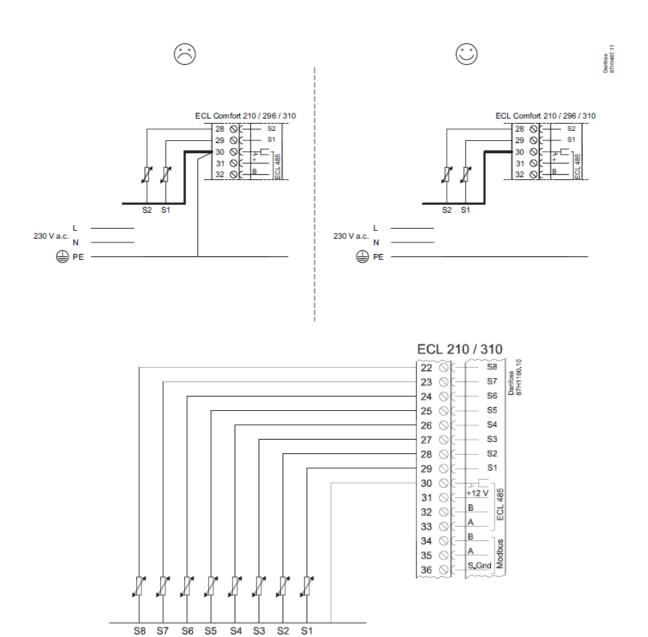


ECA 30 / 31

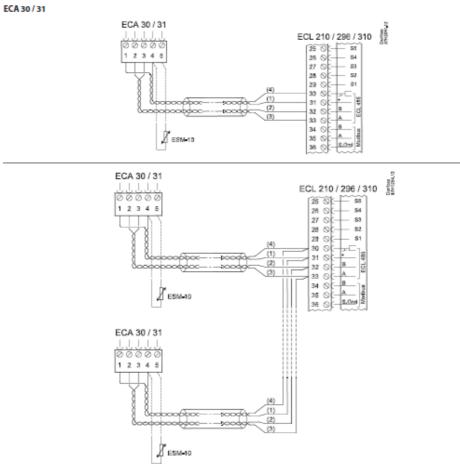


#### Master / slave

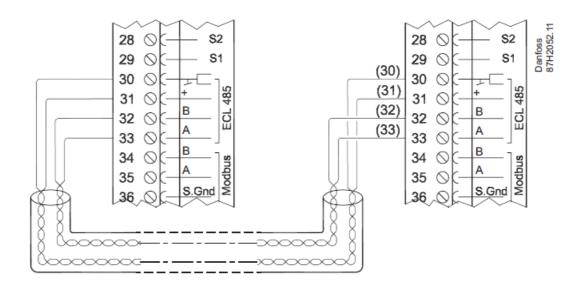


#### **Modbus**

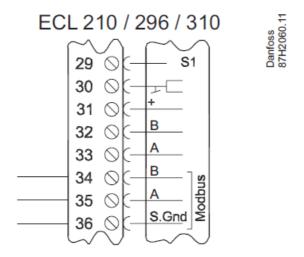


#### M-bus

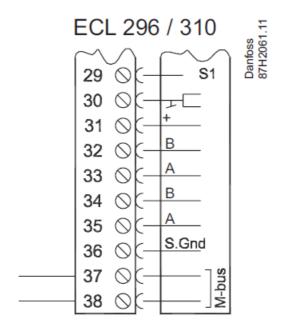


#### M-bus

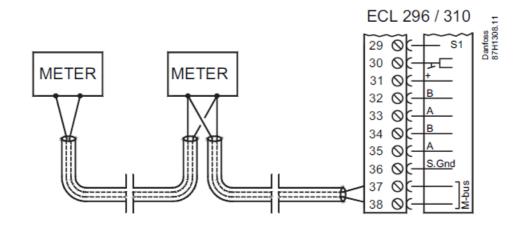


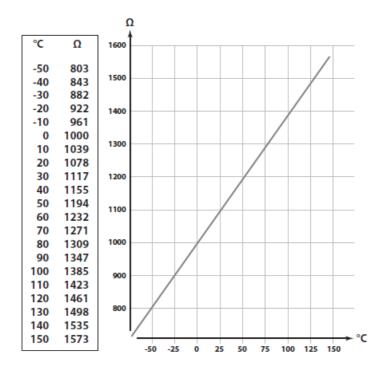

#### **Heat curves**

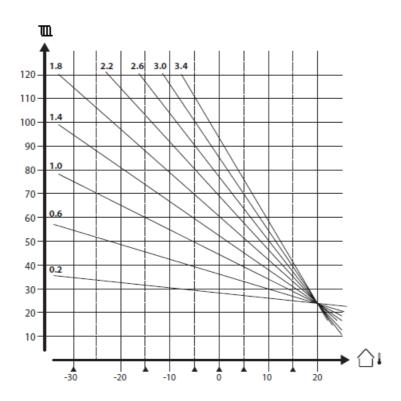

# **ECL Comfort**

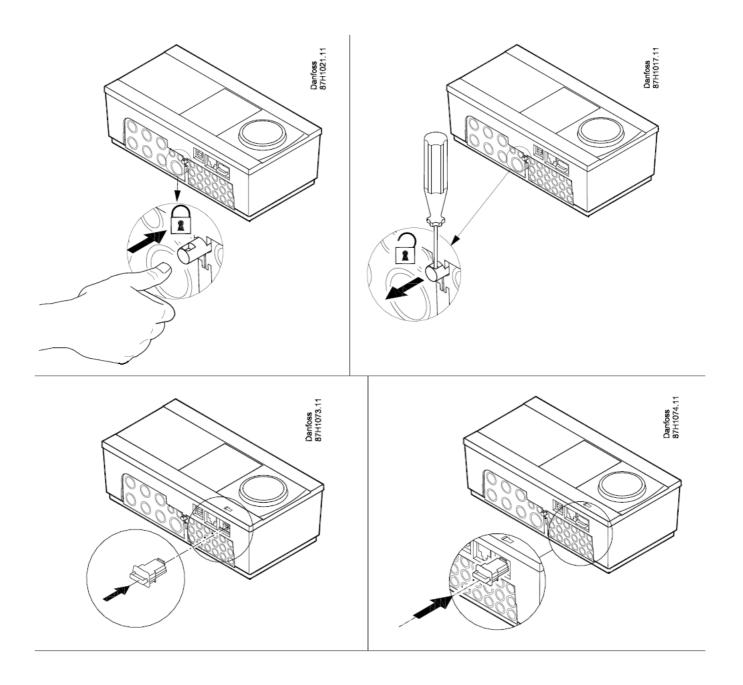

? ECL Comfort 210 / 296 / 310, A267: www.heating.danfoss.com

https://www.youtube.com/user/DanfossHeating -> Playlists -> How-to Videos -> District Energy installation videos



# Danfoss A/S Heating Segment

- danfoss.com
- +45 7488 2222

E-Mail: heating@danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material, Danfoss reserves the right to alter its products without notice, This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S, All rights reserved.

# **Frequently Asked Questions**

#### Where can I find additional resources for the ECL Comfort 210/296/310, A267?

You can visit the official website at <a href="https://www.heating.danfoss.com">www.heating.danfoss.com</a> for more information.

Additionally, instructional videos can be found on the Danfoss Heating YouTube channel under Playlists -> How-to Videos -> District Energy installation videos.

#### **Documents / Resources**



<u>Danfoss ECL Comfort 210 Comfort Controllers</u> [pdf] Installation Guide 210, 296, 310, ECL Comfort 210 Comfort Controllers, ECL Comfort 210, Comfort Controllers

#### References

- Danfoss Climate Solutions for heating | Efficient solutions for superior comfort | Danfoss
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.