



Danfoss ECL Comfort 210 Controllers Installation Guide

[Home](#) » [Danfoss](#) » Danfoss ECL Comfort 210 Controllers Installation Guide 

Contents



- [1 Danfoss ECL Comfort 210 Controllers](#)
- [2 CONNECTION](#)
- [3 INSTALLATION INSTRUCTION](#)
- [4 Product Specifications](#)
- [5 Product Usage Instructions](#)
- [6 Frequently Asked Questions](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



Danfoss ECL Comfort 210 Controllers




CONNECTION

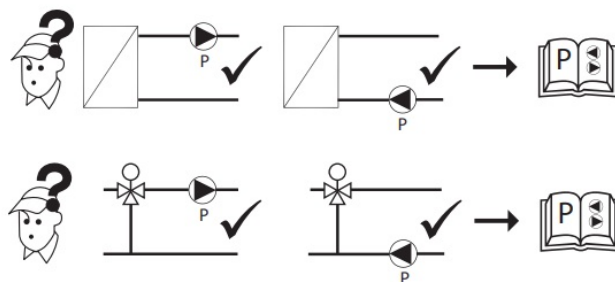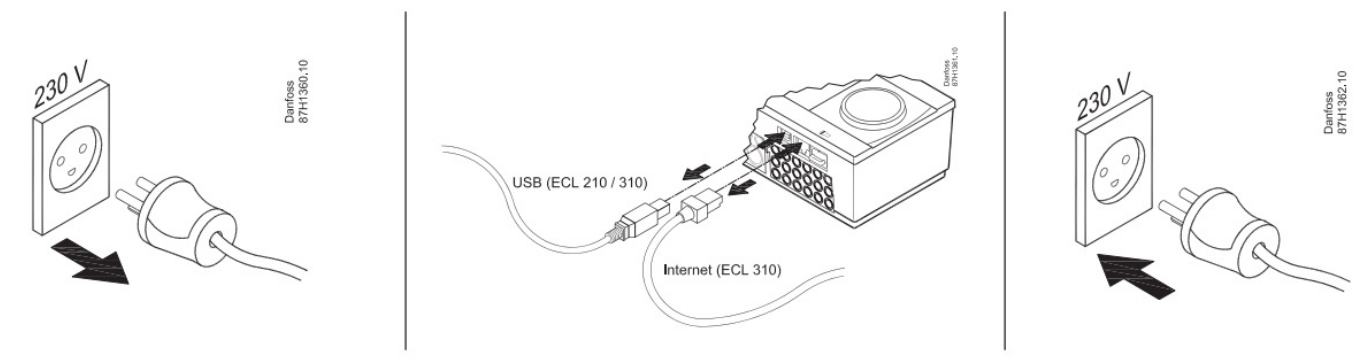

INSTALLATION INSTRUCTION

A231.1

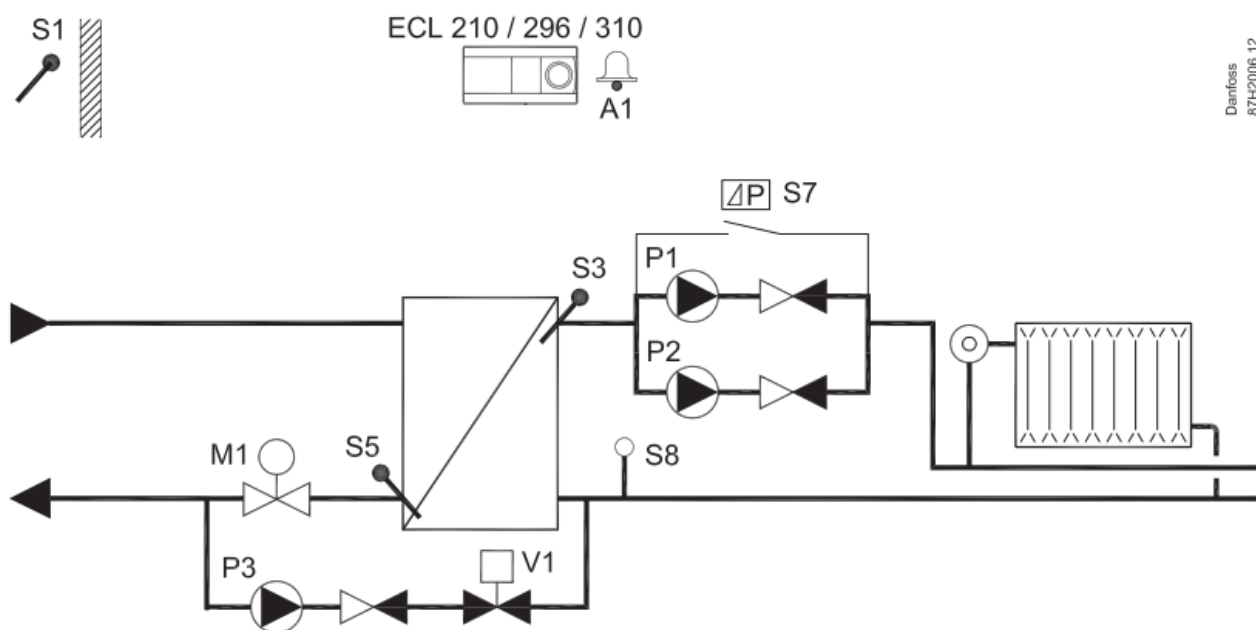


A231.2



ECL 210 / 296 / 310



Danfoss
87H2005.12

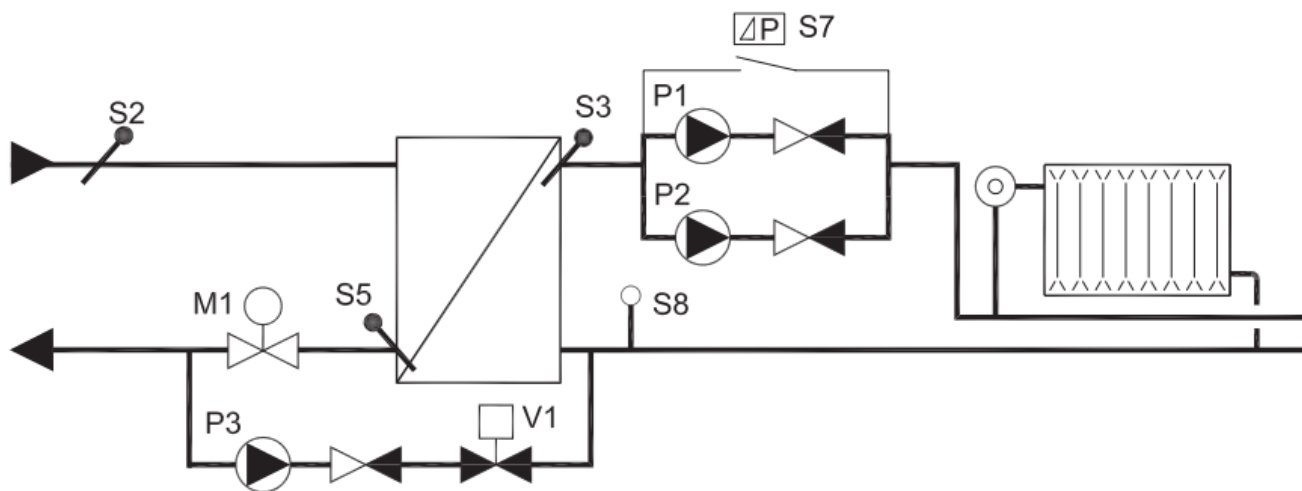


A331.1:




ECL 310



Danfoss
87H2003.11

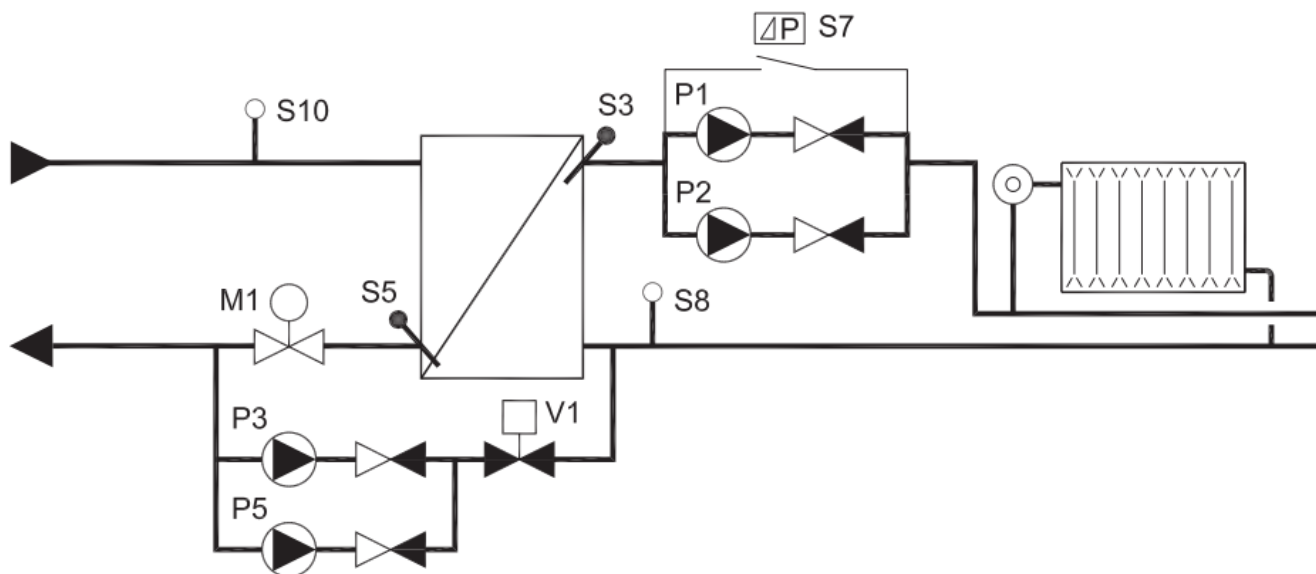


A331.2:

 

ECL 310




Danfoss
87H2004.11

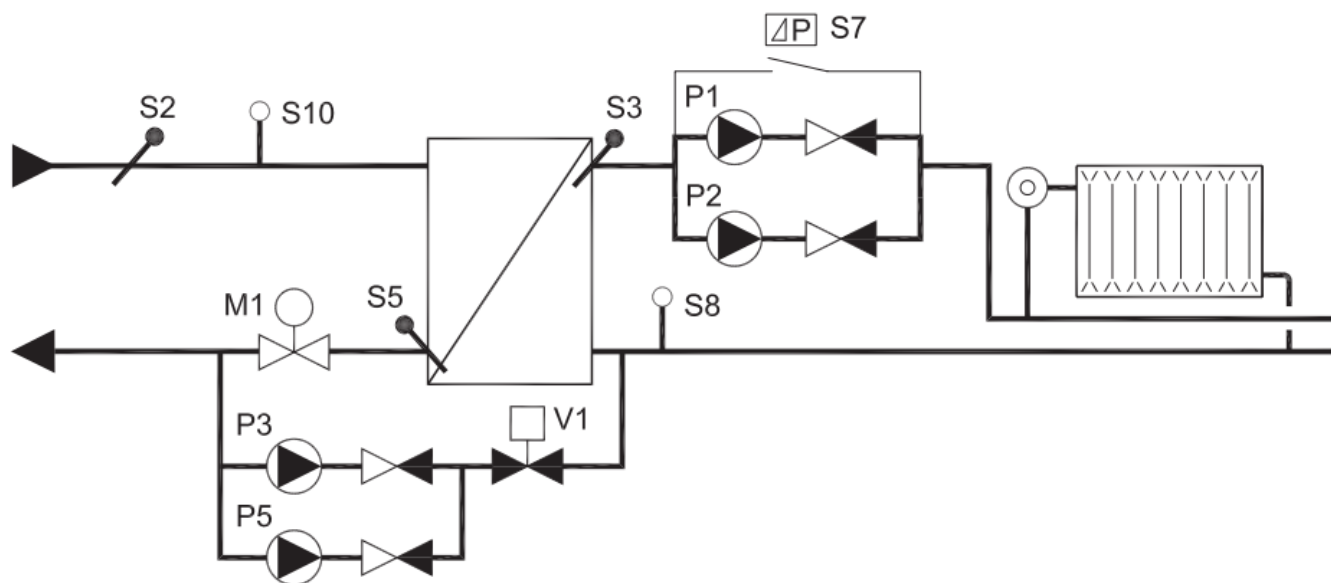


ECL Comfort 210 / 296 / 310: 230 V a.c.


R	4 (2) A / 230 V a.c.
Tr	0,2 A / 230 V a.c.

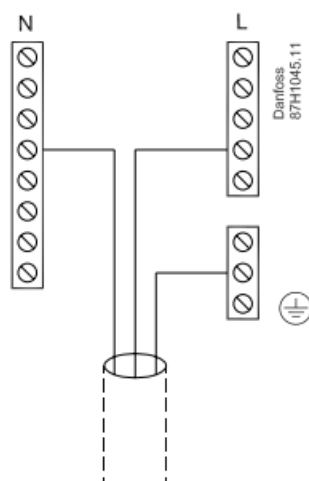

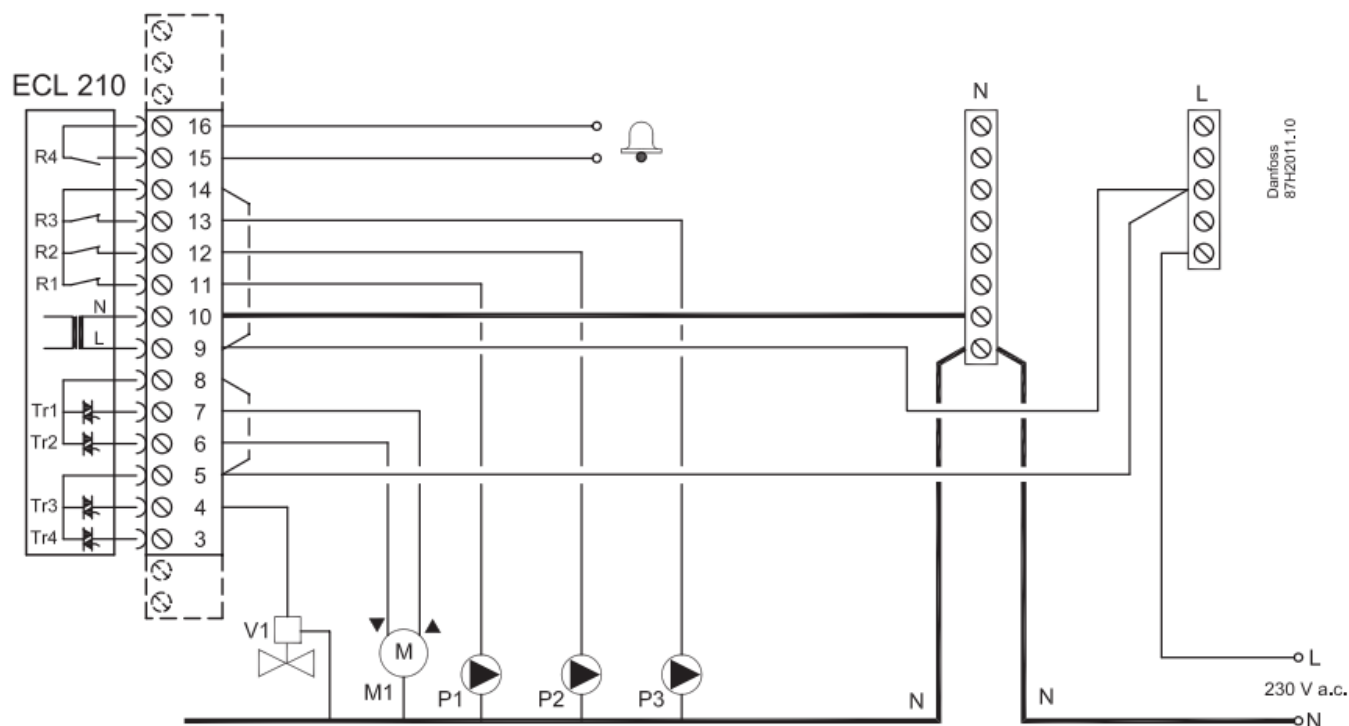


230 V a.c. , A231.1 / A231.2



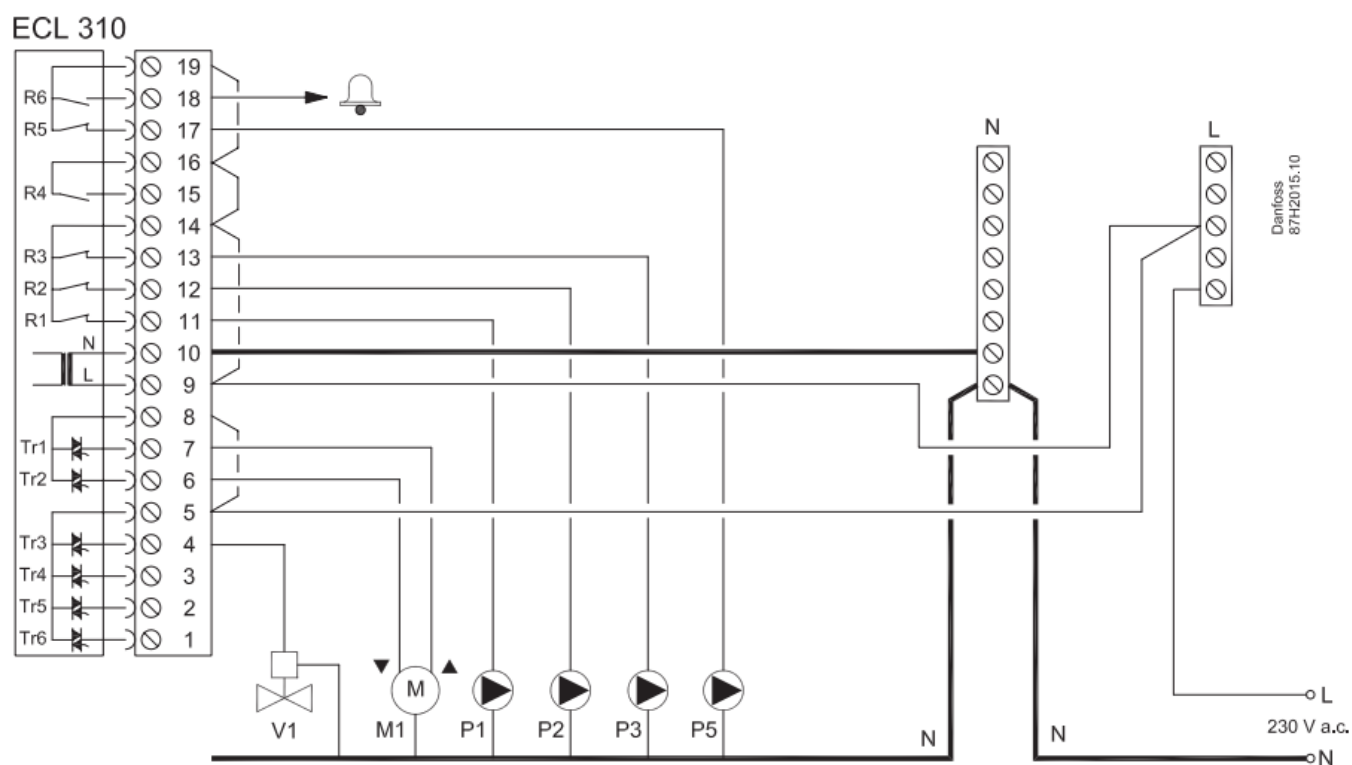

230 V a.c., A331.1 / A331.2




ECL Comfort 210 / 296 / 310: 24 V a.c.

R 	4 (2) A / 24 V a.c.
R 	
Tr 	1 A / 24 V a.c.

24 V a.c., A231.1 / A231.2


R 	4 (2) A / 24 V a.c.
Tr 	1 A / 24 V a.c.

ECL 210/24 V a.c.

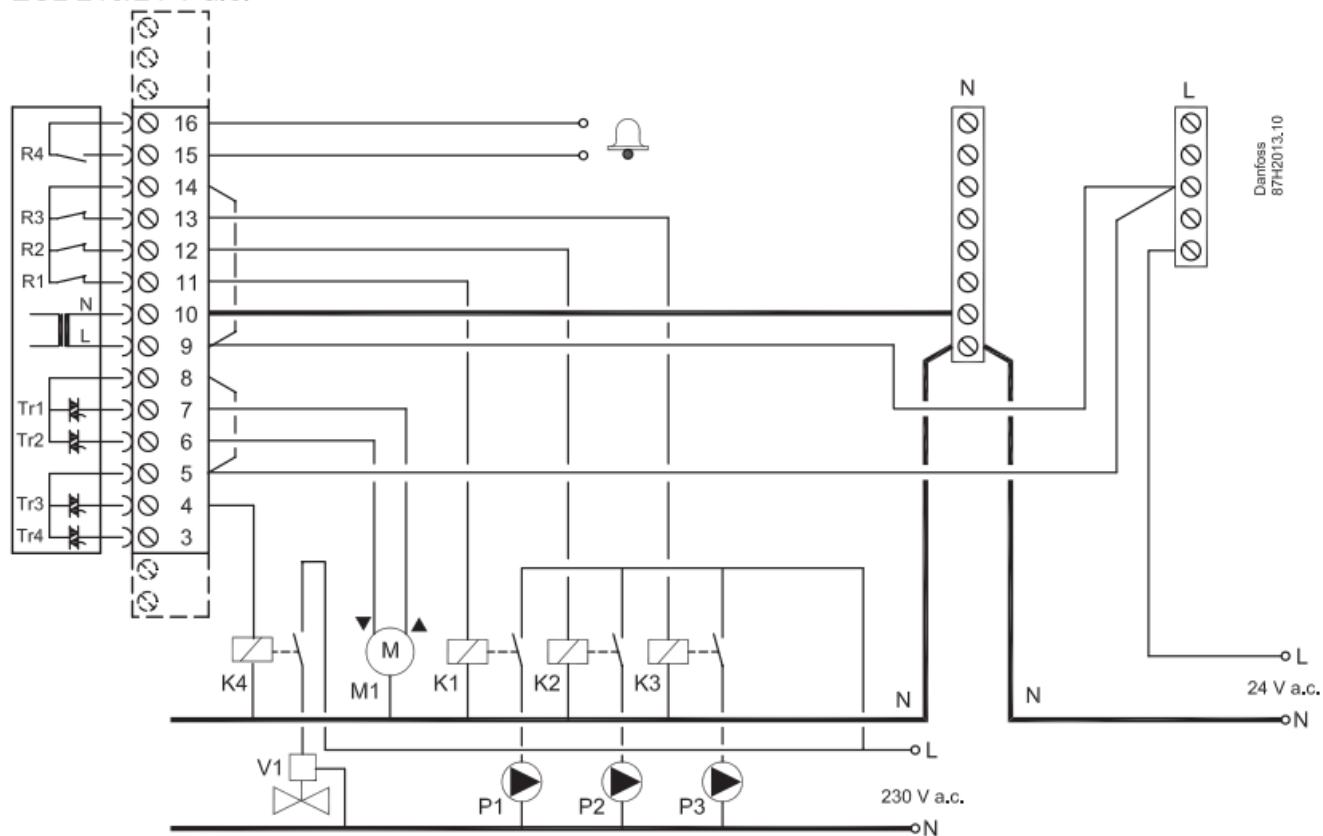



24 V a.c., A331.1 / A331.2

ECL 310/24 V a.c.

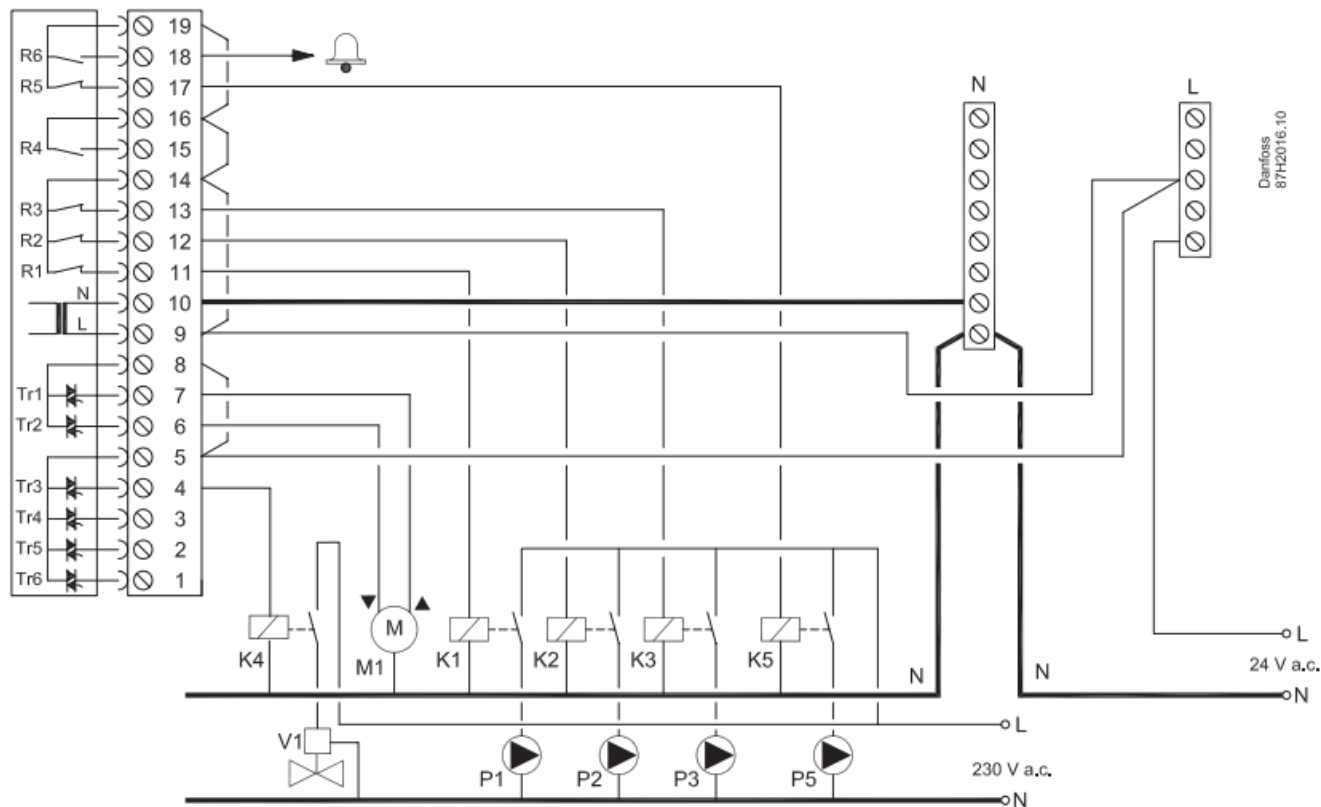

Danfoss
87H2016.10


Pt 1000 (1000 Ω / 0 °C)

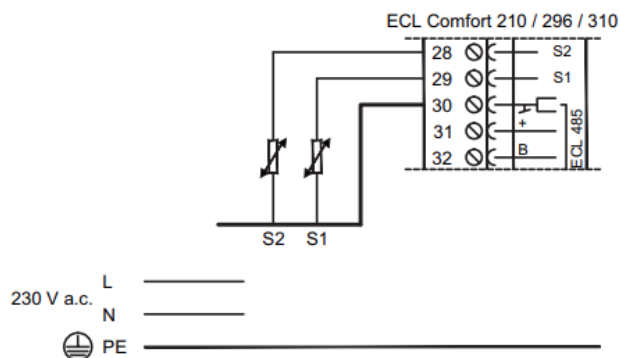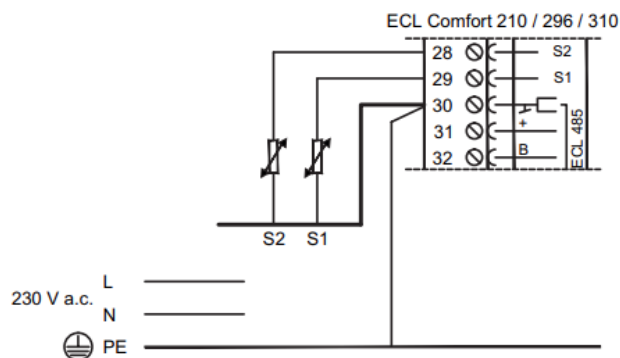


Danfoss
87H1487.11

24 V a.c. / 230 V a.c. safety thermostat


ECL 210

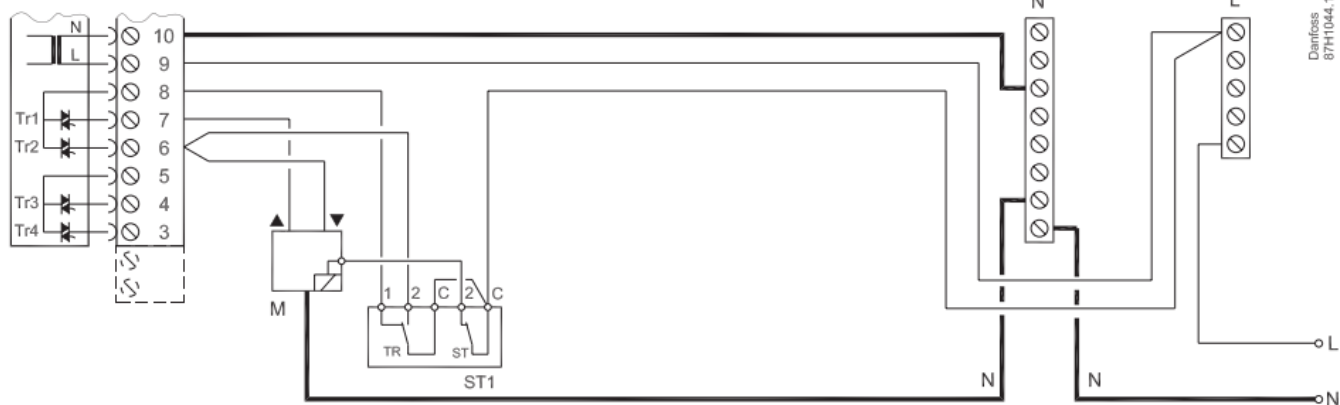


ECL 310

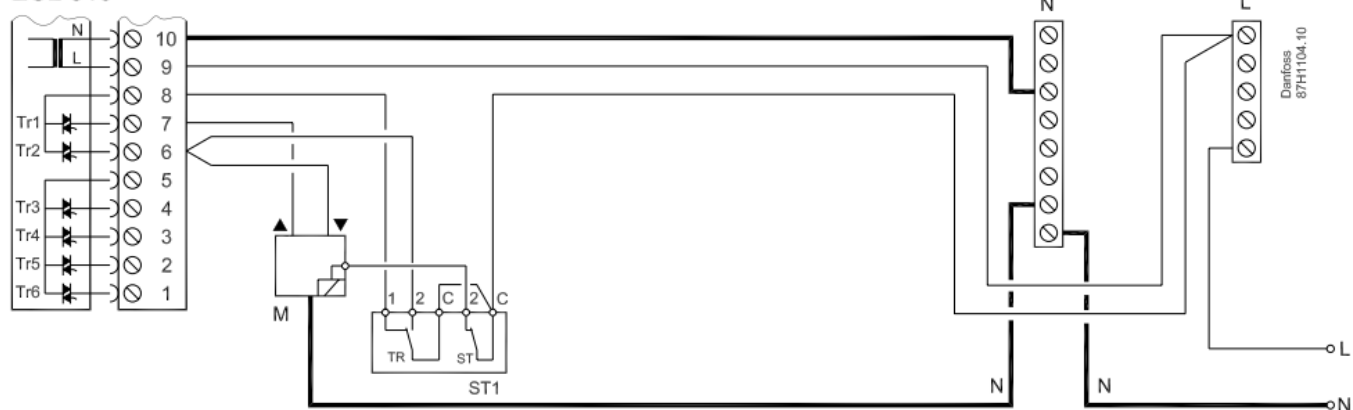


Pt 1000 (1000 Ω / 0 °C) A231.1 (\div S2) / A231.2

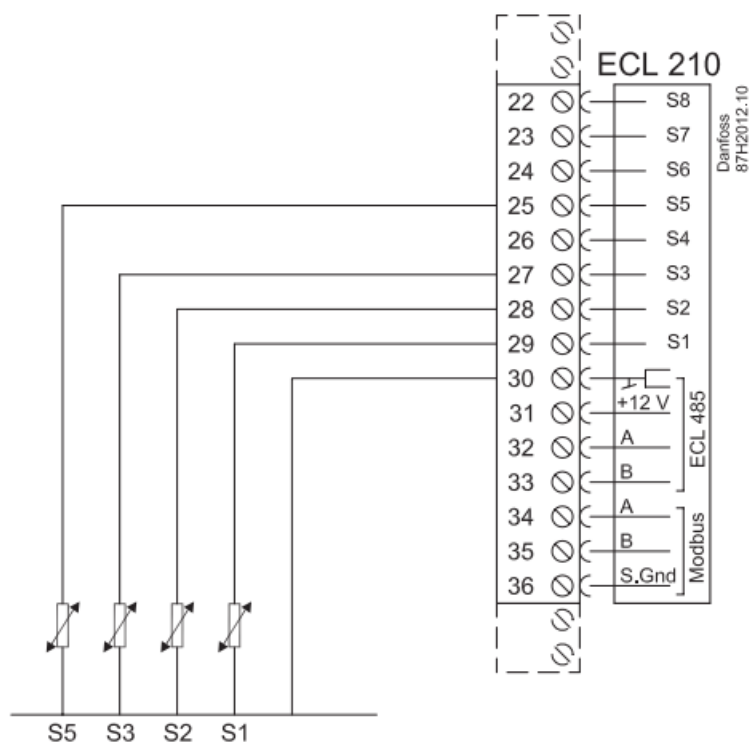


Pt 1000 (1000 Ω / 0 °C) A331.1 (\div S2) / A331.2

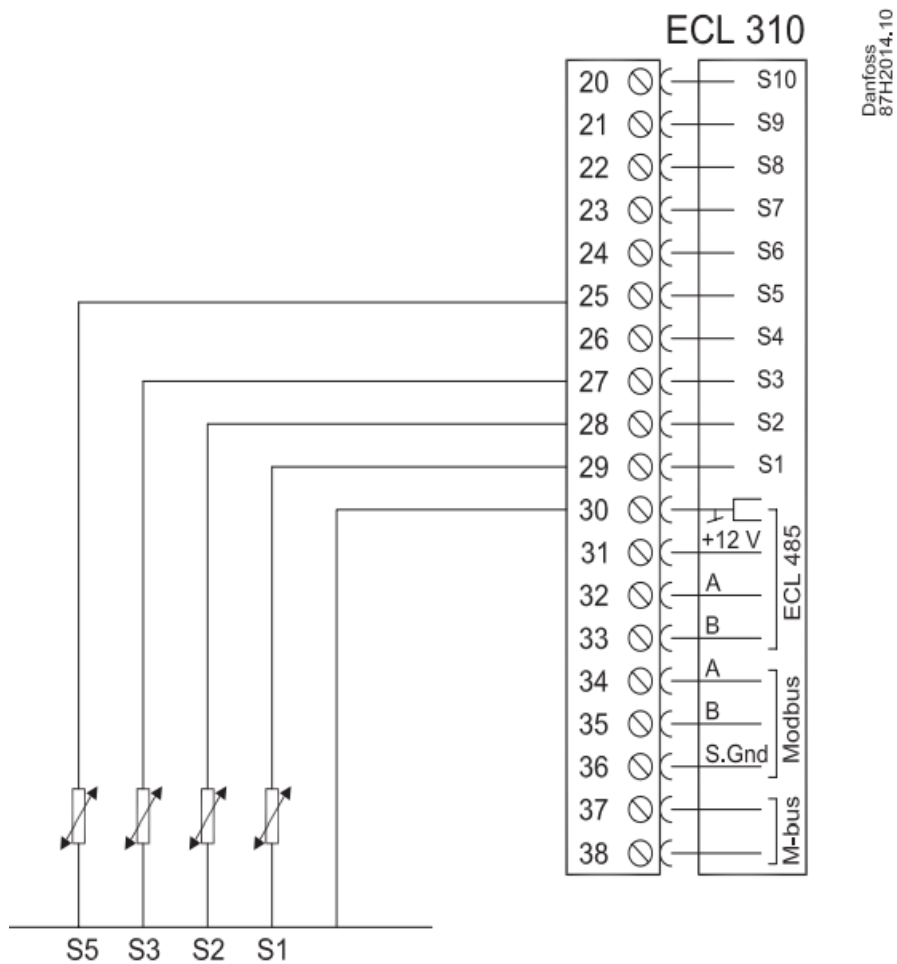


A231.1 / A231.2

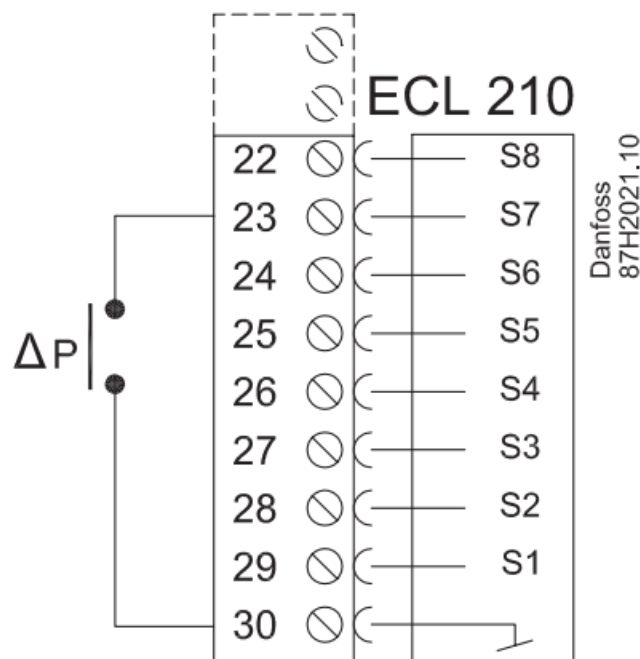


A331.1 / A331.2

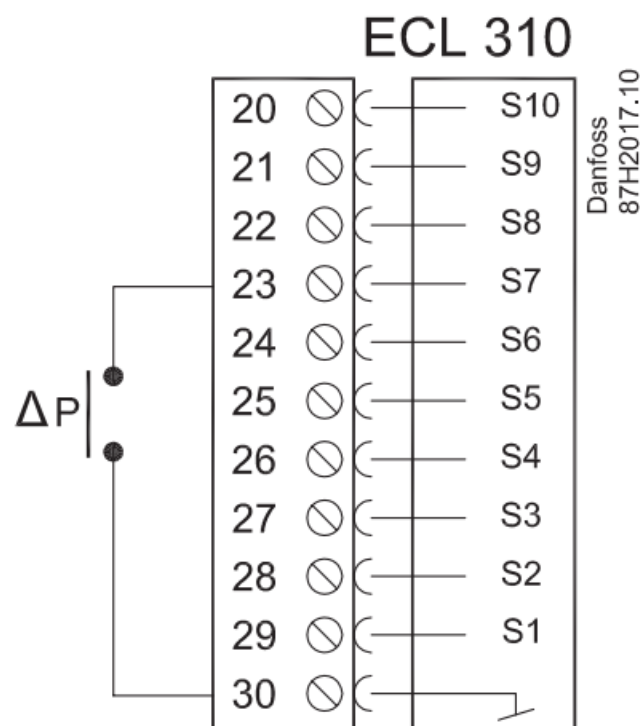



A231.1 / A231.2

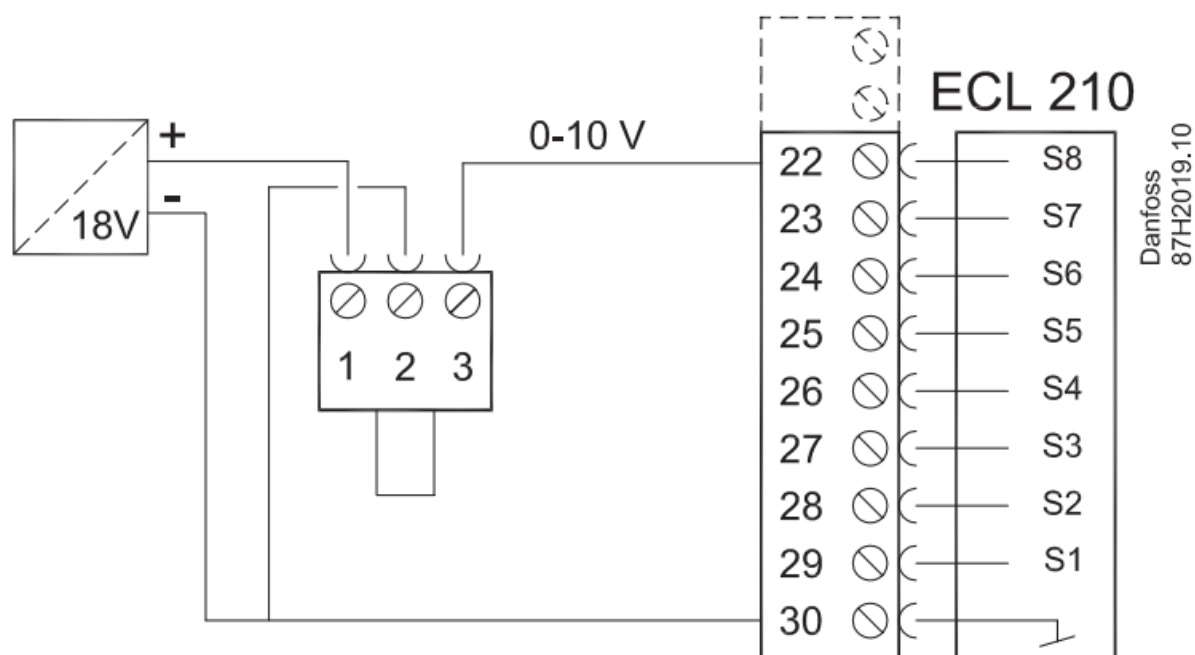


A331.1 / A331.2

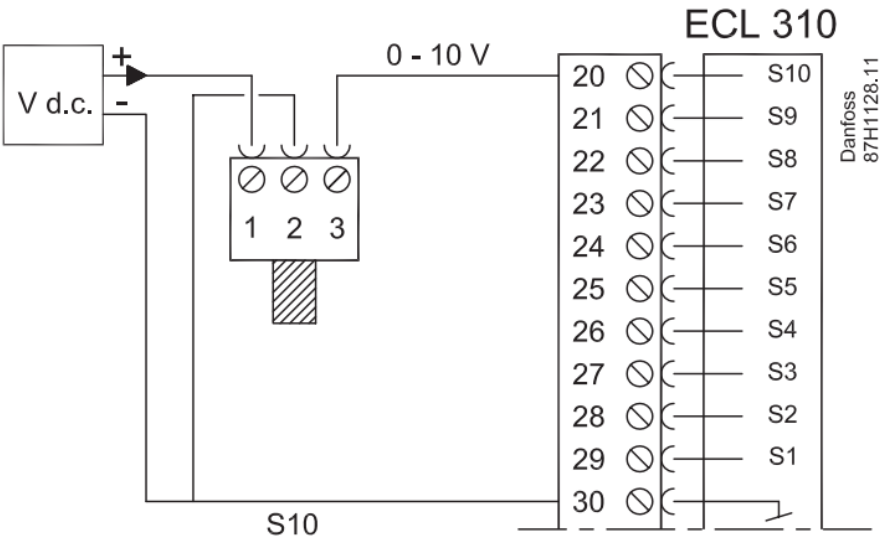


A231.1 / A231.2

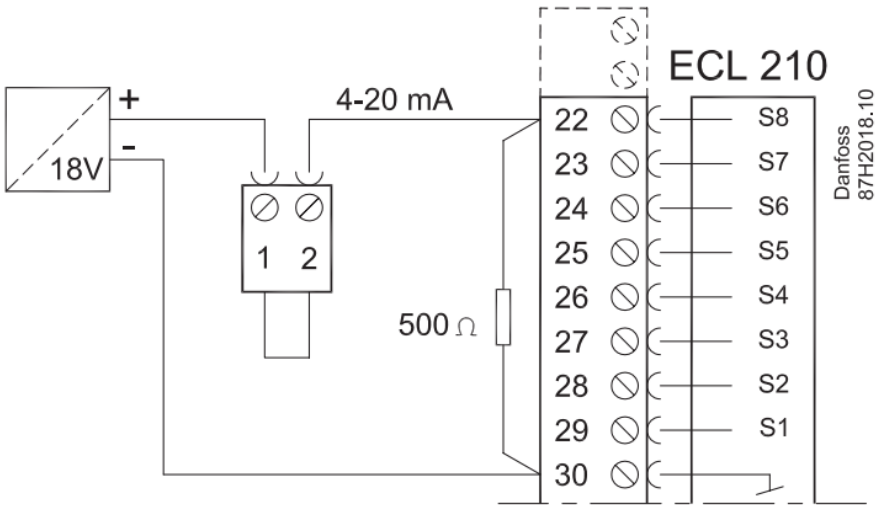 


A331.1 / A331.2

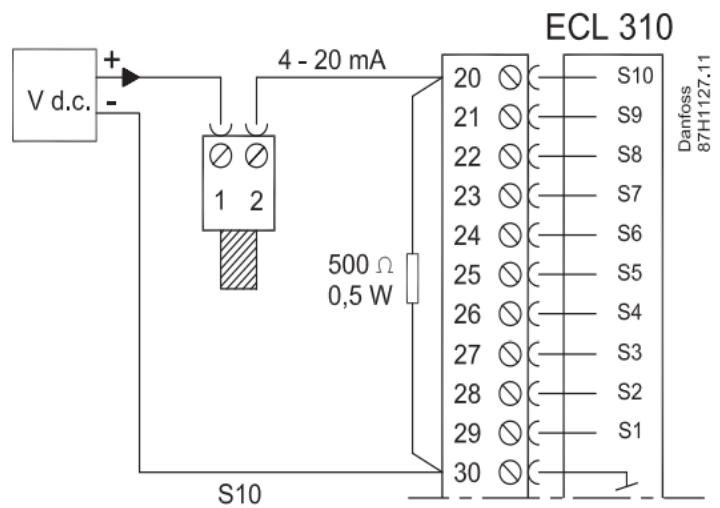


A231.1 / A231.2

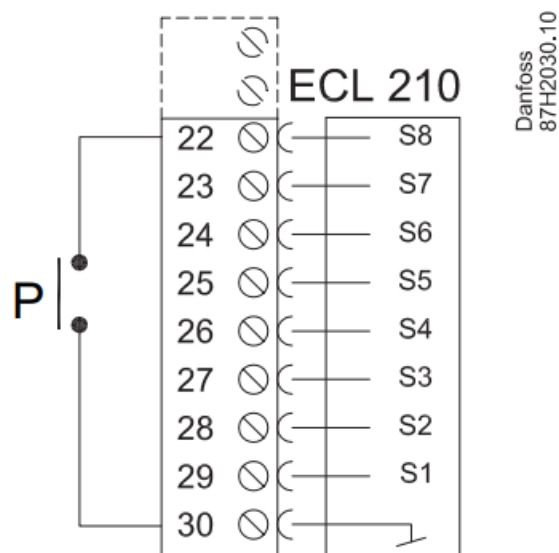


A331.1 / A331.2

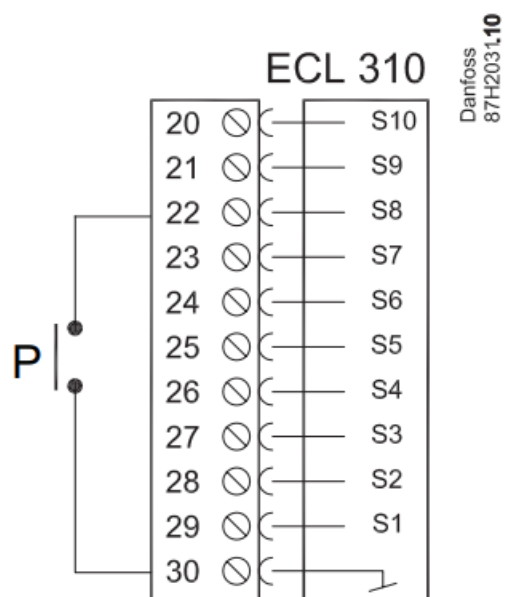


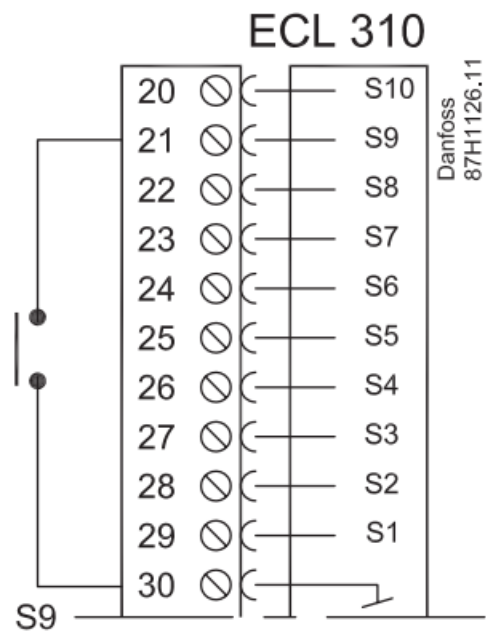


ECA 30 / 31

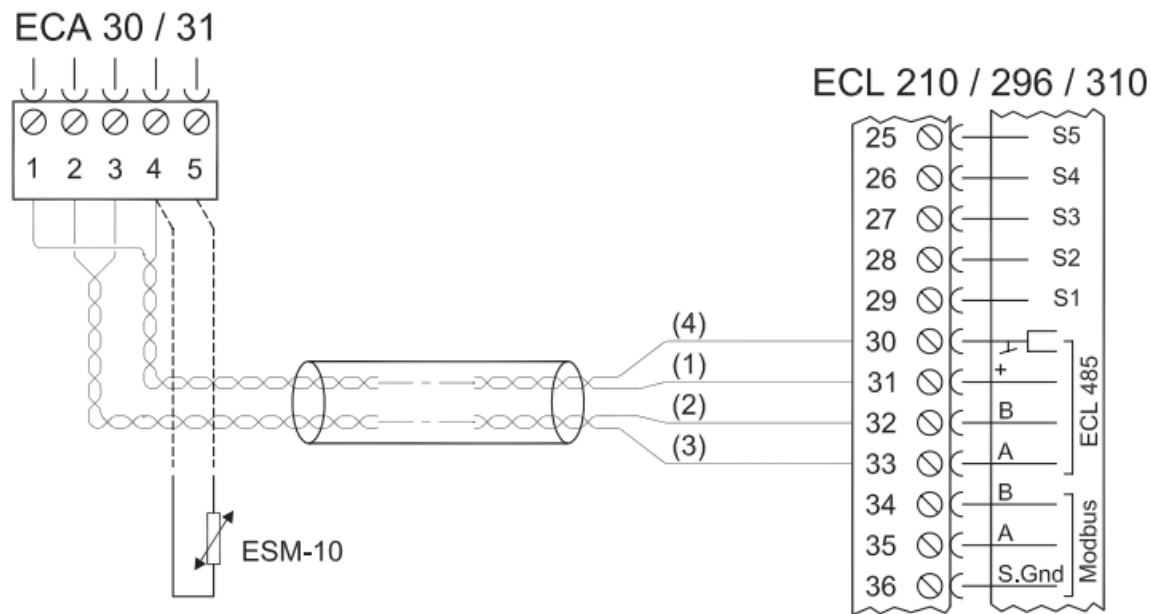

ECA 30 / 31

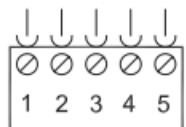


ECL 210 / 296 / 310

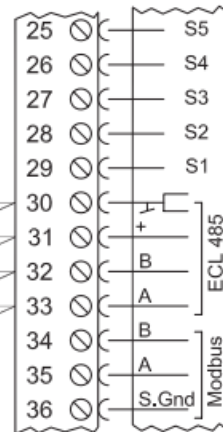

Danfoss
87H1254.13

ECA 30 / 31

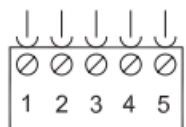


(4)
(1)
(2)
(3)

(4)
(1)
(2)
(3)

ESM-10

ESM-10


Master / slave

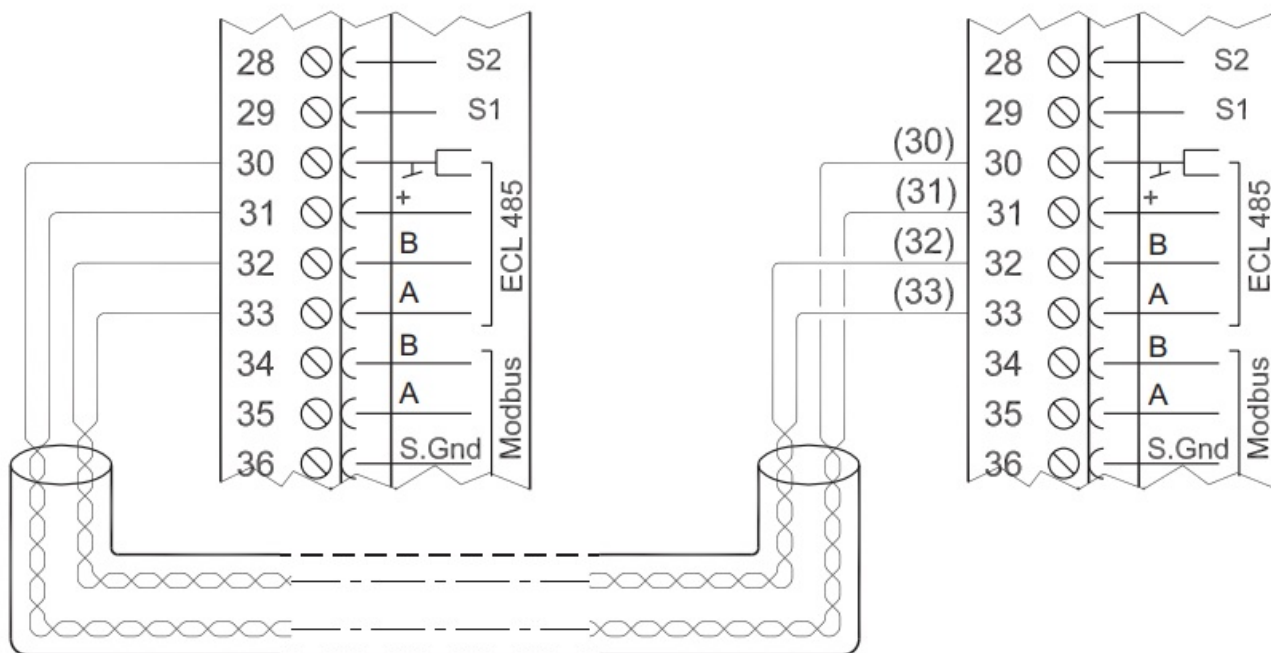

Danfoss
87H2052.11

Modbus


ECL 210 / 296 / 310

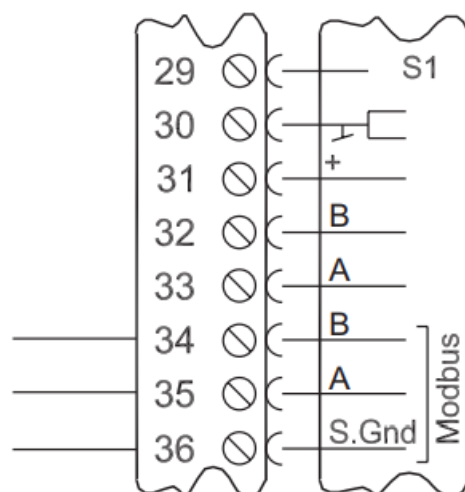

Danfoss
87H2060.11


M-bus

ECL 296 / 310

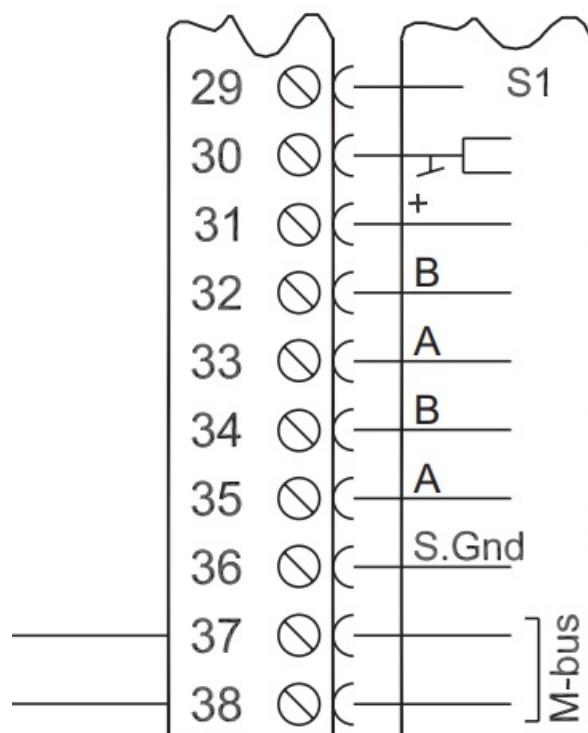



Danfoss
87H2061.11

M-bus

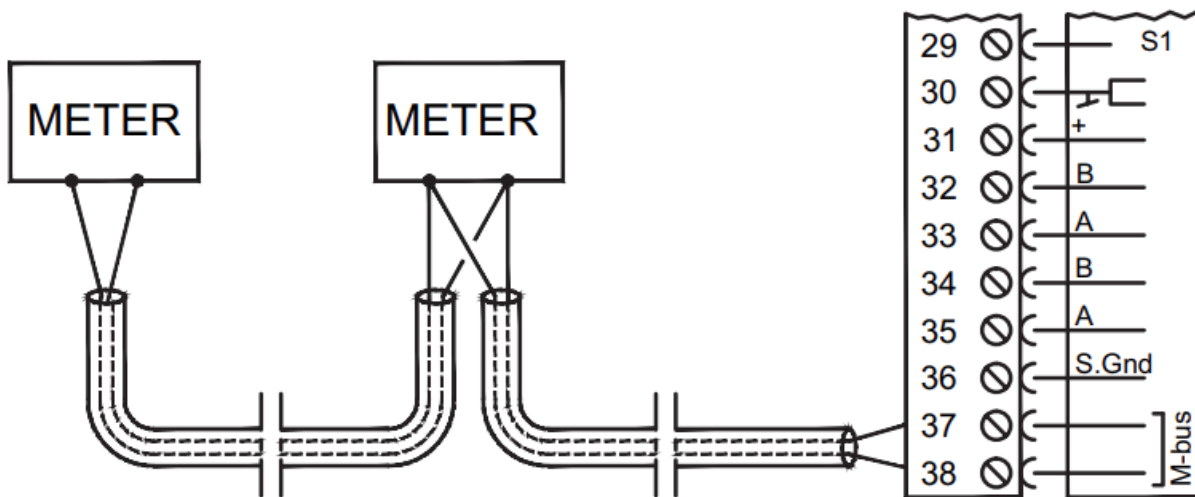


Pt 1000 (IEC 751B, 1000 Ω / 0 °C)

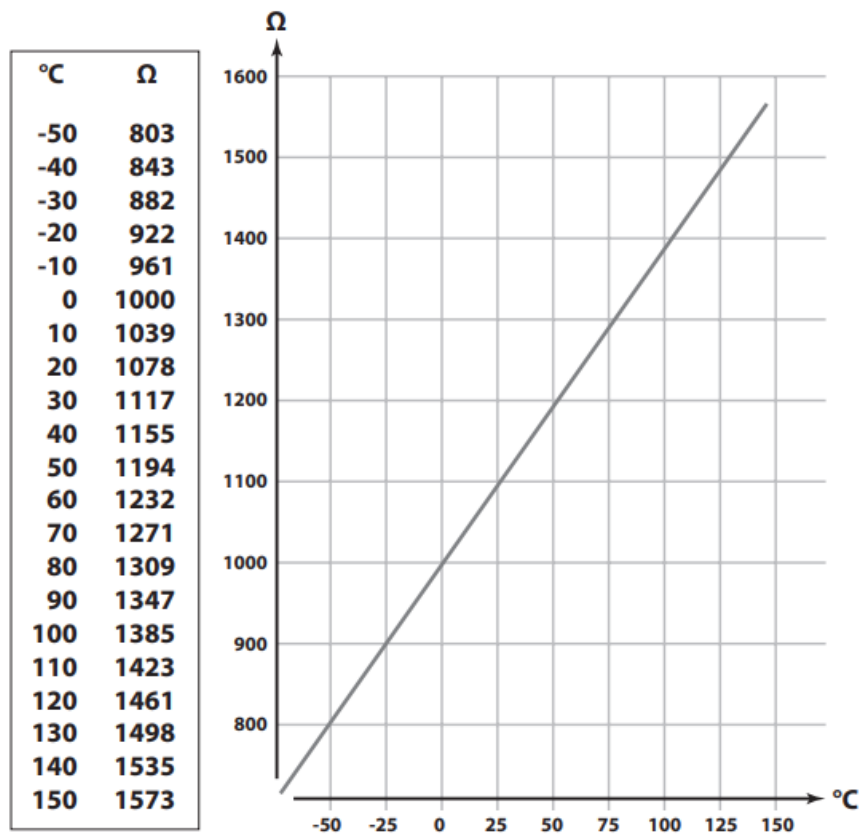

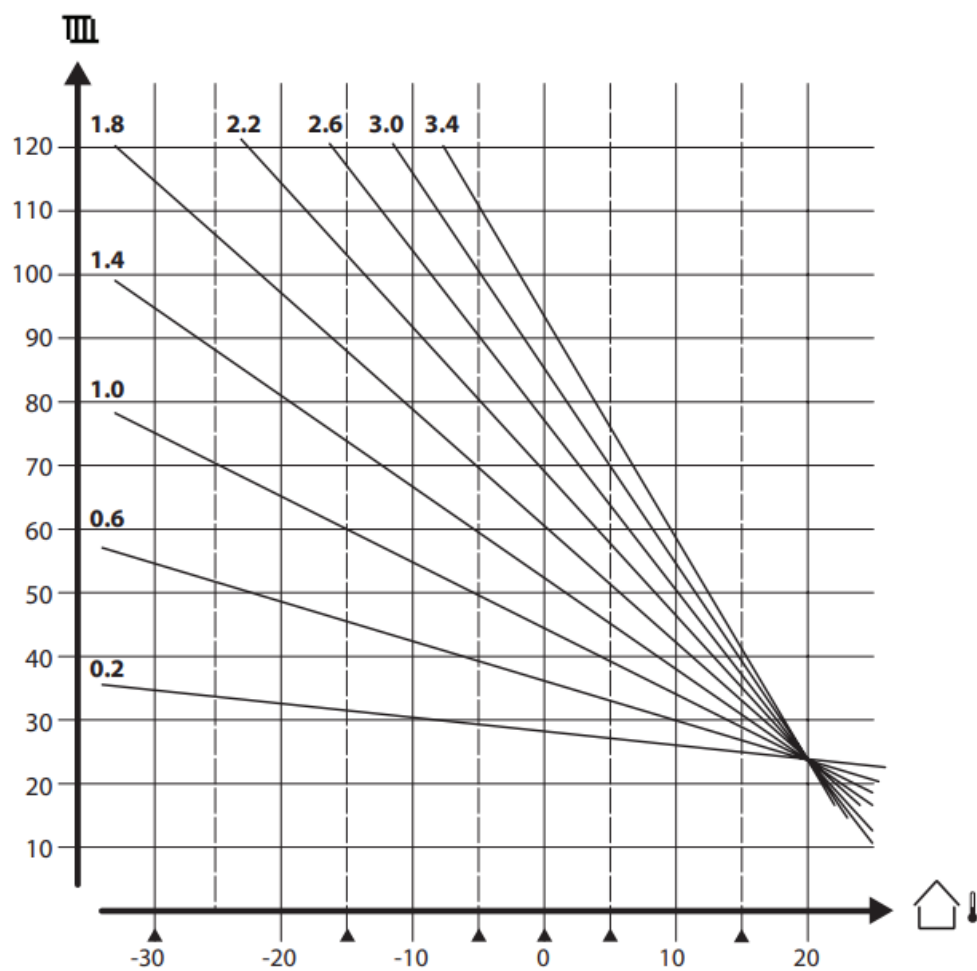


ECA 30


1

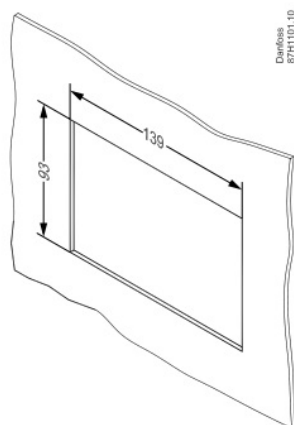


2

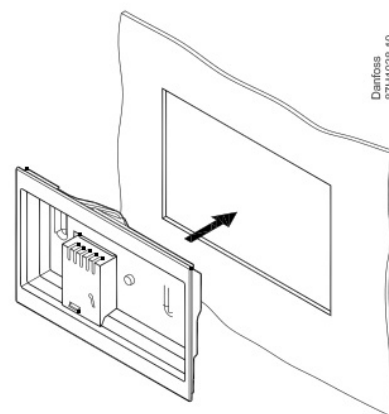


3

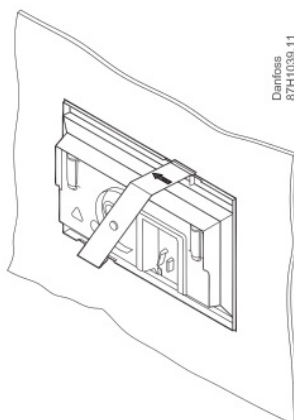


4

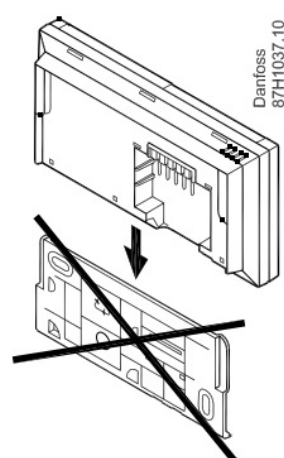


5

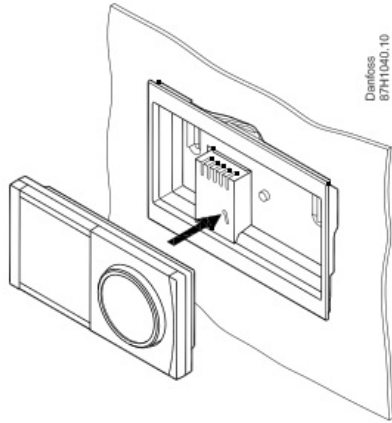


6

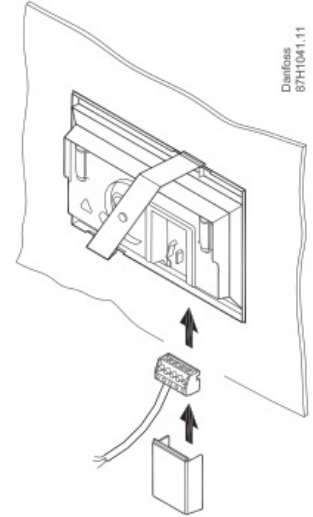


7

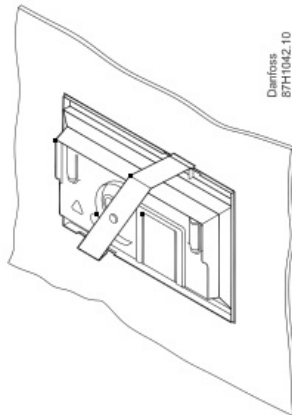

8

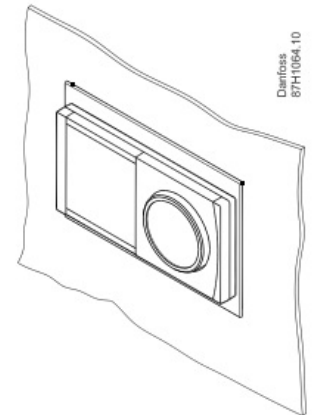

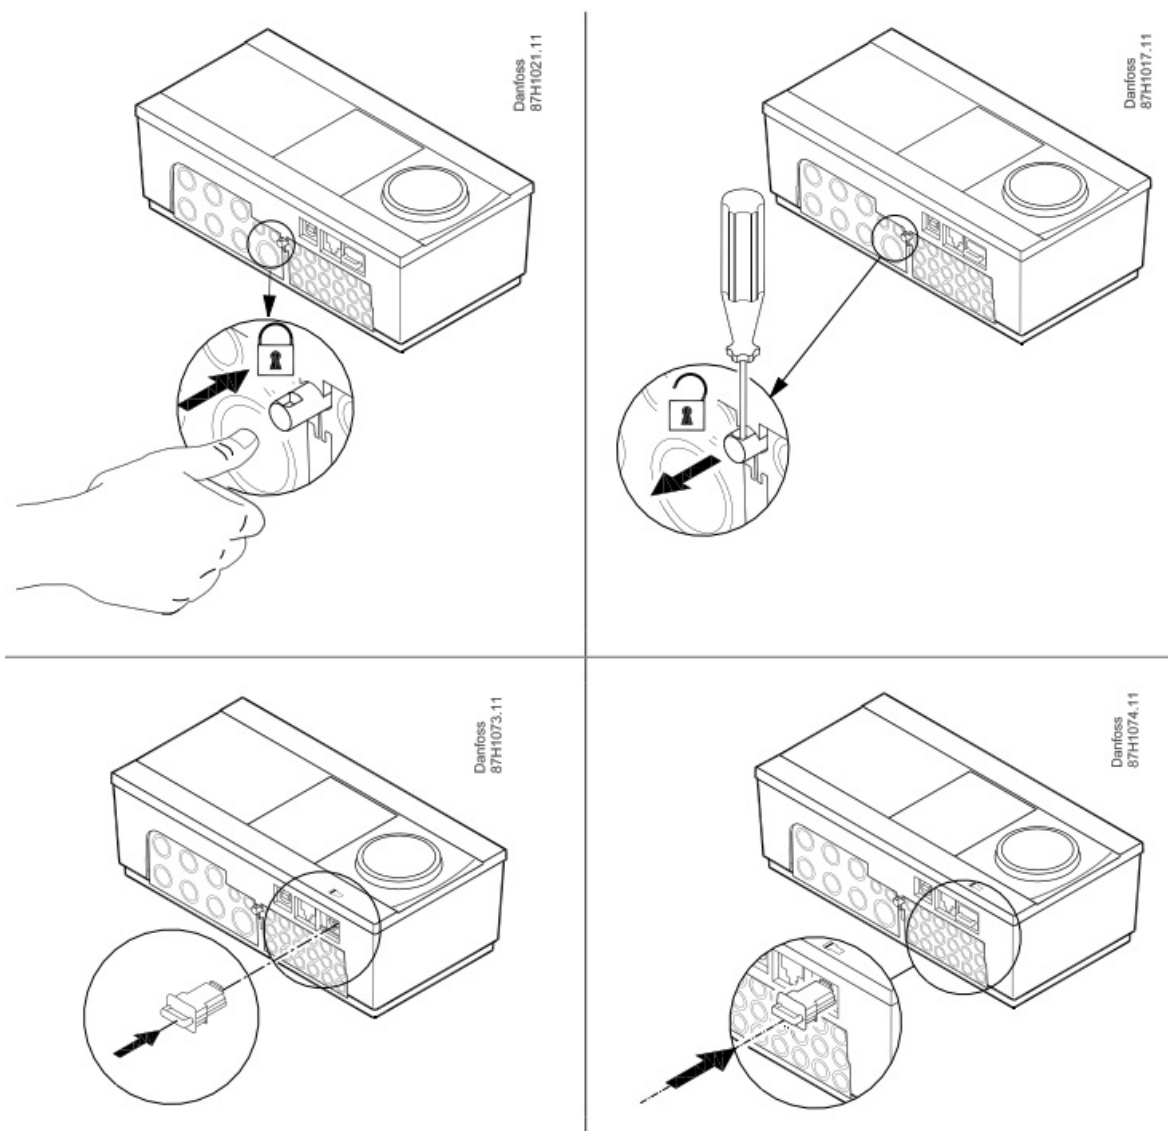

- ECL Comfort 210 / 296 / 310, A231 / A331: www.heating.danfoss.com
- <https://www.youtube.com/user/DanfossHeating> -> Playlists -> How-to Videos -> District Energy installation videos.

Danfoss A/S

Heating Segment • danfoss.com • +45 7488 2222 • E-Mail: heating@danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures, and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order, provided that such alterations can be made without subsequent changes being necessary in specifications already agreed upon. All trademarks in this material are the property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.

Product Specifications

- **Model:** ECL Comfort 210 / 296 / 310, A231 / A331
- **Power Supply:** 230 V a.c. / 24 V a.c.
- **Current:** 4 (2) A / 230 V a.c., 0.2 A / 230 V a.c., 4 (2) A / 24 V a.c., 1 A / 24 V a.c.
- **Thermostat Type:** Safety Thermostat

Product Usage Instructions

Installation

1. Ensure the power supply matches the product requirements (230 V a.c. or 24 V a.c.).
2. Connect the corresponding wires to the L, N, and PE terminals as indicated in the manual.
3. Mount the device securely following the provided guidelines.
4. For safety, install the 24 V a.c. / 230 V a.c. Safety thermostat as instructed.

Setup and Configuration

1. Refer to the manual for specific setup instructions based on the model (A231 or A331).
2. Configure the master/slave settings if applicable for your setup.
3. For Modbus or M-bus communication, follow the provided guidelines to establish connections.

Operation



1. Power on the device and set the desired parameters using the control interface.
2. Monitor the device for any alerts or notifications that may indicate issues.
3. Regularly check and maintain the device as per the maintenance instructions provided in the manual.

Frequently Asked Questions

Q: Where can I find further support or resources for ECL Comfort 210 / 296 / 310, A231 / A331?

A: For additional support, visit the official Danfoss website at www.heating.danfoss.com. You can also check out instructional videos on the Danfoss Heating YouTube channel under Playlists -> How-to Videos -> District Energy installation videos.

Documents / Resources

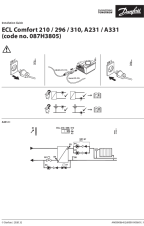	Danfoss ECL Comfort 210 Controllers [pdf] Installation Guide ECL Comfort 210 Controllers, ECL Comfort 210, Controllers
	Danfoss ECL Comfort 210 Controllers [pdf] Installation Guide ECL Comfort 210 Controllers, ECL Comfort 210, Controllers

References

-  [Danfoss Climate Solutions for heating | Efficient solutions for superior comfort | Danfoss](#)

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.