




Instruction

Type ETRE

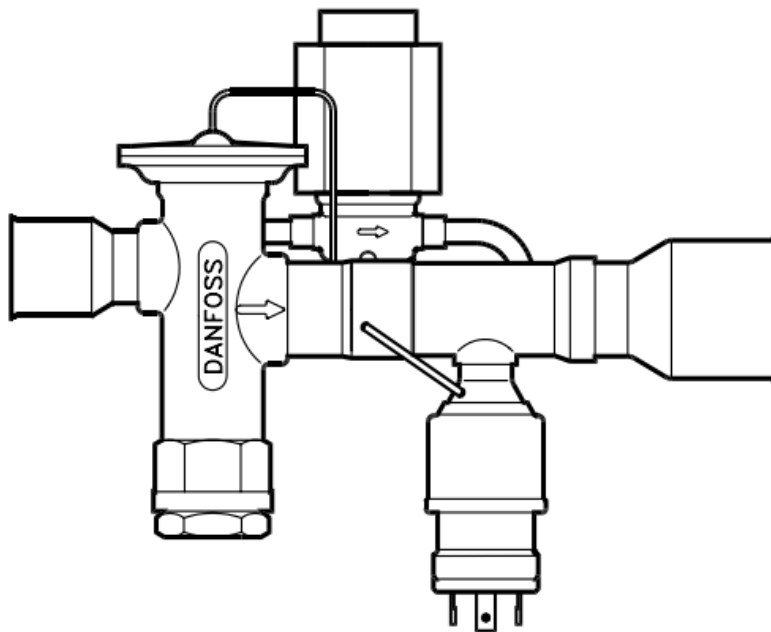

Contents [[hide](#)]


[1 ETRE Gas Sensor](#)

[2 Documents / Resources](#)

[2.1 References](#)


ETRE Gas Sensor

Max. working pressure (MWP)	500 psig	(35 bar pe)
Max. test pressure	560 psig	(39 bar pe)
Max. opening diff. Pressure (MOPD)	305 psig	(21 bar pe)

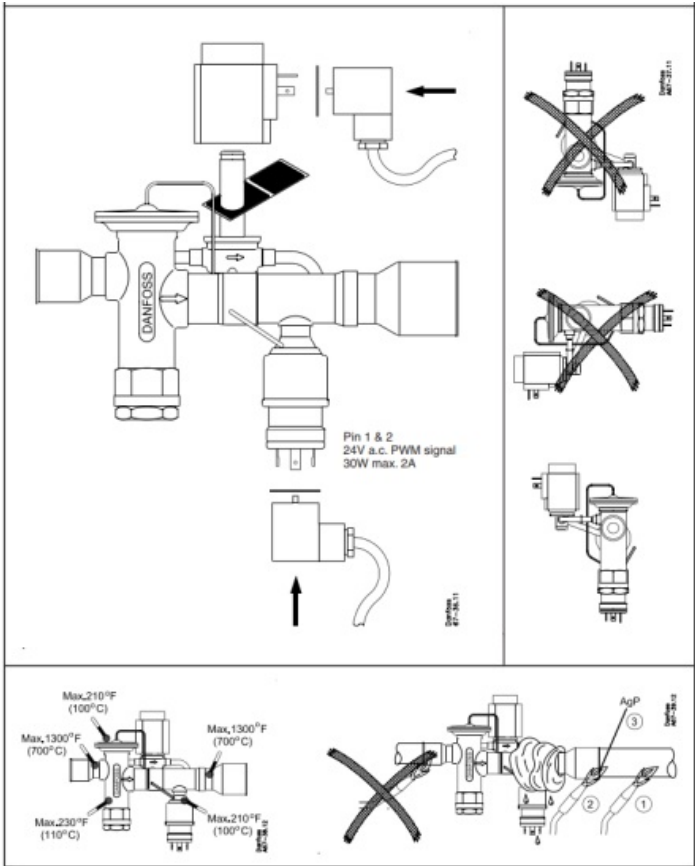

RI1DS402 © Danfoss A/S (RC-CM / MWA), 10-2003

Documents / Resources

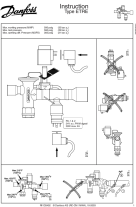	Danfoss ETRE Gas Sensor [pdf] Instructions 067R9507, 067R9507, ETRE Gas Sensor, ETRE, Gas Sensor
---	--

References

- [User Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.