

Danfoss EVR 22 Solenoid Valve Installation Guide

[Home](#) » [Danfoss](#) » Danfoss EVR 22 Solenoid Valve Installation Guide 



Installation guide
Solenoid valve
Types EVR 2 – EVR 22 (NC/NO)

Contents

- [1 EVR 22 Solenoid Valve](#)
- [2 Service only](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)

EVR 22 Solenoid Valve

Refrigerants:

R22/R407C, R404A/R507, R410A, R134a, R407A, R23, R32, R290, R600, R600a.
For other refrigerants, contact Danfoss.




Note: Only EVR 2 – EVR 20 with solder connections and without manual stem are suitable for R32, R290, R600 and R600a.


For refrigerants type R32, R290, R600, R600a always use coils with protection degree IP65 or IP67.

An external current fuse (rated current of fuse should be around two times of coil rated current, fuse type: medium time lag) shall always be installed ahead of coils to prevent sparks, arcs, over heat, or short circuit (except ATEX

coils).

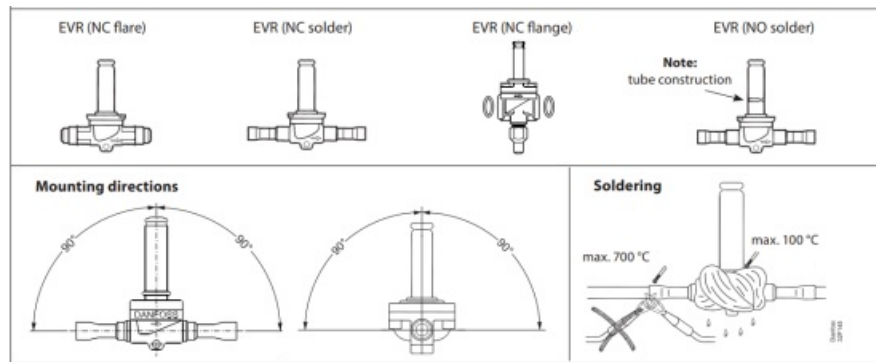

Coil and O-ring

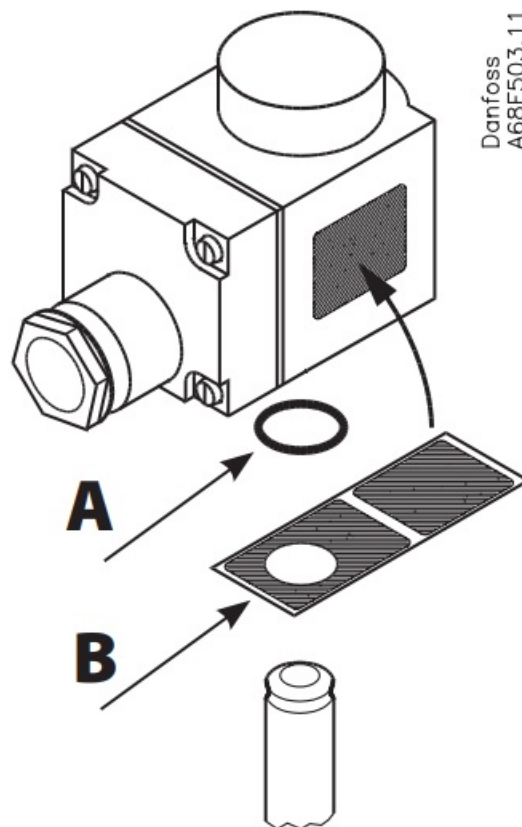


- A: Be sure that the O-ring is in place
- B: Sticker applies only to UL products



Warning

Never switch on power to the coil when the coil is dismantled from the valve. Otherwise the coil may be damaged and there is risk of injuries and burns.

Electrical connections

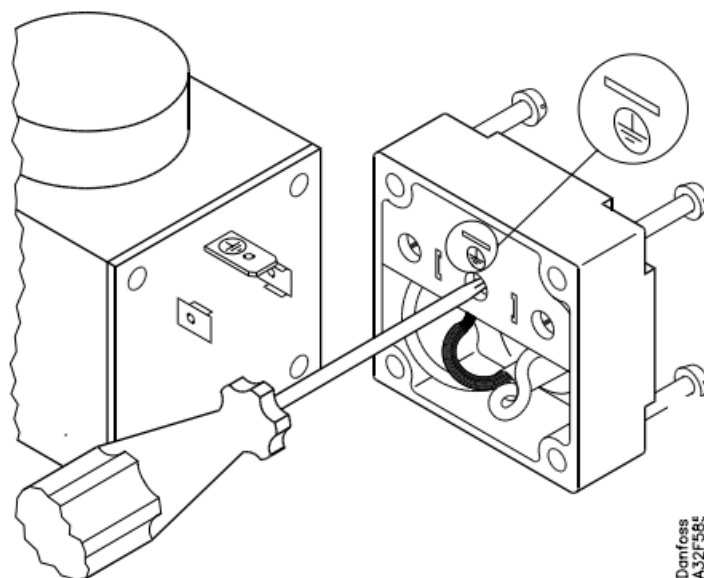


Max. coil temperature	
9 W AC (EVR 2)	tmax = 40 °C
10/12 W AC	tmax = 80 °C
20 W DC	tmax = 50 °C
10 W AC	tmax = 55 °C

Media temperature	
Min. medium temperature	tmin. = -40 °C
Max. medium temperature	tmax = 105 °C


	EVR 2 – EVR 8 [bar]	EVR 10 [bar]	EVR 15 – EVR 22 [bar]
Max. working pressure PS/MWP	45.2	35	32
Max. operating diff. pressure (MOPD)	Coil dependent		

Flare mounting

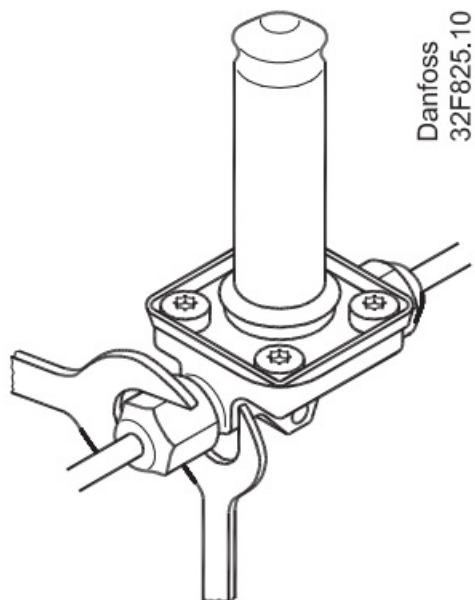


Danfoss
32F825.10

Mounting / dismounting coil

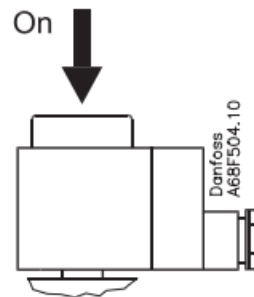


Danfoss
A68F504.10

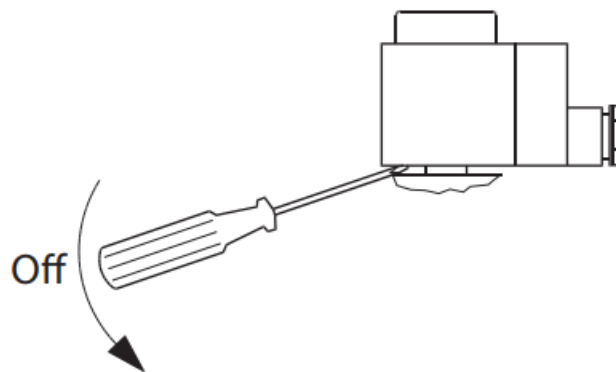


Service only

Mounting / dismounting of top part

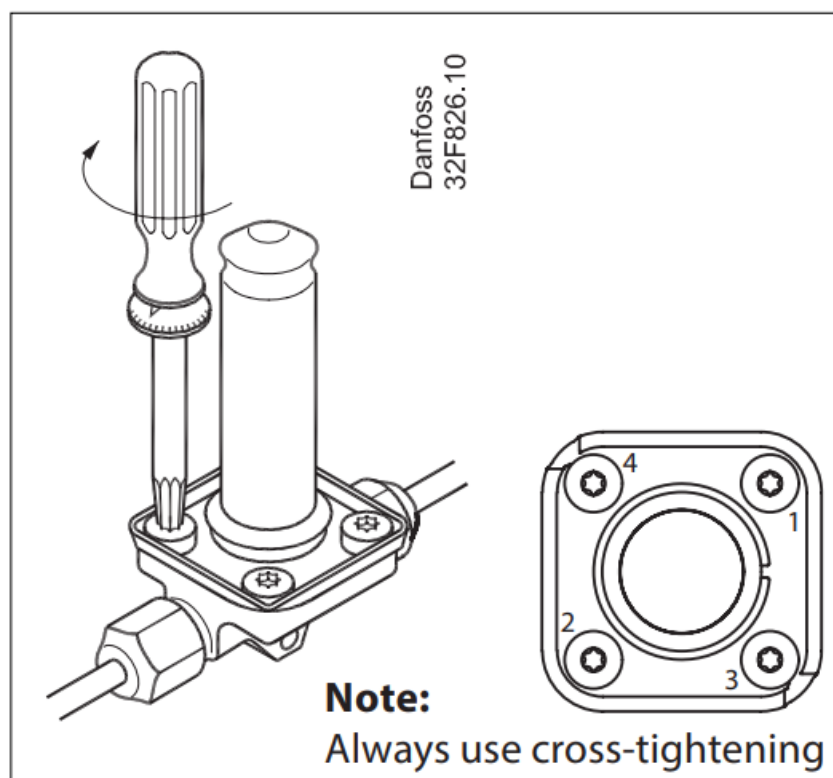


Type	[Nm]	[kpm]	[ft-lbs]	Torx size
EVR 2, EVR 3	1.4	0.15	1	T15
EVR 4, EVR 6, EVR 8	2.0	0.2	1.44	T15/T20

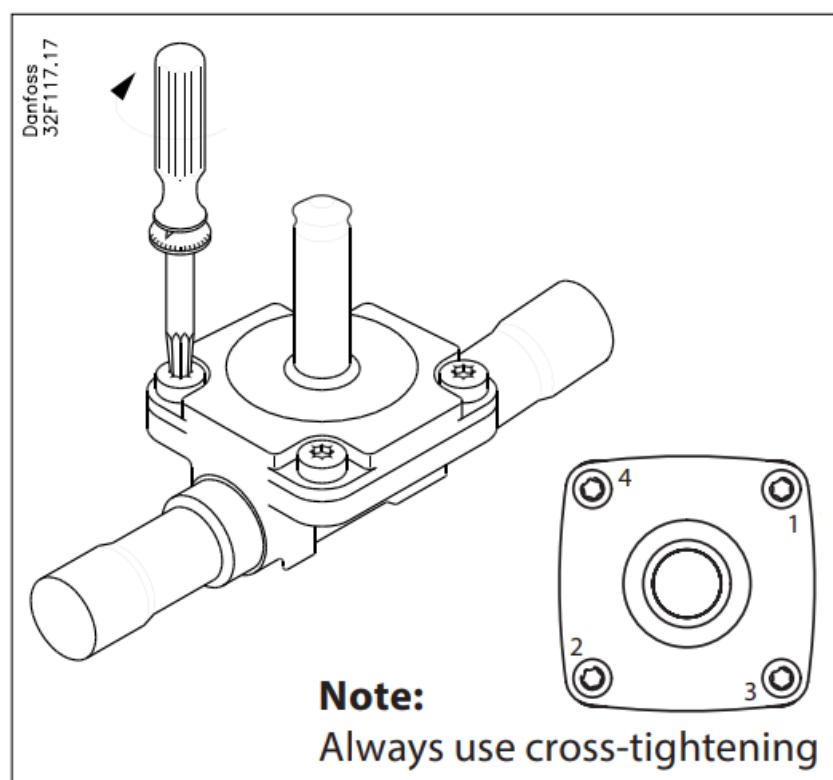


Type	[Nm]	[kpm]	[ft-lbs]	Torx size
EVR 10, EVR 15, EVR 18	2.8	0.3	2	T15
EVR 20, EVR 22	12	1.2	9	T40


Placement of valve seat

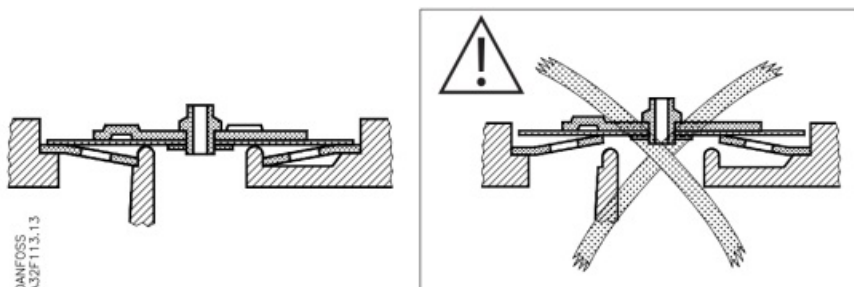


EVR 4 – EVR 8 dismounting gasket and supporting ring: Press and twist

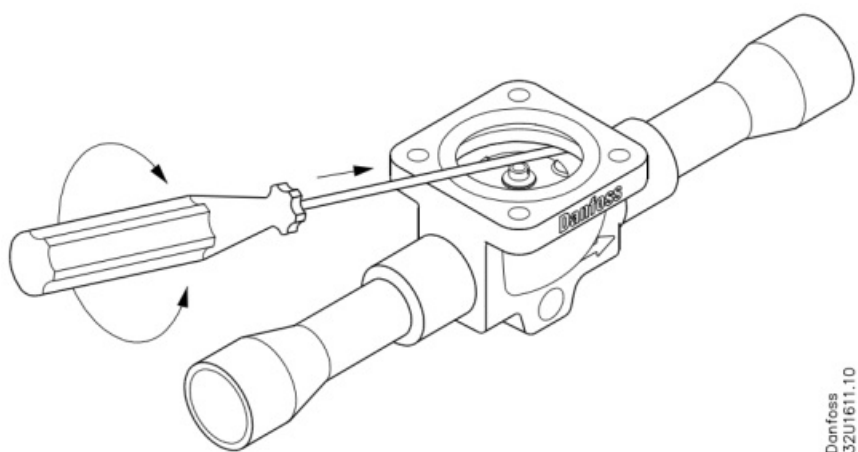


EVR 10 – EVR 22 (NC)

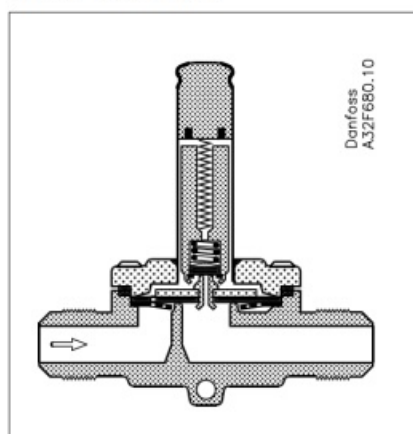


EVR 2 – EVR 8 (NC)

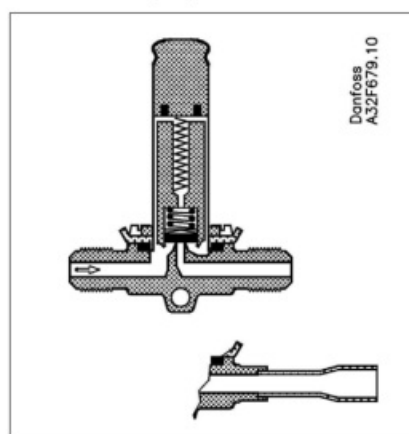

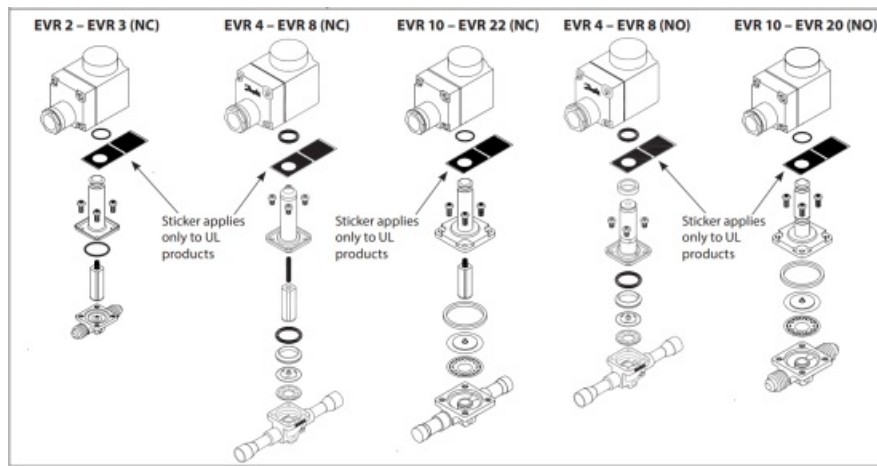

© Danfoss | DCS (sw) | 2016.02
DKRCC.PI.BB0.T2.02 | 2

Documents / Resources

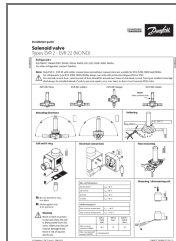

[Danfoss EVR 22 Solenoid Valve](#) [pdf] Installation Guide
EVR 2, EVR 22, EVR 22 Solenoid Valve, Solenoid Valve

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.