



Danfoss FC 51 Micro Drive Instruction Manual

[Home](#) » [Danfoss](#) » Danfoss FC 51 Micro Drive Instruction Manual 



VLT® Micro Drive FC 51


Contents

- [1 FC 51 IP21 Kit Mounting Instruction](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

FC 51 IP21 Kit Mounting Instruction


Step 1

Fit top cover on drive

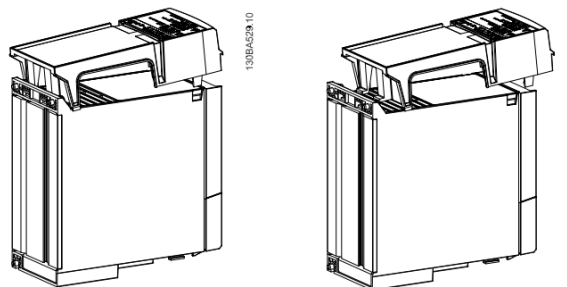

Step 2


Remove knockouts on metal plate and fit rubber gromets.

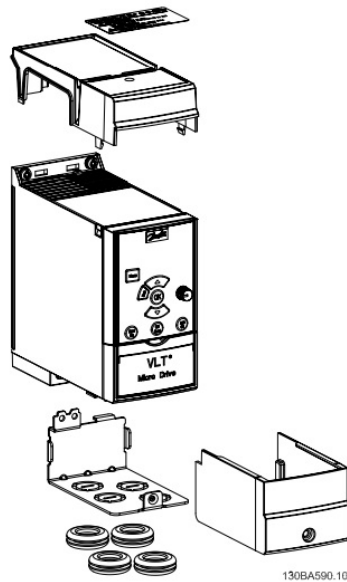

Step 3


Mount metal plate on drive and tighten screws.

Tightening torque: 2 Nm

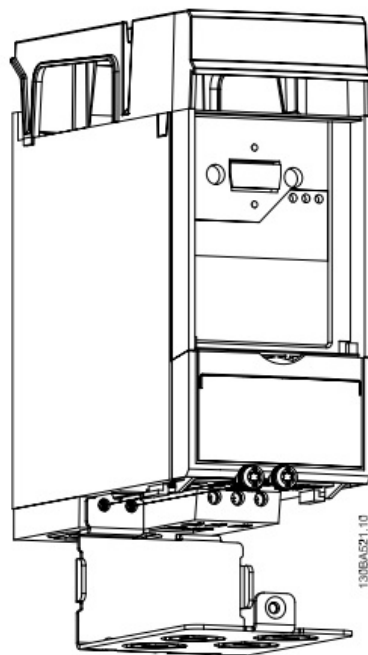

Step 4

Fit bottom cover on drive and tighten screw.

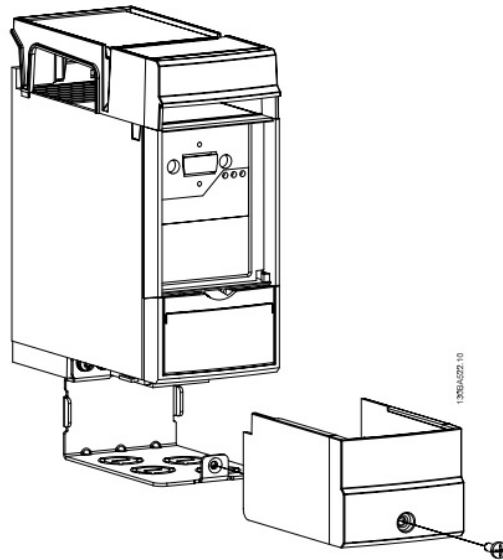

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

Danfoss



Documents / Resources

	<p>Danfoss FC 51 Micro Drive [pdf] Instruction Manual FC 51 Micro Drive, FC 51, Micro Drive, Drive</p>
	<p>Danfoss FC 51 Micro Drive [pdf] Instruction Manual FC 51 Micro Drive, FC 51, Micro Drive, Drive</p>
	<p>Danfoss FC 51 Micro Drive [pdf] Installation Guide FC 51 Micro Drive, FC 51, Micro Drive, Drive</p>

References

-  [Global AC drive manufacturer - Danfoss Drives | Danfoss](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.