

## Danfoss FC-51 VLT Micro Drive



# Danfoss FC-51 VLT Micro Drive Instruction Manual

[Home](#) » [Danfoss](#) » Danfoss FC-51 VLT Micro Drive Instruction Manual 

### Contents

- [1 Danfoss FC-51 VLT Micro Drive](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQs](#)
- [5 Mounting Instruction](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)



## Danfoss FC-51 VLT Micro Drive



## Product Information

- **Specifications**

- **Product Name:** VLT Micro Drive FC 51
- **Model Number:** 132R0018
- **Revision Date:** 2008-12-03
- **Mounting:** Decoupling plate required
- **Tightening Torque:** 2 Nm

## Product Usage Instructions

- **Step 1:** Mounting the Decoupling Plate
  - Place the decoupling plate on the drive.
  - Fasten the plate with two screws using a torque of 2 Nm.
- **Step 2:** Mounting the VLT Micro Drive FC 51
  - Mount the VLT Micro Drive FC 51 on the decoupling plate securely.

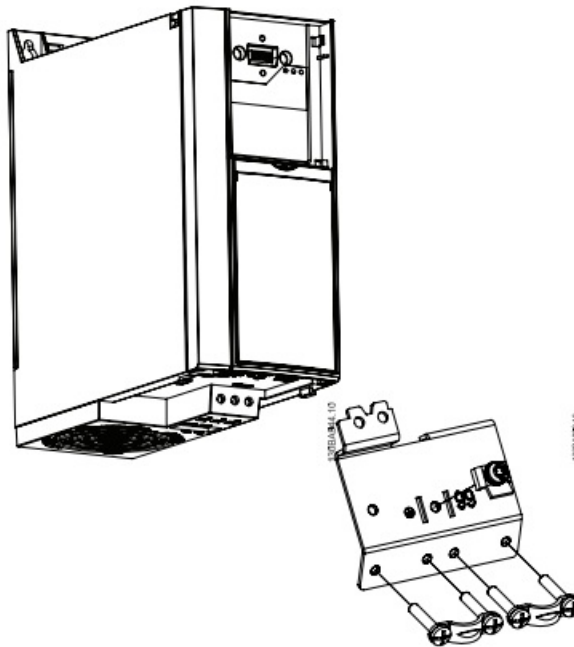
## FAQs

- **Q: Do I need any special tools to mount the VLT Micro Drive FC 51?**
  - **A:** You will need two screws and a torque wrench with a torque setting of 2 Nm for mounting the decoupling plate and drive.
- **Q: Can I mount the VLT Micro Drive FC 51 without using a decoupling plate?**
  - **A:** No, a decoupling plate is required for the proper mounting of the VLT Micro Drive FC 51.

## Mounting Instruction

### FC 51 De-coupling Plate Mounting Instruction for M3

- **Step 1**
  - Mount the decoupling plate on the drive and fasten with two screws. Tightening torque: 2 Nm

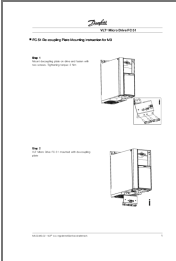
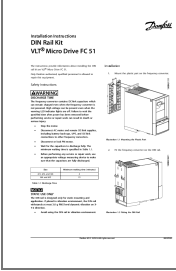


- **Step 2**

- VLT Micro Drive FC 51 mounted with a de-coupling plate



Danfoss can accept no responsibility for possible errors in catalogs, brochures, and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are the property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved. **Rev.** 2008-12-03

	<a href="#">Danfoss FC-51 VLT Micro Drive</a> [pdf] Instruction Manual FC-51 VLT Micro Drive, VLT Micro Drive, Micro Drive, Drive
	<a href="#">Danfoss FC 51 VLT Micro Drive</a> [pdf] Installation Guide FC 51, FC 51 VLT Micro Drive, VLT Micro Drive, Micro Drive, Drive

## References

- [🌐 Global AC drive manufacturer - Danfoss Drives | Danfoss](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.