



Danfoss FC51 Type 1 Configurators Drives Configurators Kit Instruction Manual

[Home](#) » [Danfoss](#) » Danfoss FC51 Type 1 Configurators Drives Configurators Kit Instruction Manual 



VLT® Micro Drive FC 51

Contents

[1 FC 51 Type1 Kit Mounting Instruction for M4 and M5](#)

[2 Documents / Resources](#)

[2.1 References](#)

[3 Related Posts](#)

FC 51 Type1 Kit Mounting Instruction for M4 and M5


Step 1

Mount metal plate on drive and tighten the screws. Tightening torque: 2 Nm.

Conduit sizes:


3 x 1/2"

3 x 1"

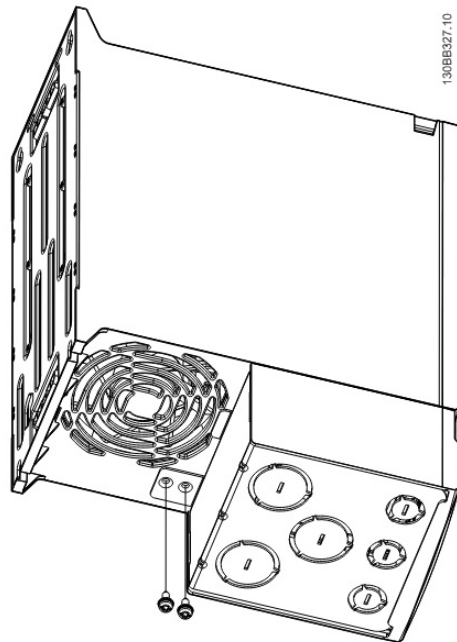

Step 2

Fit bottom cover on drive and tighten screw.

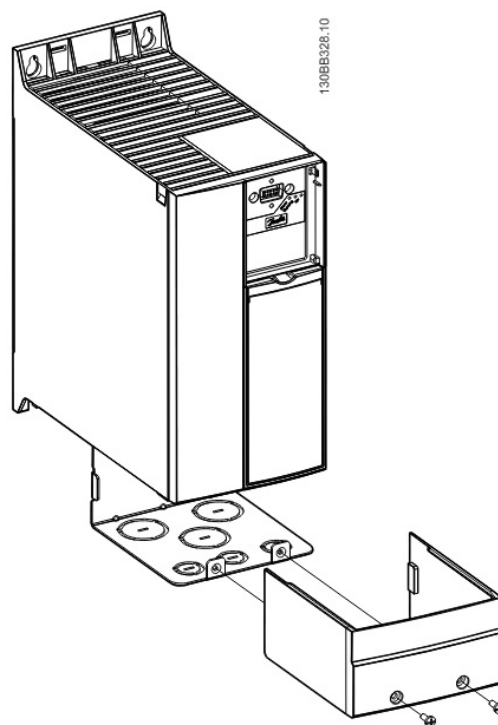


Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed.

All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

132R0071



Documents / Resources

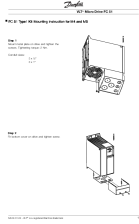	<p>Danfoss FC51 Type 1 Configurators Drives Configurators Kit [pdf] Instruction Manual FC51 Type 1 Configurators Drives Configurators Kit, Type 1 Configurators Drives Configurators Kit, Configurators Drives Configurators Kit, Drives Configurators Kit, Configurators Kit</p>
---	---

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.