

Danfoss H6-H8 Frequency Converter



Danfoss H6-H8 Frequency Converter Instruction Manual

[Home](#) » [Danfoss](#) » Danfoss H6-H8 Frequency Converter Instruction Manual 

Contents

- 1 Danfoss H6-H8 Frequency Converter
- 2 Product Information
- 3 Product Usage Instructions
- 4 FAQs
- 5 Mounting Instruction
- 6 Documents / Resources
 - 6.1 References
- 7 Related Posts



Danfoss H6-H8 Frequency Converter



Product Information

- **Specifications:**

- **Model Number:** 130BB913.10
- **Rev. Date:** 2010-09-28
- **IP Rating:** IP21 (with LCP mounted)

Product Usage Instructions

- **Step 1:** Top Cover Installation
 - Fit the top cover onto the frequency converter using M5 screws.
- **Step 2:** Bottom Cover Installation
 - Fit the bottom cover onto the frequency converter and tighten an M4 screw.
 - **Note:** IP21 rating is only achieved when the LCP is mounted.


FAQs

- **Q: What is the importance of mounting the LCP for achieving an IP21 rating?**
 - **A:** The LCP (Local Control Panel) provides additional protection and sealing to ensure the IP21 rating is maintained. Without the LCP, the device may not meet the required level of protection against solid foreign objects.
- **Q: Can I use different screw sizes for installing the covers?**
 - **A:** It is recommended to use M5 screws for the top cover and M4 screws for the bottom cover as specified in the instructions to ensure proper fit and secure installation.

Mounting Instruction

VLT® HVAC Basic Drive IP21/Type 1 Kit Mounting Instruction for H6 – H8

- **Step 1** Fit the top cover onto the frequency converter with M5 screws.

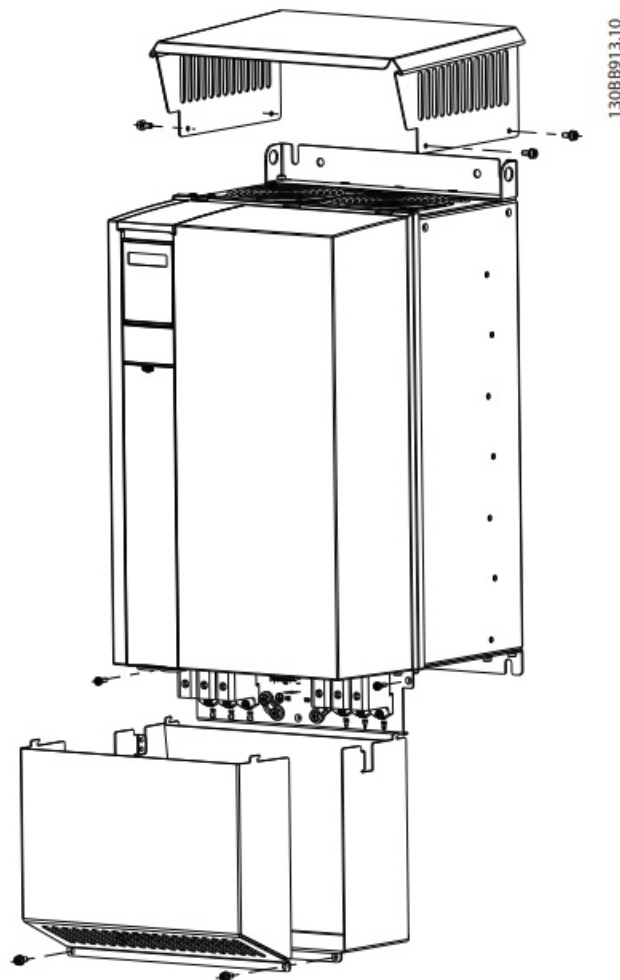


- **Step 2** Fit the bottom cover onto the frequency converter and tighten an M4 screw.
 - **Note:** IP21 is only achieved with LCP mounted.

Danfoss can accept no responsibility for possible errors in catalogs, brochures, and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are the property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

- **Rev.** 2010-09-28
- MI.18.H1.02 – VLT® is a registered Danfoss trademark 1

Documents / Resources

	<p>Danfoss H6-H8 Frequency Converter [pdf] Instruction Manual H6-H8 Frequency Converter, H6-H8, Frequency Converter, Converter</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.