



HG12P Semi
Hermetic Atex



Danfoss HG12P Semi Hermetic Atex User Guide

[Home](#) » [Danfoss](#) » Danfoss HG12P Semi Hermetic Atex User Guide 

Contents

- [1 Danfoss HG12P Semi Hermetic Atex](#)
- [2 Safety](#)
- [3 Safety instructions for use of flammable refrigerants](#)
- [4 Product description](#)
- [5 Areas of application](#)
- [6 Areas of application at HC and LG compressors](#)
- [7 Compressor assembly](#)
- [8 Electrical connection](#)
- [9 Commissioning](#)
- [10 Maintenance](#)
- [11 Technical data](#)
- [12 Dimensions and connections](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)



Danfoss HG12P Semi Hermetic Atex



About these instructions

Read these instructions before assembly and before using the compressor. This will avoid misunderstandings and prevent damage. Improper assembly and use of the compressor can result in serious or fatal injury. Observe the safety instructions contained in these instructions. These instructions must be passed onto the end customer along with the unit in which the compressor is installed

Safety

Identification of safety instructions:



DANGER

- Indicates a dangerous situation which, if not avoided, will cause immediate fatal or serious injury.



WARNING

- Indicates a dangerous situation which, if not avoided, may cause fatal or serious injury.



CAUTION

- Indicates a dangerous situation which, if not avoided, may cause fairly severe or minor injury.



ATTENTION

- Indicates a situation which, if not avoided, may cause property damage.



- Important information or tips on simplifying work.

Qualifications required of personnel

WARNING

Inadequately qualified personnel poses the risk of accidents, the consequence being serious or fatal injury. Work on compressors is therefore reserved for personnel which is qualified to work on pressurized refrigerant systems: For example, a refrigeration technician, refrigeration mechatronic engineer. As well as professions with comparable training, which enables personnel to assemble, install, maintain and repair refrigeration and air-conditioning systems. Personnel must be capable of assessing the work to be carried out and recognising any potential dangers.

General safety instructions

WARNING

Risk of accidents.

- Refrigerating compressors are pressurised machines and as such call for heightened caution and care in handling.
- The maximum permissible overpressure must not be exceeded, even for testing purposes.

Risk of burns!

- Depending on the operating conditions, surface temperatures of over 60 °C on the discharge side or below 0 °C on the suction side can be reached.
- Avoid contact with refrigerant necessarily. Contact with refrigerant can cause severe burns and skin damage.

Intended use

WARNING

- The compressor may not be used in potentially explosive environments!

These assembly instructions describe the standard version of the compressor named in the title manufactured by Bock. Bock refrigerating compressors are intended for installation in a machine (within the EU according to the EU Directives 2006/42/EC Machinery Directive and 2014/68/EU Pressure Equipment Directive). Commissioning is permissible only if the compressor has been installed in accordance with these assembly instructions and the entire system into which it is integrated has been inspected and approved in accordance with legal regulations. The compressors are intended for use in refrigeration systems in compliance with the limits of application. Only the refrigerant specified in these instructions may be used. Any other use of the compressor is prohibited!

Safety instructions for use of flammable refrigerants

Safety instructions

DANGER

- Explosion and fire risk! Hydrocarbons and synthetic HFO refrigerants are colourless, combustible gases which occur naturally and which are explosive in a certain blend!
- Hydrocarbons are classified into the safety group A3 (highly-inflammable refrigerant) according to EN 378.
- HFO refrigerants are classified into the safety group A2L (hardly-inflammable refrigerant) according to EN 378. As they are heavier than air, the operating location must be above ground level to allow unrestricted discharge of the gas.
- By means of a risk and hazard analysis, appropriate technical measures are to be identified in order to achieve sufficient risk reduction. If necessary, a classification of the hazardous areas according to EN60079-10-1 should be carried out. If the refrigerant concentration exceeds the value of 25% of the lower flammability limit (LEL), all equipment in the hazardous area which is not permitted for operation in hazardous areas must be immediately switched off without any voltage.
- Use only suitable equipment approved for flammable refrigerants.
- Observe the national regulations.

INFO

- Semi-hermetic compressors are to be classified as “technically tight” (see e.g. TRBS 2152 part 2 / TRGS 722).

Qualifications required of personnel

WARNING

- Inadequately qualified personnel poses the risk of accidents, the consequence being serious or fatal injury. Work on the compressor may therefore only be carried out by persons who are trained in handling flammable refrigerants.

Product description

3.1 Short description

- Semi-hermetic two-cylinder reciprocating compressor with oil pump lubrication.
- Suction gas cooled drive motor.

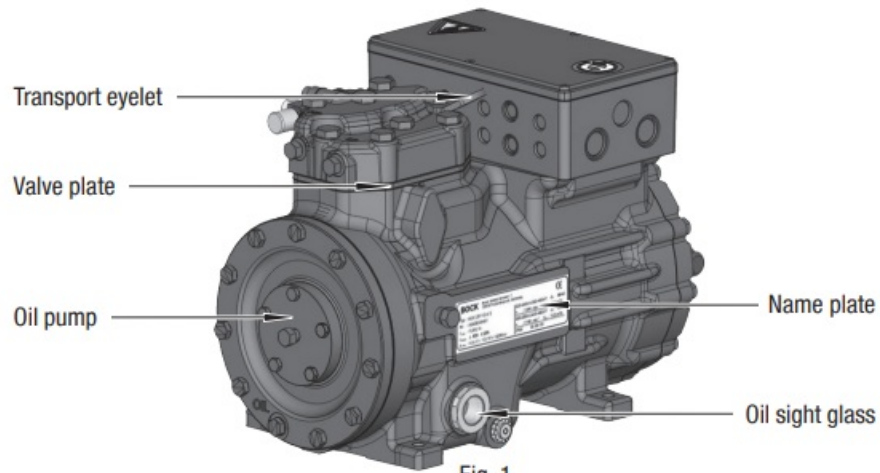


Fig. 1

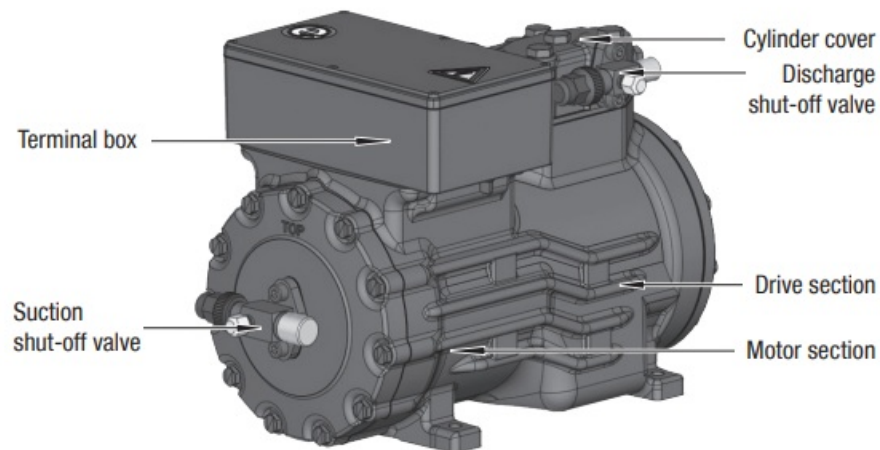


Fig. 2

Dimension and connection values can be found in Chapter 11

Name plate (example)

BOCKBock GmbH, Benzstr. 7
72636 Frickenhausen, Germany

1	Typ : HGX12P/110-4S	220-240VΔ/380-420VY -3- 50HZ	6
2	Nr. : AS35830A001	n : 1450 min ⁻¹ V _{th.} : 9,4 m ³ /h	7
3	I _{max} : 10,6/6,1A	265-290VΔ/440-480VY -3- 60HZ	8
4	I _{block} Δ: 45A γ: 26A	n : 1740 min ⁻¹ V _{th.} : 11,3 m ³ /h	9
5	p _{max} : ND(LP) / HD(HP)= 19/28 bar	IP65 Öl: BOCK lub E55	10
			11
			12
			13

Fig. 3


- 1 Type designation
- 2 Machine number
- 3 maximum operating current
- 4 Starting current (rotor blocked)
- 5 ND (LP): max. admissible operating pressure (g) Low pressure side
HD (HP): max. admissible operating pressure (g) High pressure side

i Observe the limits of application diagrams!

- 6 Voltage, circuit, frequency
- 7 Nominal rotation speed } 50 Hz
- 8 Displacement
- 9 Voltage, circuit, frequency
- 10 Nominal rotation speed } 60 Hz
- 11 Displacement
- 12 Oil type filled at the factory
- 13 Terminal box protection type

i Electrical accessories can change the IP protection class!

Type key (example)

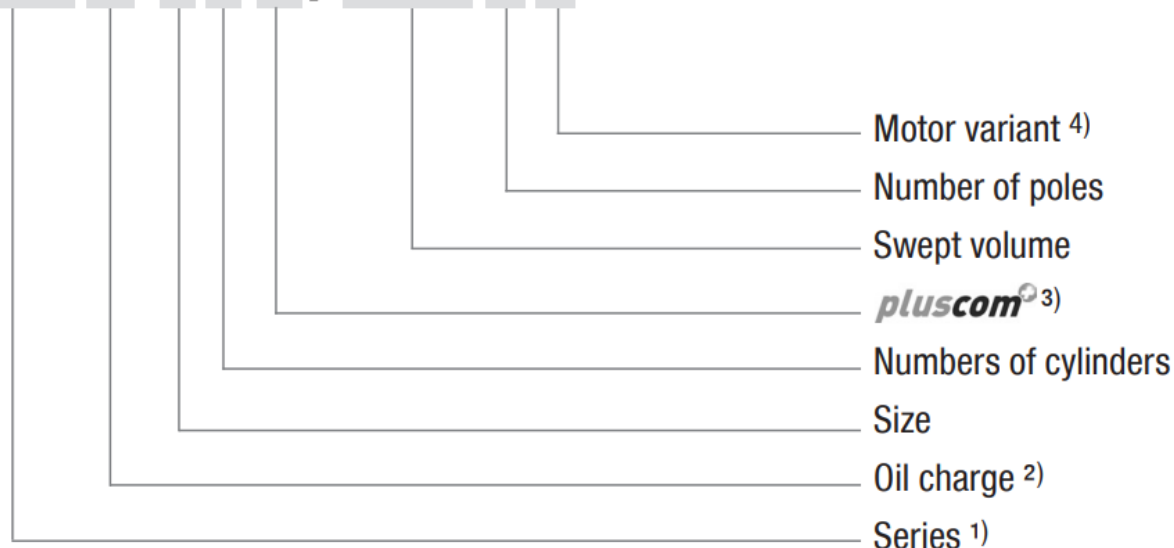HG X 12 P / 110-4 S

¹⁾ HG - Hermetic Gas-cooled (suction gas-cooled) for the normal- / air conditioning applications


²⁾ X - Ester oil charge (HFC refrigerant, e.g. R134a, R404A/R507, R407C)

³⁾ Additional declaration for Pluscom compressors

⁴⁾ S - More powerful motor, e.g. for air-conditioning applications

Type key HC compressor (example)

HG 1 2 P / 110-4 S HC

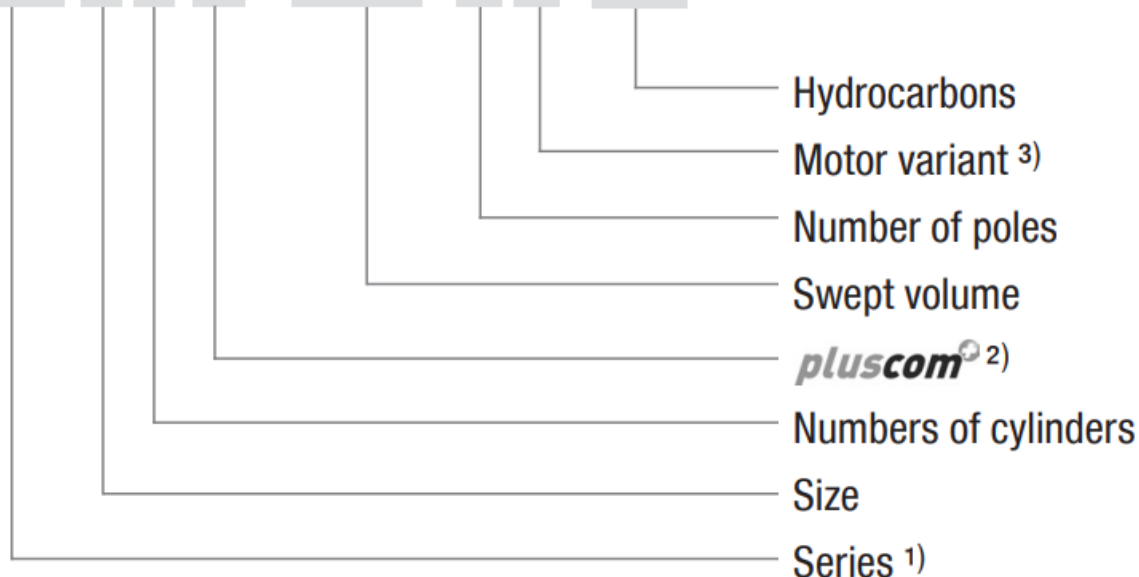


¹⁾ HG - Hermetic Gas-Cooled (suction gas-cooled)

²⁾ Additional declaration for Pluscom compressors

³⁾ S - More powerful motor

Typ key LG compressor (example)

HG X 1 2 P / 110 S 3 LG

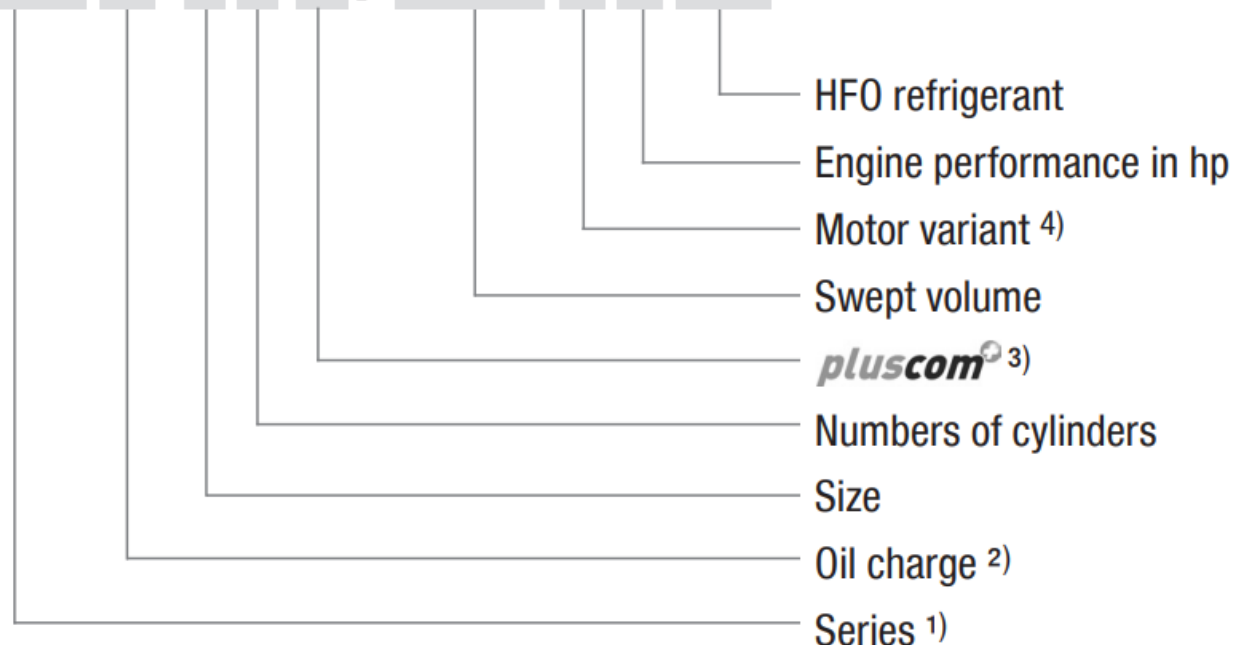

- ¹⁾ HG – Hermetic Gas-Cooled (suction gas-cooled) ²⁾
- X – Ester oil charge
- Additional declaration for Pluscom compressors
- ⁴⁾ S – More powerful motor, e.g. for air-conditioning applications
- ML – Motor for normal cooling and deep freezing

Areas of application

Refrigerants

- HFKW / HFC: R134a, R404A/R507, R407C
- (H)FCKW / (H)CFC: R22

Oil charge

- The compressors are filled at the factory with the following oil type:
- for R404A/R507 BOCK lub E55
- for R22 BOCK lub A46


Compressors with ester oil charge (BOCK lub E55) are marked with an X in the type designation (e.g. HGX12P/110-4).

- INFO For refilling, we recommend the above oil types. Alternatives: see chapter 9.5.



ATTENTION The oil level must be in the visible part of the sight glass; damage to the compressor is possible if overfilled or under-filled!

max.
oil level
min.

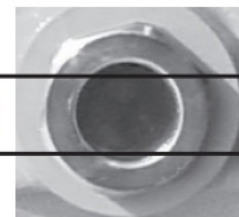

≈ 0,5 Ltr.

Fig. 4

Limits of application

ATTENTION Compressor operation is possible within the operating limits. These can be found in Bock compressor selection tool (VAP) under vap.bock.de. Observe the information given there.

- Permissible ambient temperature (-20 °C) – (+60 °C).
- Max. permissible discharge end temperature 140 °C.
- Max. permissible switching frequency 8x / h.
- A minimum running time of 3 min. steady-state condition (continuous operation) must be achieved.

For operation with supplementary cooling:

- Use only oils with high thermal stability.
- Avoid continuous operation near the threshold.
- For operation with frequency converter (see also chapter 7.9):
- The maximum current and power consumption must not be exceeded. In the case of operation above the mains frequency, the application limit can therefore be limited.

When operating in the vacuum range, there is a danger of air entering on the suction side. This can cause chemical reactions, a pressure rise in the condenser and an elevated compressed-gas temperature. Prevent the ingress of air at all costs!

Max. permissible operating pressure (LP/HP)¹: 19/28 bar

- LP = low pressure HP = high pressure

Areas of application at HC and LG compressors

Refrigerants

- Hydrocarbons: R290, R1270 (Recommendation quality 2.5 (< 50 ppm H₂O))
- HFO refrigerants: R1234ze, R1234yf, R455A, R454C

Oil charge

The compressors are factory-charged with the following oil type:

- HC compressors: BOCK lub G68
- LG compressors: BOCK lub E55

BOCK lub E85 (from t_O > 15 °C, must be specified in the order)

Operating limits

ATTENTION Compressor operation is possible within the operating limits. These can be found in Bock compressor selection tool (VAP) under vap.bock.de. Observe the information given there and the following notes:

- Min. pressure gas temperature ≥ 50 °C (min. 20K over condensing temperature). Suction gas superheating on compressor entrance should be min. 7 – 10 K, must be increased if necessary.
- Min. oil temperature ≥ 30 °C.
- Operation in the vacuum range is not permitted.
- When using a additional fan, the ambient temperature must not exceed 50 °C.

During operation in the vacuum range, there is a danger of air entering on the suction side. This can cause chemical reactions, pressure rise in the condenser and an excessive pressure gas temperature as well as shifting of the refrigerant ignition limit into the critical range. Avoid absolutely any entry of air! Use a low pressure switch! Select a shut-off point min. 50 Pa higher than the prevailing surrounding pressure!

Maximum permissible operating pressure (LP/HP)¹: 19/28 bar



- 1) LP = Low pressure HP = High pressure

Compressor assembly

INFO

- New compressors are factory-filled with inert gas. Leave this service charge in the compressor for as long as possible and prevent the ingress of air. Check the compressor for transport damage before starting any work.

 
Storage and transport

-  Storage at (-30 °C) – (+70 °C), maximum permissible relative humidity 10 % – 95 %, no condensation
-  Do not store in a corrosive, dusty, vaporous atmosphere or in a combustible environment.
- Use transport eyelet. Do not lift manually! Use lifting gear!

Setting up

ATTENTION


Attachments (e.g. pipe holders, additional units, fastening parts, etc.) directly to the compressor are not permissible!



- Provide adequate clearance for maintenance work.
- Ensure adequate compressor ventilation.



 - Do not use in a corrosive, dusty, damp atmosphere or a combustible environment.



- Setup on an even surface or frame with sufficient load-bearing capacity.
- Single compressor preferably on vibration damper. Duplex and parallel circuits always rigid.



- Sun protection: If the compressor is set up outdoors, it has to be protected from direct sunlight.

Pipe connections

ATTENTION

Damage possible. Do not solder as long as the compressor is under pressure. Superheating can damage the valve. Remove the pipe supports therefore from the valve for soldering and accordingly cool the valve body during and after soldering. Only solder using inert gas to inhibit oxidation products (scale).

Compressor assembly

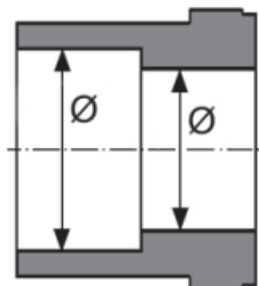


Fig. 5: graduated internal diameter

- The pipe connections have graduated inside diameters so that pipes with standard millimetre and inch dimensions can be used.
- The connection diameters of the shut-off valves are rated for maximum compressor output. The actual required pipe cross section must be matched to the output. The same applies for non-return valves.

Pipes

- Pipes and system components must be clean and dry inside and free of scale, swarf and layers of rust and phosphate. Only use air-tight parts.
- Lay pipes correctly. Suitable vibration compensators must be provided to prevent pipes being cracked and broken by severe vibrations.
- Ensure a proper oil return.
- Keep pressure losses to an absolute minimum.

Laying suction and pressure lines


ATTENTION

Improperly installed pipes can cause cracks and tears, the result being a loss of refrigerant.

INFO

- Proper layout of the suction and discharge lines directly after the compressor is integral to the system's smooth running and vibration behaviour.

A rule of thumb: Always lay the first pipe section starting from the shut-off valve downwards and parallel to the drive shaft.

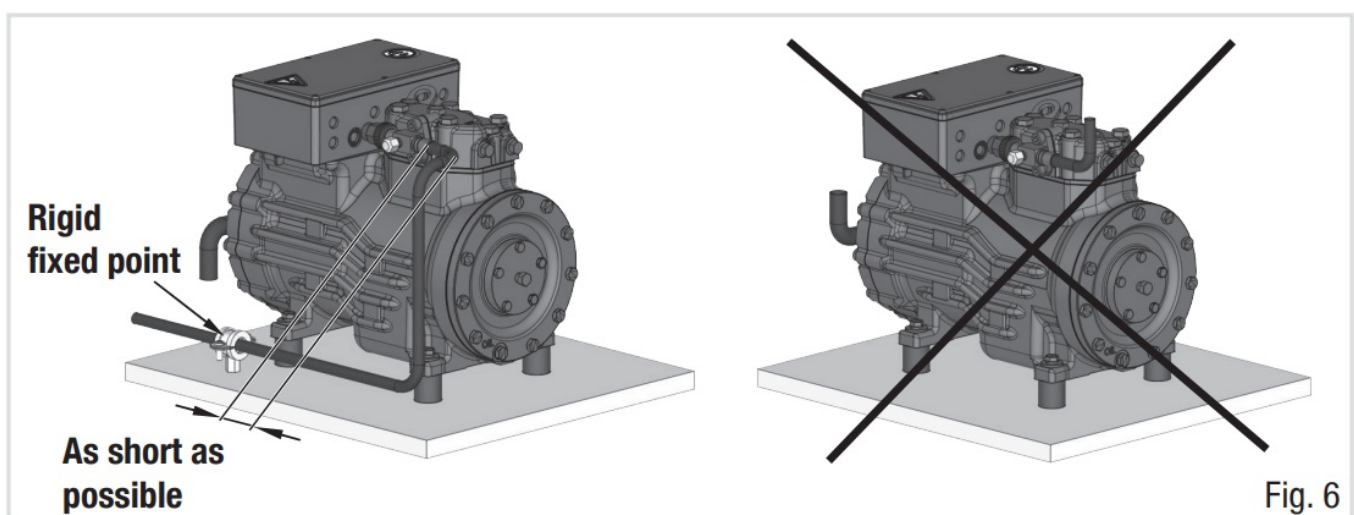

Suction pipe filter and filter drier

- For systems with long pipes and higher degree of contamination, a filter on the suction-side is recommended. The filter has to be renewed depending on the degree of contamination (reduced pressure loss).
- Moisture in the refrigeration circuit can lead to crystal and hydrate formation. For this reason, we recommend

using a filter drier and a sight glass with a moisture indicator.

Operating the shut-off valves

- Before opening or closing the shut-off valve, release the valve spindle seal by approx. 1/4 of a turn counter-clockwise.
- After activating the shut-off valve, re-tighten the adjustable valve spindle seal clockwise.

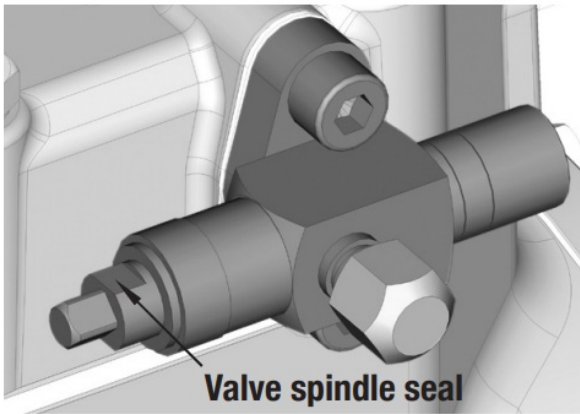


Fig. 7

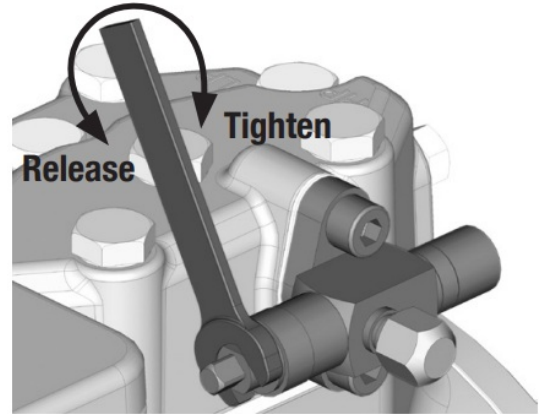


Fig. 8

Operating mode of the lockable service connections

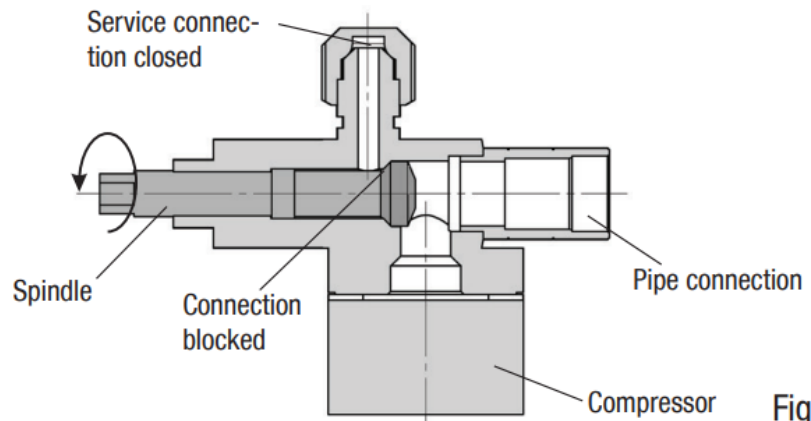


Fig. 9

Opening the shut-off valve:

Spindle: turn to the left (counter-clockwise) as far as it will go.

—> Shut-off valve completely opened / service connection closed.

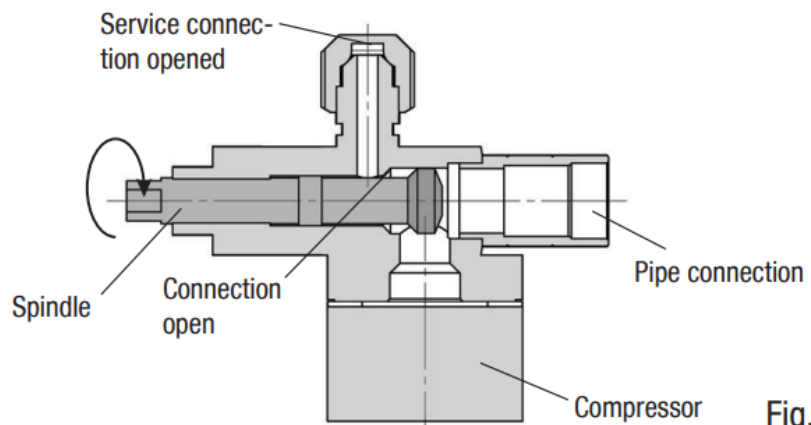


Fig. 10

Opening the service connection

Spindle: Turn $1/2$ - 1 turn to the right clockwise.

—> Service connection opened / shut-off valve opened.

After activating the spindle, generally fit the spindle protection cap again and tighten with 14 – 16 Nm. This serves as a second sealing feature during operation.

Electrical connection

DANGER

- Risk of electric shock! High voltage! Only carry out work when the electrical system is disconnected from the power supply!

ATTENTION

- When attaching accessories with an electrical cable, a minimum bending radius of 3 x the cable diameter must be maintained for laying the cable.

INFO

- Connect the compressor motor in accordance with the circuit diagram (see inside of terminal box).
- Use suitable cable entry point of the correct protection type (see name plate) for routing cables into the terminal

box. Insert the strain reliefs and prevent chafe marks on the cables. Compare the voltage and frequency values with the data for the mains power supply.


Only connect the motor if these values are the same.

Information for contactor and motor contactor selection


All protection devices and switching or monitoring units must be fitted in accordance with the local safety regulations and established specifications (e.g. VDE) as well as with the manufacturer’s infor-mation. Motor protection switches are required! Motor contactors, feed lines, fuses and motor protection switches must be rated on the basis of the maximum working current (see name plate). For motor protection use a current-dependent and time-delayed overload protection device for moni-toring all three phases. Set the overload protection device so that it must be actuated within 2 hours, if there is 1.2 times the max. working current.

Connection of the driving motor

The compressor is designed with a motor for star-delta circuits.

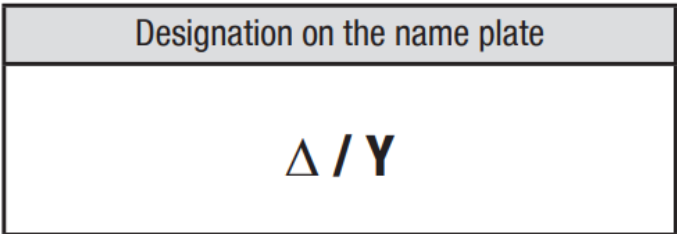


Star-delta start-up is only possible on 230 V voltage supply. Example:

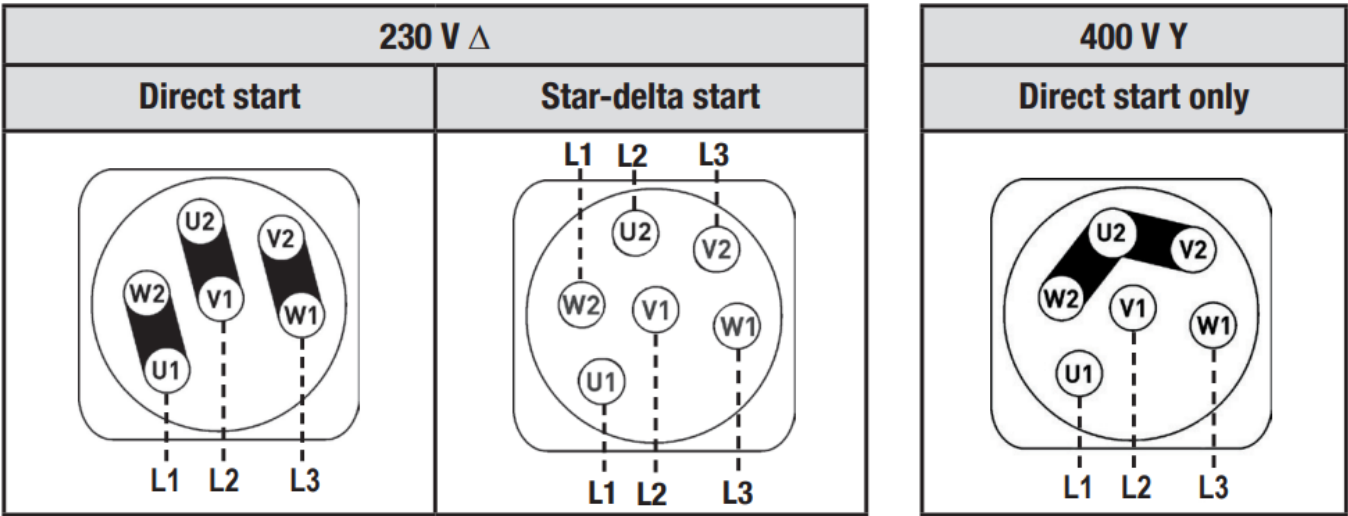

INFO

- The connection examples shown refer to the standard version. In the case of special voltages, the instructions affixed to the terminal box apply.

Circuit diagramm for direct start 230 V Δ / 400 V Y

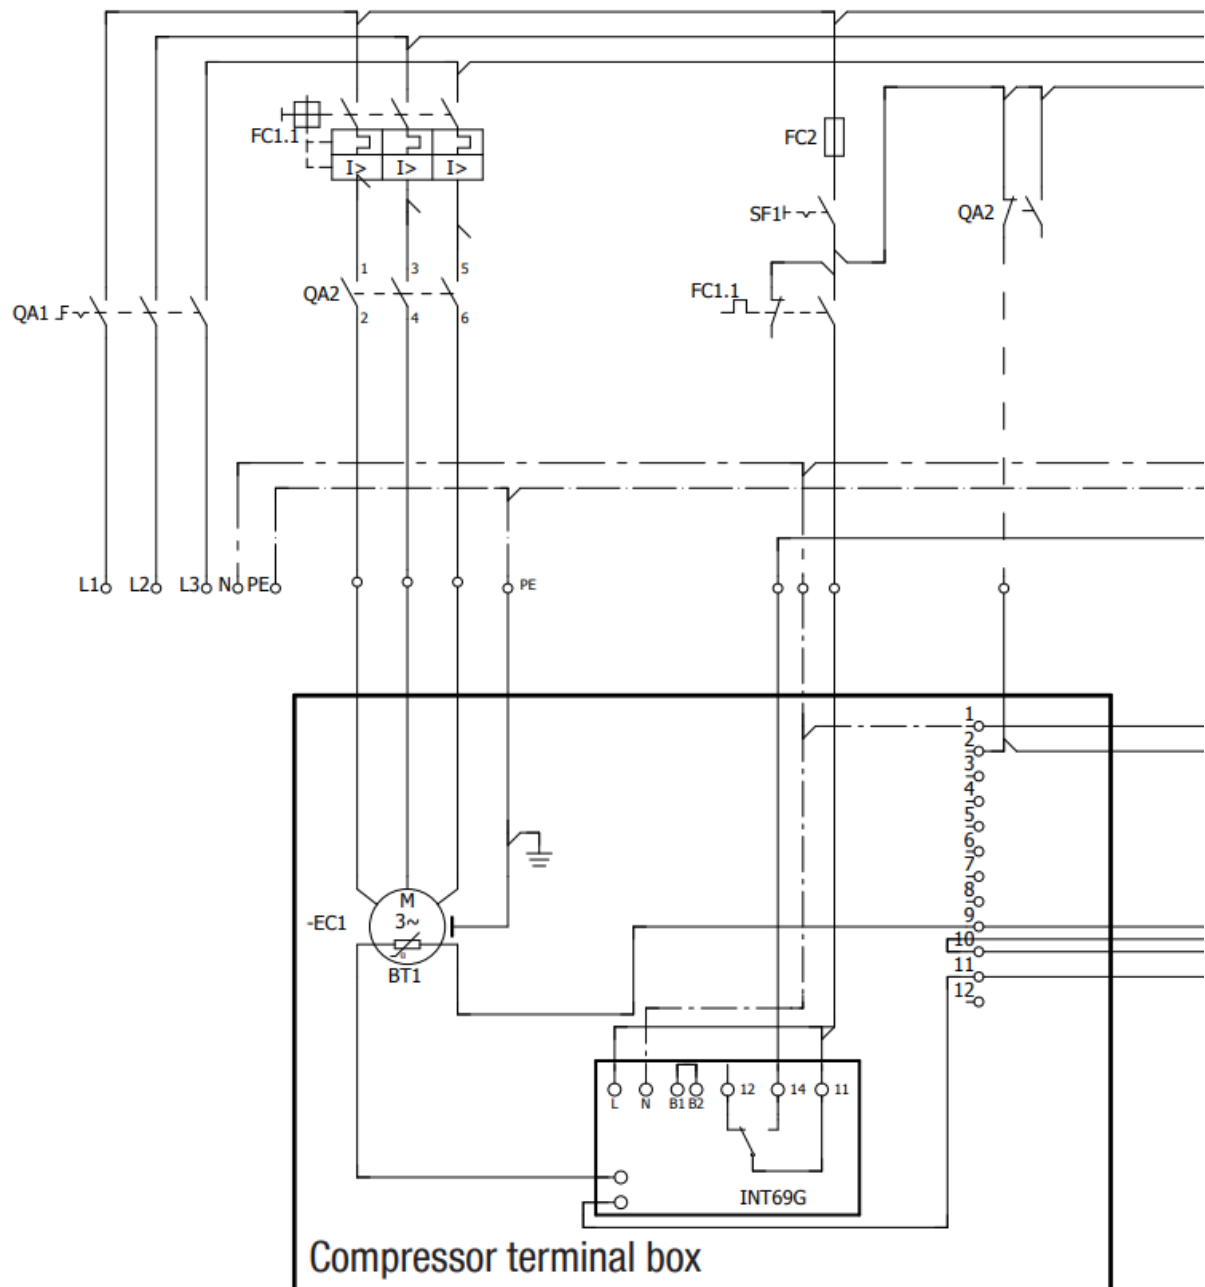

- BT1 Cold conductor (PTC sensor) motor winding
- BT2 Thermal protection thermostat (PTC sensor)
- FC1 Load circuit safety switches
- FC2 Control power circuit fuse
- BP1 High pressure safety monitor
- BP2 Safety chain (high/low pressure monitoring)
- BT3 Release switch (thermostat)

INFO

The relay switching output is executed as a floating changeover contact. This electrical circuit operates according to the quiescent current principle, i.e. the relay drops into a the idle position and deactivates the motor contactor even in case of a sensor break or open circuit.

Connection of the trigger unit INT69 G

INFO

Connect the trigger unit INT69 G in accordance with the circuit diagram. Protect the trigger unit with a delayed-action fuse (FC2) of max. 4 A. In order to guarantee the protection function, install the trigger unit as the first element in the control power circuit.

ATTENTION

Measure circuit BT1 and BT2 (PTC sensor) must not come into contact with external voltage. This would destroy the trigger unit INT69 G and PTC sensors.

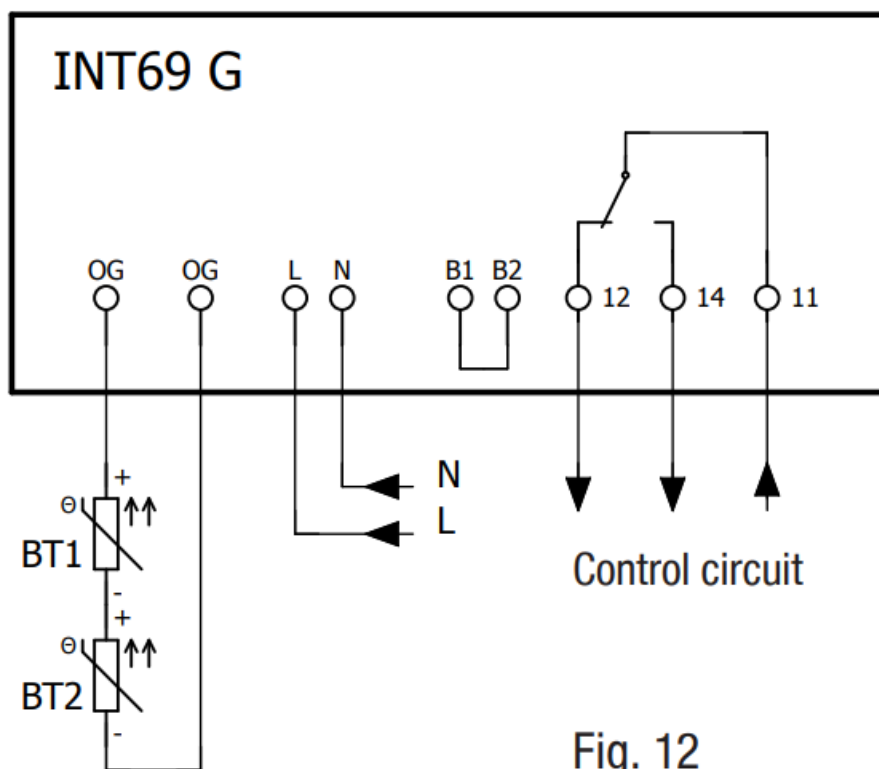


Fig. 12
Terminal box

Function test of the trigger unit INT69 G

Before commissioning, after troubleshooting or making changes to the control power circuit, check the functionality of the trigger unit. Perform this check using a continuity tester or gauge.

	Gauge state	Relay position
1.	Deactivated state	11-12
2.	INT69 G switch-on	11-14
3.	Remove PTC connector	11-12
4.	Insert PTC connector	11-12
5.	Reset after mains on	11-14

Relay position INT69 G

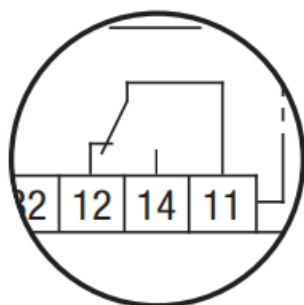


Fig. 13

Electronic trigger unit INT69 G at HC and LG compressors

The supplied INT69 G must be connected according to the wiring diagram shown here in a separate control cabinet, which must be installed outside each danger zone.

ATTENTION

Install heat protection thermostats and cold conductor motor winding in series!

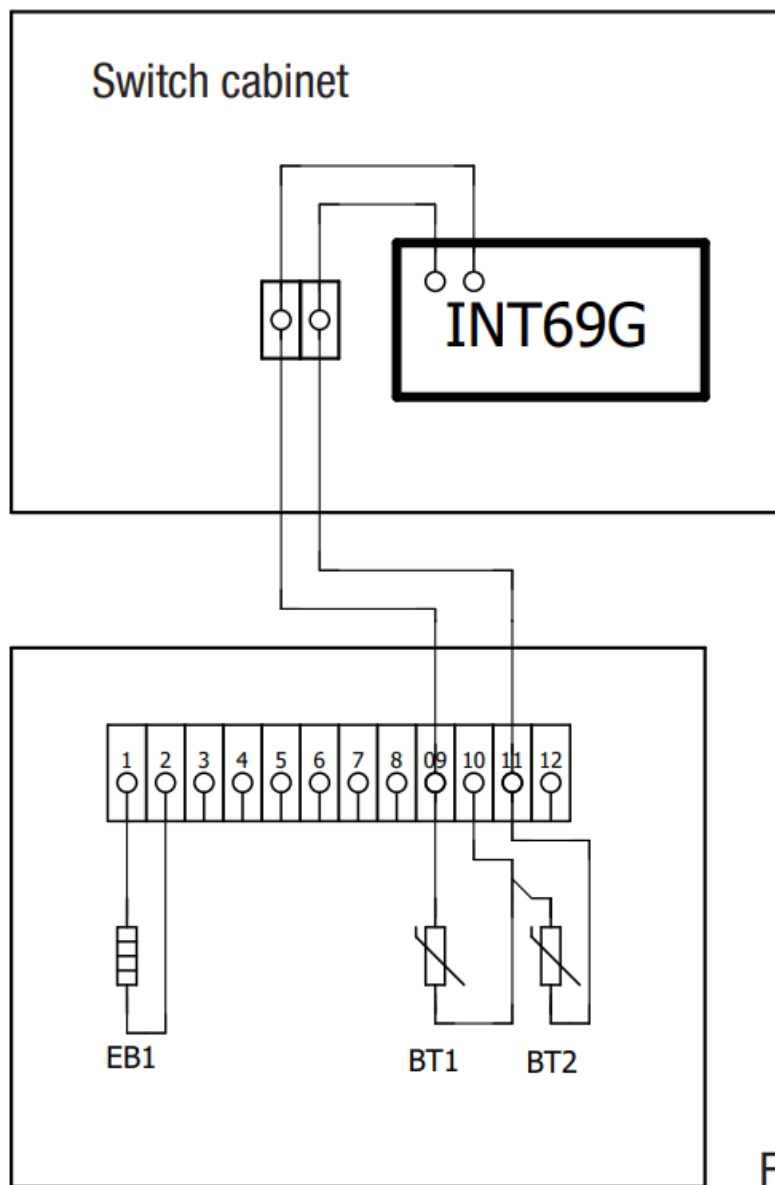


Fig. 14

- BT1 Cold conductor (PTC sensor) motor winding
- BT2 Heat protection thermostat (PTC sensor)
- EB1 Oil sump heater

Oil sump heater at HC and LG compressors

As the solubility of hydrocarbons and HFO refrigerants in oil can be very high, especially at high suction pressures, the compressor must be equipped with an oil sump heater. For this reason, a pump-down circuit is recommended during standstill to reduce the suction-side standstill pressures.

ATTENTION The oil sump heater must generally be connected and operated!

- In a TT- or TN system, a residual current protection device (RCD) must be used.
- In an IT system, an insulation monitoring device must be used. National standards and regulations must be observed.

Selection and operation of compressors with frequency converters

For safe operation of the compressor, the frequency converter must be able to apply an overload of at least 140%

of the compressor's maximum current (I-max.) for at least 3 seconds. When using frequency converters, the following things must also be observed

1. The maximum permissible operating current of the compressor (I-max) (see type plate or technical data) must not be exceeded.
2. If abnormal vibrations occur in the system, the affected frequency ranges in the frequency converter must be blanked out accordingly.
3. The maximum output current of the frequency converter must be greater than the maximum current of the compressor (I-max).
4. After each compressor start, run for at least 1 minute at a minimum frequency of 50 Hz.
5. Carry out all designs and installations in accordance with the local safety regulations and common rules (e.g. VDE) and regulations as well as in accordance with the specifications of the frequency converter manufacturer.

The permissible frequency range can be found in the chapter 10..3

Rotational speed range	0 – f-min	f-min – f-max
Start-up time	< 1 s	ca. 4 s
Switch-off time	immediately	

Commissioning

Preparations for start-up

INFO

To protect the compressor against inadmissible operating conditions, high pressure and low pressure pressostats are mandatory on the installation side. The compressor has undergone trials in the factory and all functions have been tested. There are therefore no special running-in instructions. Check the compressor for transport damage!

Pressure strength test

The compressor has been tested in the factory for pressure integrity. If however the entire system is to be subjected to a pressure integrity test, this should be carried out in accordance with EN 378-2 or a corresponding safety standard without the inclusion of the compressor.

Leak test

DANGER

Risk of bursting! The compressor must only be pressurised using nitrogen (N₂). Never pressurise with oxygen or other gases! The maximum permissible overpressure of the compressor must not be exceeded at any time during the testing process (see name plate data)! Do not mix any refrigerant with the nitrogen as this could cause the ignition limit to shift into the critical range.

- Carry out the leak test on the refrigerating plant in accordance with EN 378-2 or a corresponding safety standard, while always observing the maximum permissible overpressure for the compressor.

Evacuation

ATTENTION

- Do not start the compressor if it is under vacuum. Do not apply any voltage – even for test purposes (must only be operated with refrigerant). Under vacuum, the spark-over and creepage current distances of the terminal board connection bolts shorten; this can result in winding and terminal board damage.
- First evacuate the system and then include the compressor in the evacuation process. Relieve the compressor pressure.
- Open the suction and pressure line shut-off valves.
- Evacuate the suction and discharge pressure sides using the vacuum pump.
- At the end of the evacuation process, the vacuum should be < 1.5 mbar when the pump is switched off. Repeat this process as often as is required.
- For HC and LG compressors suitable equipment approved for flammable refrigerants must be used.

Refrigerant charge

CAUTION

- Wear personal protective clothing such as goggles and protective gloves!
- Make sure that the suction and pressure line shut-off valves are open.
- With the compressor switched off, add the liquid refrigerant directly to the condenser or receiver, breaking the vacuum.
- If the refrigerant needs topping up after starting the compressor, it can be topped up in vapour form on the suction side, or, taking suitable precautions, also in liquid form at the inlet to the evaporator.

ATTENTION

- Avoid overfilling the system with refrigerant!
- To avoid shifts in concentration, zeotropic refrigerant blends (e.g. R407C) must always only be filled into the refrigerating plant in liquid form.
- Do not pour liquid coolant through the suction line valve on the compressor.
- It is not permissible to mix additives with the oil and refrigerant.

Start-up

WARNING

Ensure that both shut-off valves are open before starting the compressor!

- Check that the safety and protection devices (pressure switch, motor protection, electrical contact protection measures, etc.) are all functioning properly.
- Switch on the compressor and let it run for at least 1 minute at a frequency of at least 50 Hz.
- Only then may the speed of the compressor be reduced.
- Check the oil level by: The oil must be visible in the sightglass.

ATTENTION

If larger quantities of oil have to be topped up, there is a risk of oil hammer effects. If this is the case check the oil return!

Avoiding slugging

ATTENTION Slugging can damage the compressor and cause refrigerant to leak.

To prevent slugging:

- The complete refrigeration system must be properly designed.
- All components must be compatibly rated with each other with regard to output (particularly the evaporator and expansion valves).
- Suction gas superheat at the compressor input should be min. 7 – 10 K. (check the setting of the expansion valve). For HC and LG compressors see chapter 5.3.
- The system must reach a state of equilibrium.
- Particularly in critical systems (e.g. several evaporator points), measures are recommended such as replacement of liquid traps, solenoid valve in the liquid line, etc.

There should be no movement of coolant whatsoever while the compressor is at a standstill. The use of a check valve is strongly recommended, especially for heat pump applications. Otherwise there is a risk of back condensation, which can result in compressor damage.

Connection of oil level regulator

The connection "O" is provided for installing an oil level regulator. A corresponding adapter must be obtained from the trade.

Maintenance

Preparation

WARNING Before starting any work on the compressor:

- Switch off the compressor and secure it to prevent a restart.
- Relieve compressor of system pressure.
- Prevent air from infiltrating the system!

After maintenance has been performed:

- Connect safety switch.
- Evacuate compressor.
- Release switch lock.

Work to be carried out

In order to guarantee optimum operational reliability and service life of the compressor, we recommend carrying out servicing and inspection work at regular intervals:

Oil change:

- not mandatory for factory-produced series systems.
- for field installations or when operating near the application limit: for the first time after 100 to 200 operating hours, then approx. every 3 years or 10,000 – 12,000 operating hours. Dispose of used oil according to the regulations; observe national regulations.


Annual checks: Oil level, leak tightness, running noises, pressures, temperatures, function of auxiliary devices such as oil sump heater, pressure switch.

Condensate drainage

The terminal box has the option for Condensate drainage (see Fig. 15).

ATTENTION

When the condensate drain is used, the protection rating of the terminal box is reduced from IP65 to IP32!

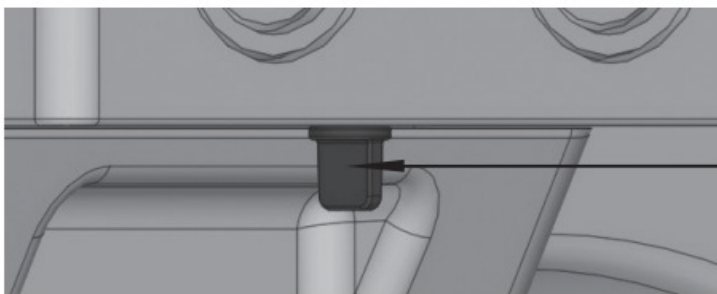

Condensate drainage
Fig. 15

Spare parts recommendation/accessories

Available spare parts and accessories can be found on our compressor selection tool under vap.bock.de as well as at bockshop.bock.de. Only use genuine Bock spare parts!

Lubricants / oil

The oil type filled as standard in the factory is marked on the name plate, and this should always be used, even in the case of maintenance units. Alternative oil types can vary significantly in quality due to additives or inferior raw materials by the manufacturer. Validation within the compressors entire operating limits can not be guaranteed, if such alternative oil types are used. It is for this reason, that we only recommend the use of oil from Bock! Bock assumes no liability for any damage arising from alternative oil types. PAG oils such as BOCKlub G68 are highly hygroscopic, which makes them tend to absorb moisture quickly and at a high rate. As a result, the contact of the oil with ambient air must be avoided.

- Refrigerants Bock standard oil types
- HFC (e.g. R134a, R407C, R404A) BOCK lub E55
- HFO (e.g. R1234yf, R1234ze, R455A, R454C)
- BOCK lub E55
- BOCK lub E85 (from $t_O > 15\text{ }^{\circ}\text{C}$)
- HCFC (e.g. R22) BOCK lub A46

- HC (e.g. R290) BOCK lub G68

Decommissioning

Close the shut-off valves on the compressor. Drain the refrigerant (it must not be discharged into the environment) and dispose of it according to the regulations. When the compressor is depressurised, undo the fastening screws of the shut-off valves. Remove the compressor using an appropriate hoist. Dispose of the oil inside in accordance with the applicable national regulations.

Additional information when using flammable refrigerants

WARNING

- During maintenance and repair, it must be noted that hydrocarbon and synthetic HFO refrigerants residues may dissolve in the oil. Therefore, electrical tests must not be conducted while oil remains in the compressor.
- If the compressor is to be removed from the system for maintenance or repair, the remaining refrigerant must be suctioned out and the compressor evacuated. The compressor must then be filled with nitrogen (max. 0.5 bar) and sealed gas-tight.

Technical data

Type*	N o. of cy lin ders	Displac ement (1450 / 1 740 rpm)	Electrical data 3					W eig ht	Connections 4		Oil ch ar ge (e x wo rk s)	Oil ch ar ge (si gh t g las s c en tre)	Sound p ressure level
			1	2	2	Starti ng curre nt (rotor locke d)	Per mis sibl e fr equ enc y ra nge		Disch arge l ine D V	Sucti on lin e SV			
		50 / 60 Hz						D / Y					D / Y
				m3/h	V	A	kW	A	Hz	kg			mm (i nch)
HG12P/6 0-4 S	2	5.4 / 6.4	220- 240 V D /	6.8 / 3. 9	2.2	40 / 2 3	30- 70	48	12 (1/ 2)	16 (5/ 8)	0.8	0.6	58.5 / 58 / 57
HG12P/7 5-4		6.7 / 8.1	380- 420 V Y	7.1 / 4. 1	2.3	40 / 2 3		48					59 / 58.5 / 58
HG12P/7 5-4 S		6.7 / 8.1	– 3 – 50 H z	8.0 / 4. 6	2.6	43 / 2 5		49					59 / 58.5 / 58
HG12P/9 0-4		8.0 / 9.6	265- 290 V D /	8.5 / 4. 9	2.8	43 / 2 5		49					59.5 / 59 / 58
HG12P/9 0-4 S		8.0 / 9.6	440- 480 V Y	8.8 / 5. 1	2.9	45 / 2 6		49					59.5 / 59 / 58
HG12P/1 10-4		9.4 / 11. 3	– 3 – 60 H z	9.2 / 5. 3	3.1	43 / 2 5		49					60 / 59 / 58
HG12P/1 10-4 S		9.4 / 11. 3		10.6 / 6 .1	3.6	45 / 2 6		49					60 / 59 / 58

The technical data for the HC and LG compressors are identical to the standard compressors. Therefore, these designations are not included in the compressor type specification.


- Tolerance ($\pm 10\%$) relative to the mean value of the voltage range. Other voltages and types of current on request.
- The specifications for max. power consumption apply for 50 Hz operation. For 60 Hz operation, the specifications have to be multiplied by the factor
- The max. working current remains unchanged.
- Take account of the max. operating current / max. power consumption for design of fuses, supply lines and safety devices. Fuse: Consumption category AC3
- All specifications are based on the average of the voltage range For solder connections
- L = low temperature (-35 / 40 °C), M = normal cooling (-10 / 45 °C),
- H = air conditioning (5 / 50 °C) sound pressure level measured in
- low reflection measuring area, measuring distance 1m. Compressor operation at 50 Hz (1450 rpm), refrigerant

R404A. Values stated are average values, tolerance ± 2 dB(A).

Dimensions and connections

HG12P

- (Dimensions and connections for HC and LG compressors are identical to the standard compressors)

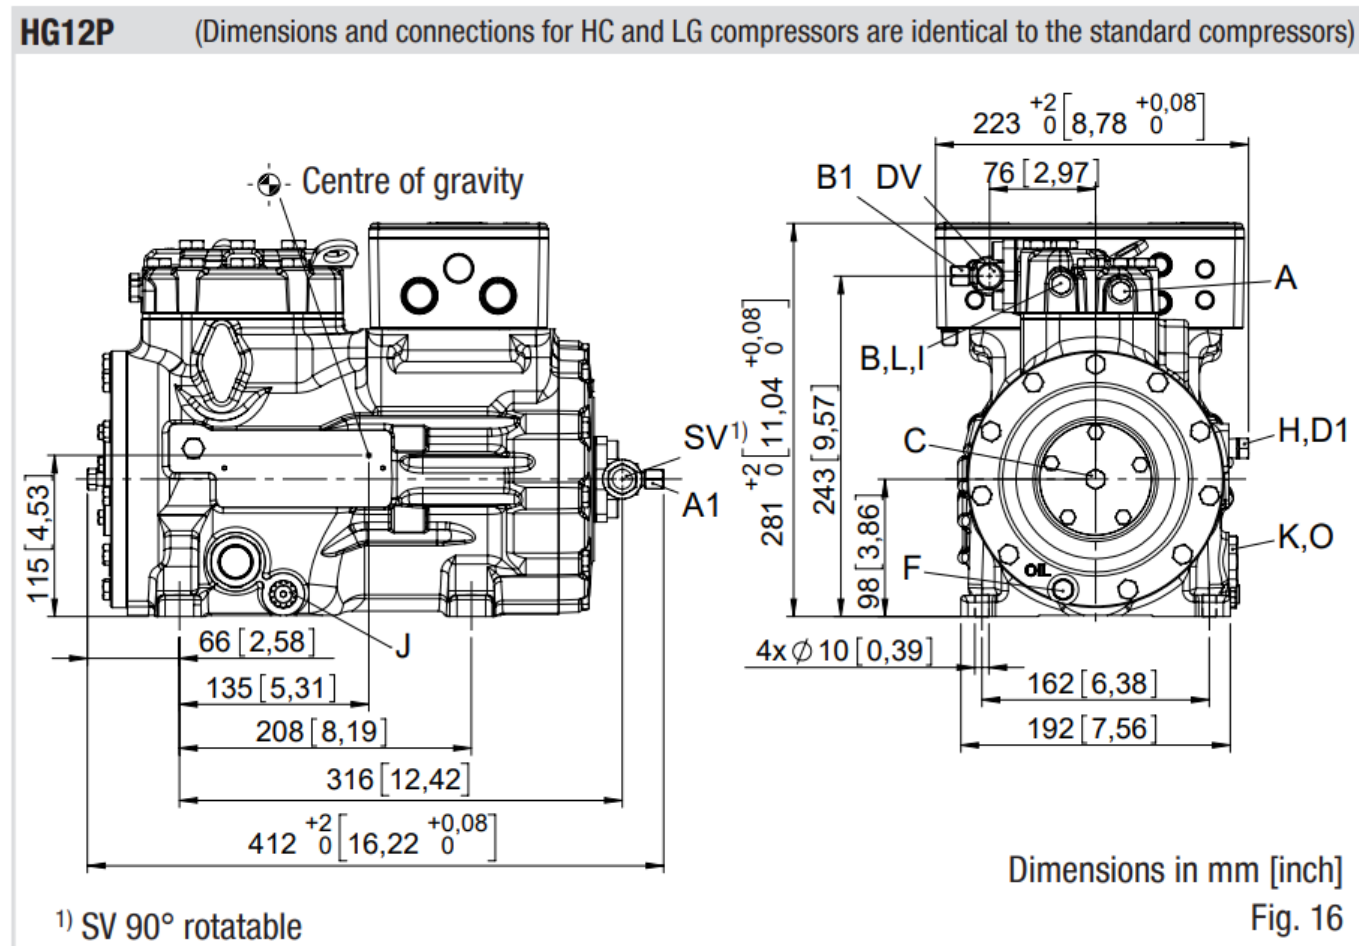

SV DV	Suction line see technical data, Chapter 10 Discharge line	
A	Connection suction side, not lockable	1/8" NPTF
A1	Connection suction side, lockable	7/16" UNF
B	Connection discharge side, not lockable	1/8" NPTF
B1	Connection discharge side, lockable	7/16" UNF
C	Connection oil pressure safety switch	1/8" UNF
D1	Connection oil return from oil separator	1/4" NPTF
F	Oil drain	M8
H	Oil charge plug	1/4" NPTF
I	Connection hot gas temperature sensor	1/8" NPTF
J	Connection oil sump heater	3/8" NPTF
K	Sight glass	1 1/8" - 18 UNEF
L	Connection thermal protection thermostat	1/8" NPTF
O	Connection oil level regulator	1 1/8" - 18 UNEF

Declaration of incorporation

- Declaration of incorporation for incomplete machinery in accordance with EC Machinery Directive 2006/42/EC, Annex II 1. B

Manufacturer:

- Bock GmbH Benzstraße 7 72636 Frickenhausen, Germany
- We, as manufacturer, declare in sole responsibility that the incomplete machinery

Name Types:

- Semi-hermetic compressor
- Types: HG(X)12P/60-4 S (HC) HG(X)88e/3235-4(S) (HC)
- UL-HGX12P/60 S 0,7 UL-HGX88e/3235 S 95
- HGX12P/60 S 0,7 LG HGX88e/3235 (ML/S) 95 LG
- HG(X)22(P)(e)/125-4 A HG(X)34(P)(e)/380-4 (S) A
- HGX34(P)(e)/255-2 (A) HGX34(P)(e)/380-2 (A)(K)
- HA(X)12P/60-4 HA(X)6/1410-4
- HAX22e/125 LT 2 LG HAX44e/665 LT 14 LG
- HGX12e/20-4 (ML/S) CO2 (LT) HGX44e/565-4 S CO2
- UL-HGX12e/20 (S/ML) 0,7 CO2 (LT) ... UL-HGX44e/565 S 31 CO2
- HGX12/20-4 (ML/S/SH) CO2T HGX56/680-4 (ML/S/SH) CO2 T
- UL-HGX12/20 ML(P) 2 CO2T UL-HGX46/440 ML(P) 53 CO2T
- HGZ(X)7/1620-4 HGZ(X)7/2110-4

- HGZ(X)66e/1340 LT 22..... HGZ(X)66e/2070 LT 35
- HRX40-2 CO2 T H..... HRX60-2 CO2 T H
- Open type compressor
- Types: F(X)2 F(X)88/3235 (NH3)
- FK(X)20/120 (K/N/TK)..... FK(X)50/980 (K/N/TK)
- Serial number: BC00000A001 – BN99999Z999

complies with the following provisions of the above-mentioned Directive:

- According to Annex I, points 1.1.2, 1.1.3, 1.1.5, 1.3.2, 1.3.3, 1.3.7, 1.5.1, 1.5.2, 1.5.13 and 1.7.1 to 1.7.4 (excepted 1.7.4 f) are fulfilled. Applied harmonised standards, in particular:
- EN ISO 12100 :2010 Safety of machinery; General principles for design, risk assessment and risk reduction
- EN 12693 :2008 Refrigerating systems and heat pumps; Safety and environmental requirements — Positive displacement refrigerant compressors

Remarks:

We also declare that the special technical documentation for this incomplete machine has been created in accordance with Annex VII, Part B and we obligate to provide these upon reasoned request from the individual national authorities by data transfer. Commissioning is prohibited until it has been confirmed that the machinery into which the incomplete machine above is to be incorporated complies with the EC Machinery Directive and an EC Declaration of Conformity, Annex II. 1. A exists.

Authorized person for compiling and handing over technical documentation:

- Bock GmbH Alexander Layh Benzstraße 7 72636 Frickenhausen, Germany

Frickenhausen, 11th of September 2023



i. A. Alexander Layh, Global Head of R&D

Declaration of incorporation

Declaration of incorporation of partly completed machinery in accordance with UK Statutory Instrument Supply of Machinery (Safety) Regulations 2008, Annex II 1. B

Manufacturer:

- Bock GmbH Benzstraße 7 72636 Frickenhausen, Germany

We, as manufacturer, declare in sole responsibility that the partly completed machinery

Name: Types:

- Semi-hermetic compressor

- Types: HG(X)12P/60-4 S (HC)HG(X)88e/3235-4(S) (HC)
- UL-HGX12P/60 S 0,7..... UL-HGX88e/3235 S 95
- HGX12P/60 S 0,7 LG HGX88e/3235 (ML/S) 95 LG
- HG(X)22(P)(e)/125-4 A HG(X)34(P)(e)/380-4 (S) A
- HGX34(P)(e)/255-2 (A) HGX34(P)(e)/380-2 (A)(K)
- HA(X)22e/125-4 HA(X)6/1410-4
- HAX22e/125 LT 2 LG HAX44e/665 LT 14 LG
- HGX12e/20-4 (ML/S) CO2 (LT) HGX44e/565-4 S CO2
- UL-HGX12e/20 (S/ML) 0,7 CO2 (LT)... UL-HGX44e/565 S 31 CO2
- HGX12/20-4 (ML/S/SH) CO2T..... HGX56/680-4 (ML/S/SH) CO2 T
- UL-HGX12/20 ML(P) 2 CO2T..... UL-HGX46/440 ML(P) 53 CO2T
- HGZ(X)7/1620-4 HGZ(X)7/2110-4
- HGZ(X)66e/1340 LT 22..... HGZ(X)66e/2070 LT 35
- HRX40-2 CO2 T H..... HR(Z)X60-2 CO2 T (H)(V)
- Name: Open type compressor
- Types: F(X)2 F(X)88/3235 (NH3)
- FK(X)20/120 (K/N/TK)..... FK(X)50/980 (K/N/TK)

Serial number: BC00000A001 – BN99999Z999

complies with the following provisions of the above-mentioned Statutory instrument:

According to Schedule 2, part1, points 1.1.2, 1.1.3, 1.1.5, 1.3.2, 1.3.3, 1.3.7, 1.5.1, 1.5.2, 1.5.13 and 1.7.1 to 1.7.4 (excepted 1.7.4 f) are fulfilled. Designated standards: EN ISO 12100 :2010 Safety of machinery — General principles for design — Risk assessment and risk reduction EN 12693 :2008 Refrigerating systems and heat pumps — Safety and environmental requirements — Positive displacement refrigerant compressors

Remarks:

We also declare that the special technical documentation for this partly completed machine has been created in accordance with Annex II, 1. B and we obligate to provide these upon reasoned request from the individual national authorities by data transfer. Commissioning is prohibited until it has been confirmed that the machinery into which the partly completed machine above is to be incorporated complies with the UK Statutory Instrument Supply machinery (Safety) regulations 2008 and an EC Declaration of Conformity, Annex II, 1. A exists.


Authorized representative for compiling and handing over technical documentation:

- Danfoss LTD., 22 Wycombe End, HP9 1NB, GB
- Frickenhausen, 19th of January 2024



i. A. Alexander Layh, Global Head of R&D

Documents / Resources

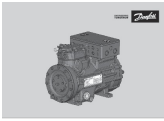 <p>BOCK® HG12P (HC/LG) Danfoss logo</p> <p>Model: HG12P-60-4 S, HG12P-75-4 S, HG12P-90-4 S, HG12P-110-4 S, HGX12P-75 ML 1 LG, HGX12P-90 ML 2 LG, HGX12P-110 ML 2 LG, HG12P-60-4 S HC, HG12P-75-4 S HC, HG12P-90-4 S HC, HG12P-110-4 S HC, HGX12P-60 S 0.7 LG, HGX12P-75 S 1 LG, HGX12P-90 S 2 LG, HGX12P-110 S 3 LG, HG12P Semi Hermetic Atex, HG12P, Semi Hermetic Atex, Hermetic Atex, Atex</p>	<p>Danfoss HG12P Semi Hermetic Atex [pdf] User Guide</p> <p>HG X 12P-60-4 S, HG X 12P-75-4 S, HG X 12P-90-4 S, HG X 12P-110-4 S, HGX12P-75 ML 1 LG, HGX12P-90 ML 2 LG, HGX12P-110 ML 2 LG, HG12P-60-4 S HC, HG12P-75-4 S HC, HG12P-90-4 S HC, HG12P-110-4 S HC, HGX12P-60 S 0.7 LG, HGX12P-75 S 1 LG, HGX12P-90 S 2 LG, HGX12P-110 S 3 LG, HG12P Semi Hermetic Atex, HG12P, Semi Hermetic Atex, Hermetic Atex, Atex</p>
--	---

References

- bockshop.bock.de
- vap.bock.de
- [Danfoss BOCK® Compressors: Eco-Friendly Solutions for Refrigeration Systems | Danfoss](#)
- [User Manual](#)

Manuals+, [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.