



Danfoss KE04101 Valve Drive Amplifier Instructions

Home » Danfoss » Danfoss KE04101 Valve Drive Amplifier Instructions



Contents

- 1 Danfoss KE04101 Valve Drive **Amplifier**
- **2 GENERAL DESCRIPTION**
- **3 DIMENSIONS**
- **4 CONNECTION DIAGRAM**
- **5 OUTPUT CHARACTERISTICS**
- 6 Documents / Resources
 - **6.1 References**
- **7 Related Posts**




Danfoss KE04101 Valve Drive Amplifier



GENERAL DESCRIPTION


The device is a freestanding amplifier mounted on 4 standoffs. Voltage from a sensor potentiometer, through the amplifier, produces current to drive electrohydraulic actuators. Connections to the amplifier are via screw terminals. An external switch can change gain settings by shorting between two terminals.

DIMENSIONS

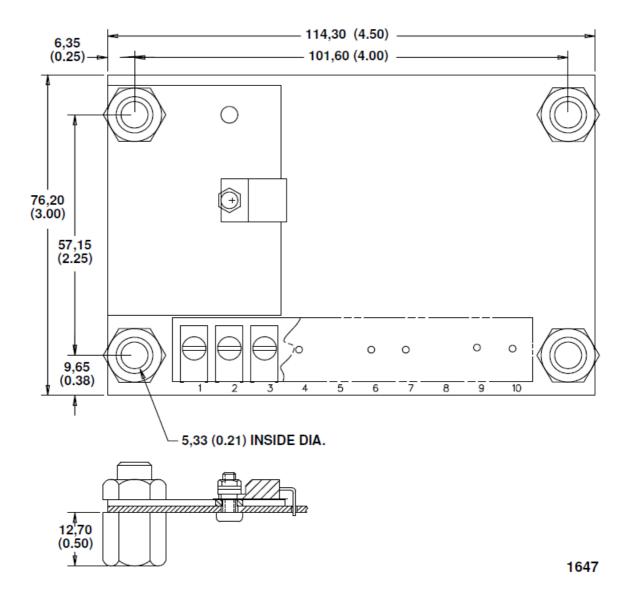

Dimensions of the KE04101 in Millimeters (Inches).

CONNECTION DIAGRAM

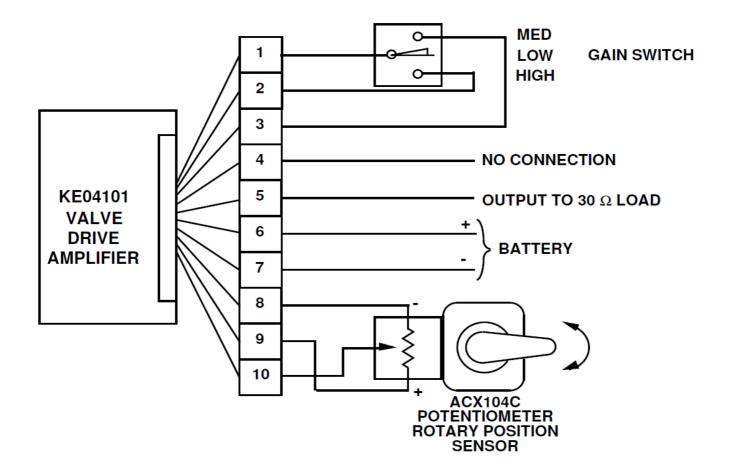


POLARITY OF BATTERY CONNECTIONS MAY BE REVERSED TO CHANGE ACTION OUTPUT VERSUS SENSOR INPUT

GAIN SWITCH IS OPTIONAL. JUMPERS MAY BE USED IN PLACE OF SWITCH

OUTPUT CHARACTERISTICS

- SUPPLY VOLTAGE 12 Vdc (11 to 15 Volts)
- TURN ON VOLTAGE 48% of supply
- MAXIMUM OUTPUT CURRENT 100 mA nominal

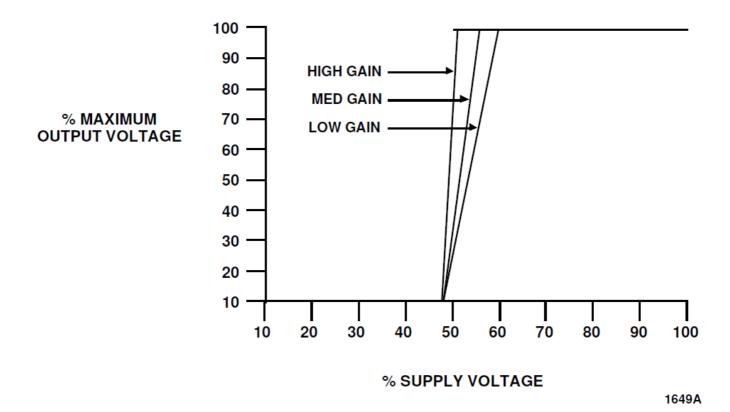

3500 Annapolis Lane North, Minneapolis, MN 55447 Telephone: (763) 509-2084 Telefax: (763) 559-0108

Documents / Resources



<u>Danfoss KE04101 Valve Drive Amplifier</u> [pdf] Instructions KE04101 Valve Drive Amplifier, KE04101, Valve Drive Amplifier, Drive Amplifier

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.