

Danfoss KP 33 Series Pressure Switch Installation Guide

Home » Danfoss » Danfoss KP 33 Series Pressure Switch Installation Guide 1



Contents

- 1 Danfoss KP 33 Series Pressure
- **2 Product Usage Instructions**
- 3 Installation guide
- 4 FAQs
- 5 Documents / Resources
 - **5.1 References**



Danfoss KP 33 Series Pressure Switch



Specifications:

- Model Numbers: KP 33, KP 34, KP 35, KP 36, KP 37
- Pressure Range: KP 33: 10 bar, KP 34: 6 bar, KP 35: 22 bar (19 bar variant), KP 36: 22 bar, KP 37: 32 bar
- Electrical Rating: AC 1: 16 A, AC 3: 16 A, AC 15: 10 A at 400 V; DC 13: 12 W at 220 V

Product Usage Instructions

Installation:

- 1. Ensure the mounting panel is flat to prevent damage to the switch.
- 2. Disconnect power supply before making wiring connections to avoid electrical shock.

Maintenance:

No maintenance is required for the switches after final installation.

Setting Pressure:

- 1. Use an additional pressure gauge for an accurate setting.
- 2. The scale in KP units is indicative only.

Electrical Connections:

- 1. Use copper wire only for electrical connections.
- 2. Tighten torque to 20 lb. in for secure connections.

Contact System:


- · Contact system with standard AG contacts.
- Single pole changeover switch (SPDT).


Installation guide

Pressure switch


KP 33, KP 34, KP 35, KP 36 and KP 37


KP 35, KP 36, KP 37

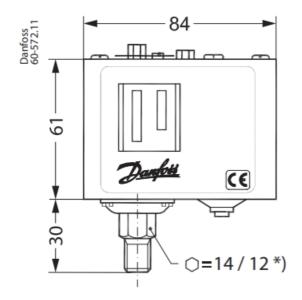

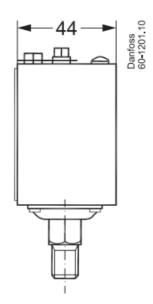

*) KP 35 (060-604891) **KP 33, KP 34**

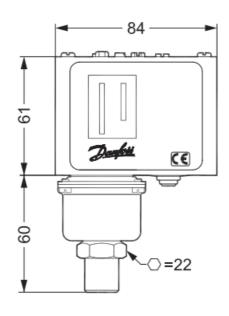


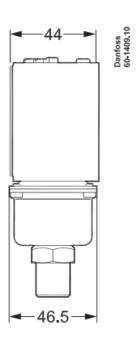


KP 33, KP 34, KP 35, KP 36, KP 37

 t_1 min. -40 °C t_1 max. 65 °C

 t_2 min. -40 °C t_2 max. 100 °C

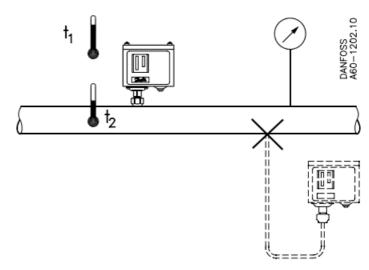

No maintenance is required for the switches after final installation.

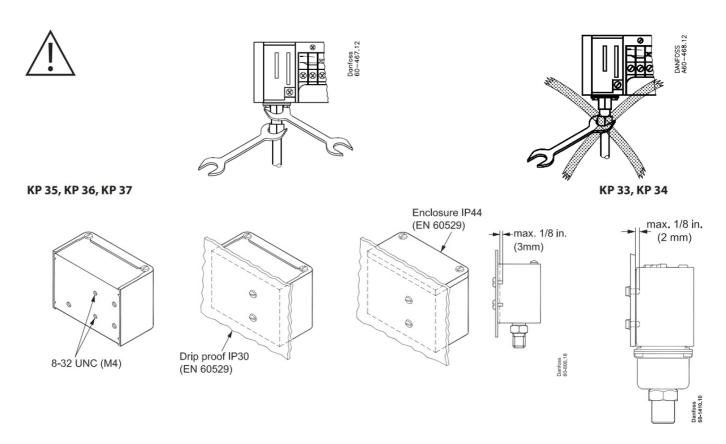


• CAUTION:


• The mounting panel must be plane to avoid damage of switch.

CAUTION:


Disconnect power supply before wiring connections are made or service to avoid possible electrical shock or da mage to equipment.


Do never touch live parts with your fingers or with any tool.

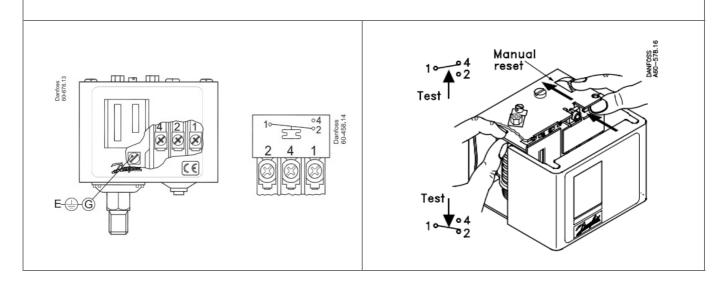

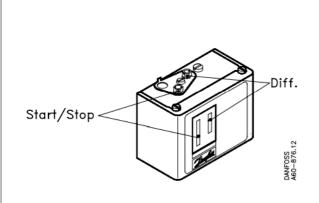

Please note: scale in KP units is indicative only. For a ccurate setting or when using according to FM approv al use additional pressure gauge to set the unit.

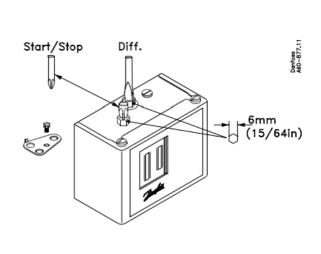

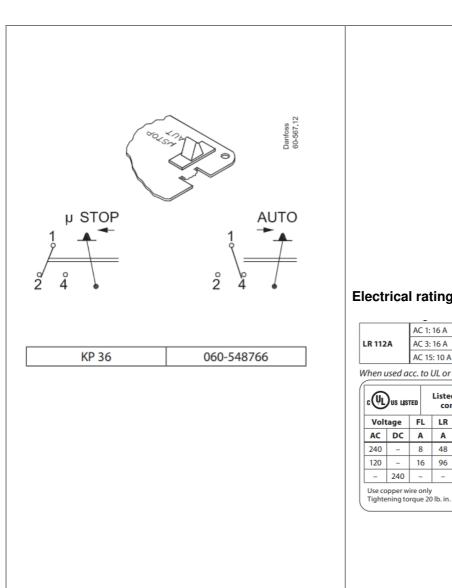

Electrical rating – General

	-		
	AC 1: 16 A		DC 13
LR 112A	AC 3: 16 A	400 V	12 W
	AC 15: 10 A		220 V

When used acc. to UL or FM regulations


ւՄ)us 1 4 51	TED	Listed refrigeration controller 61B5			
Voltage		FL	LR	Resist.	Pilot	
AC	DC	Α	Α	load	duty	
240	-	8	48	8 A	3 A	
120	-	16	96	16 A		
-	240	-	-	-	12 W	

DC 13

12 W

220 V

	Contact system with gold contacts.		
Contact system with standard AG contacts . Single pole changeover switch (SPDT).	Single pole changeover switch (SPDT) 30 V DC): 1 – 30 mA, 5 –	
	Contact load when Au surface isburne	ed away:	

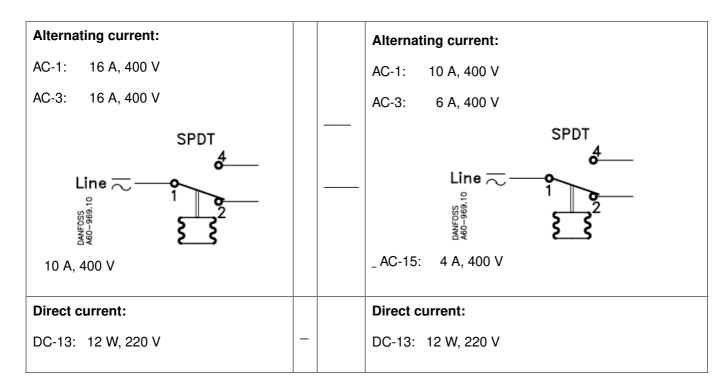

FAQs

Q: Is maintenance required for the pressure switches?

A: No, maintenance is not required after final installation.

Q: What is the maximum pressure each switch can handle?

A: KP 33: 10 bar, KP 34: 6 bar, KP 35: 22 bar (19 bar variant), KP 36: 22 bar, KP 37: 32 bar.

Documents / Resources



<u>Danfoss KP 33 Series Pressure Switch</u> [pdf] Installation Guide

KP 33, KP 34, KP 35, KP 36, KP 37, KP 33 Series Pressure Switch, KP 33 Series, Pressure Switch

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.