



Danfoss KPS 76 Thermostat Installation Guide

[Home](#) » [Danfoss](#) » Danfoss KPS 76 Thermostat Installation Guide 








Installation guide
Thermostat
Types KPS 76 – KPS 83



Contents

- [1 KPS 76 Thermostat](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

KPS 76 Thermostat

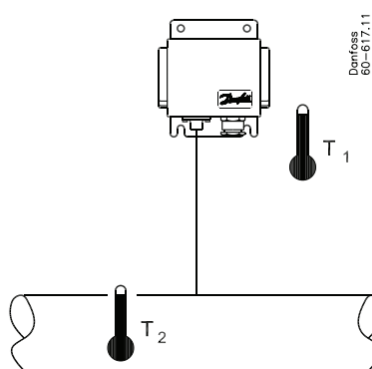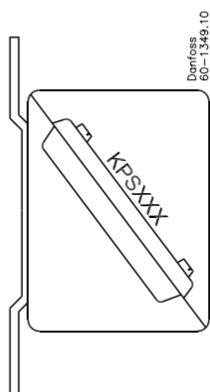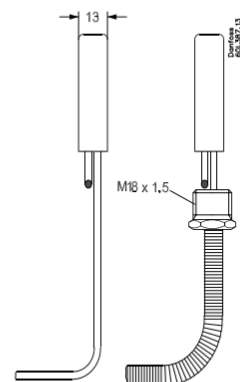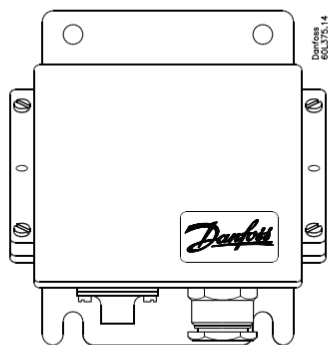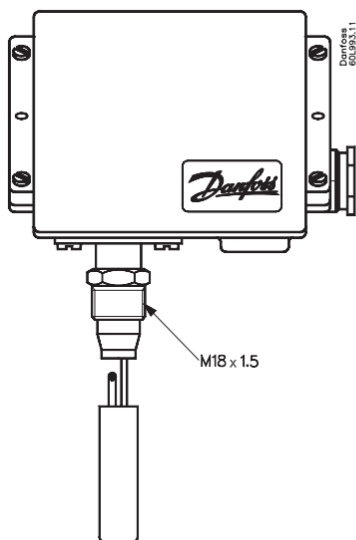


	T ₂ max. [°C]	T ₁ min. [°C]	T ₁ max. [°C]
KPS 76	80	-40	70
KPS 77	130		
KPS 79	200		
KPS 80	220		
KPS 81	250		
KPS 83	300		

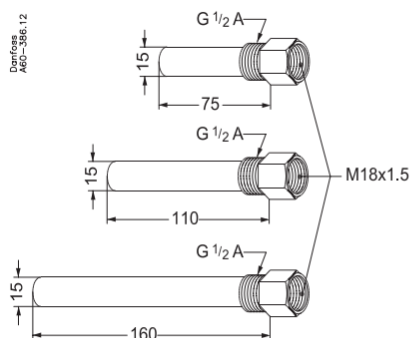
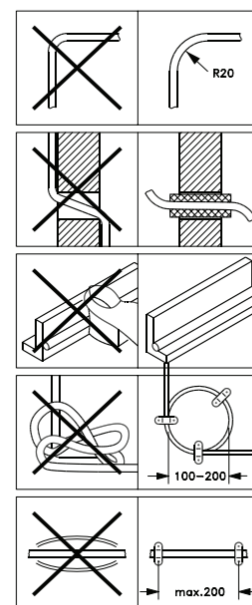


L [mm]	Brass	St.18/8
75	060L326266	-
110	060L327166	060L326866
160	060L326366	060L326966

For more types please refer to data sheet.

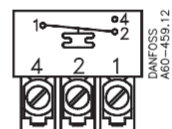






10(6) A, 440 V AC L.R. 50A
220V, 12 W DC PILOT


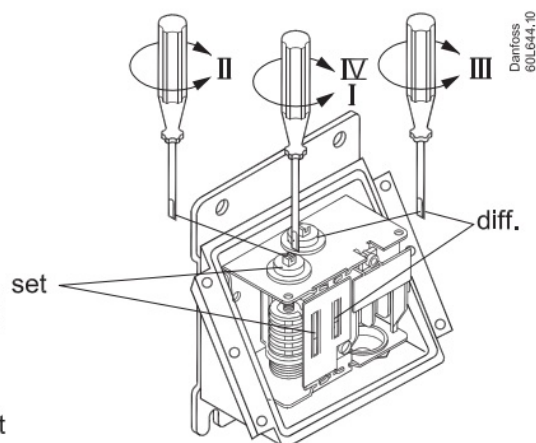
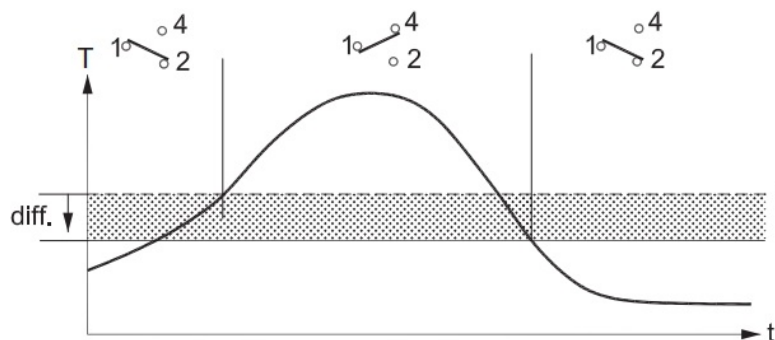


Type	Code no.	Diff. [°C]
KPS 83	060L313966	18




CAUTION: Disconnect power supply before wiring connections are made or service to avoid possible electrical shock or damage to equipment. Do never touch live parts with your fingers or with any tool.

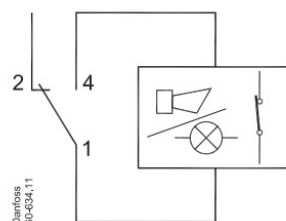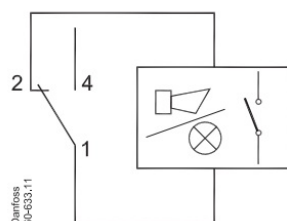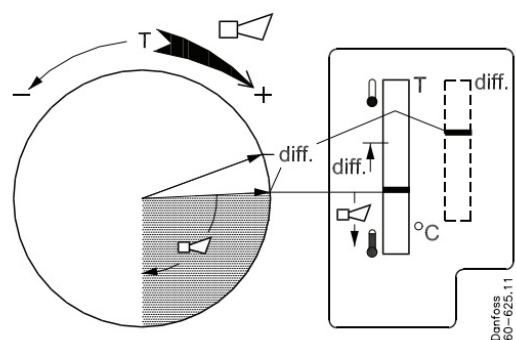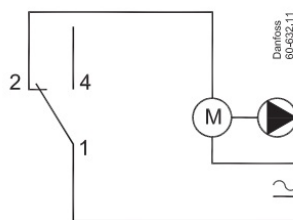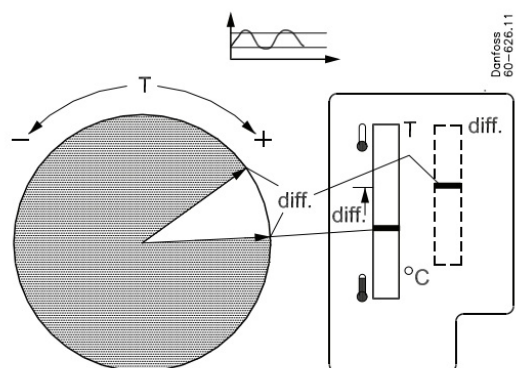

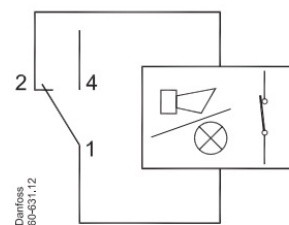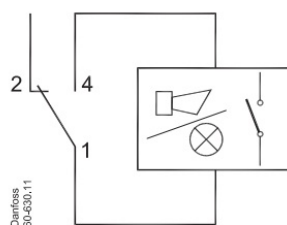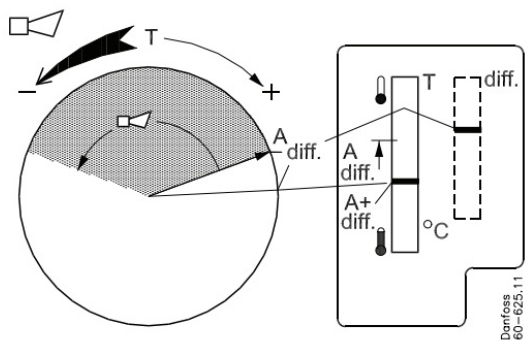

Documents / Resources

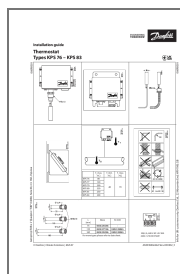

[Danfoss KPS 76 Thermostat](#) [pdf] Installation Guide
KPS 83, KPS 76, Thermostat, KPS 76 Thermostat