

**Danfoss**  
**MCF**  
**101Enclosure**  
**Option**



## Danfoss MCF 101 Enclosure Option Instructions

[Home](#) » [Danfoss](#) » Danfoss MCF 101 Enclosure Option Instructions 

### Contents

- [1 Danfoss MCF 101 Enclosure Option](#)
- [2 Instruction MCF 101 I P21 / Type 1 Enclosure](#)
- [3 OTHER PRODUCT](#)
- [4 Specifications](#)
- [5 Product Usage Instructions](#)
- [6 Frequently Asked Questions \(FAQ\)](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)



**Danfoss**

**Danfoss MCF 101 Enclosure Option**



- E – Screw(s)

When option module A and/or option module B is/are used the brim (B) must be fitted on the top cover (A).

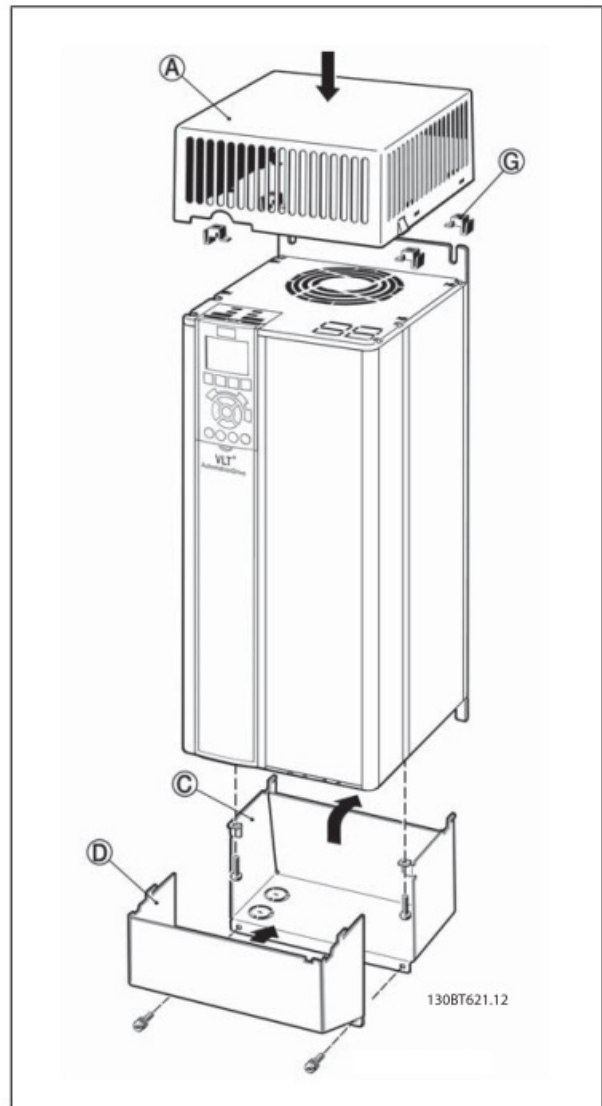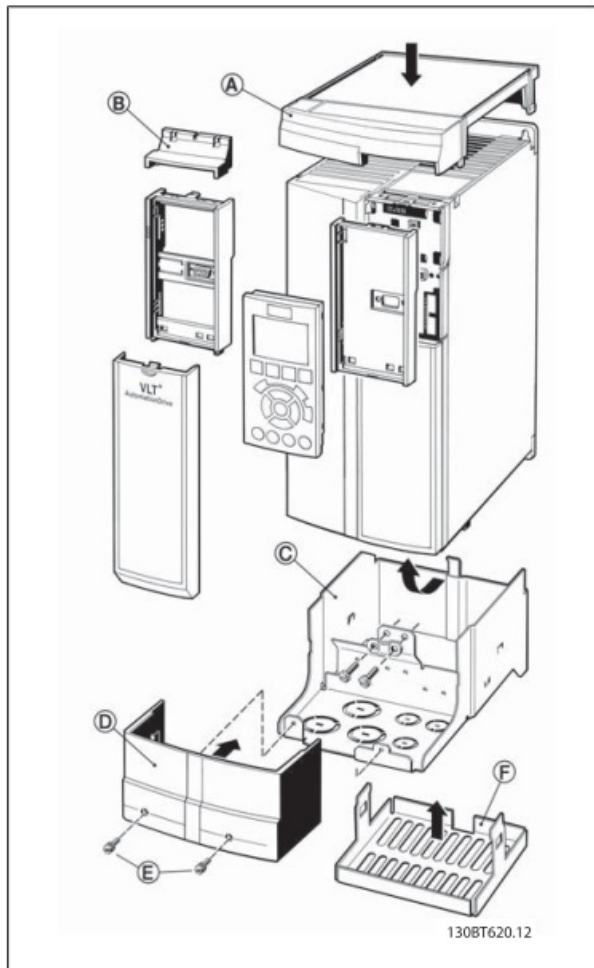

- A – Top cover
- B – Brim
- C – Base part
- D – Base cover
- E – Screw(s)
- F – Fan cover
- G – Top clip

When option module A and/or option module B is/are used the brim (B) must be fitted on the top cover (A).

## OTHER PRODUCT



- [www.danfoss.com/drives](http://www.danfoss.com/drives)

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to tradenames made available by such respective companies. Danfoss cannot be held responsible for the use of the information. All rights reserved.

## Specifications

- **Model:** FC 300 IP 21 / TYPE 1
- **Enclosure Option:** TYPE 1
- **Manufacturer:** Danfoss
- **Website:** [www.danfoss.com/drives](http://www.danfoss.com/drives)

## Product Usage Instructions

### Installation

Ensure option module A and/or option module B are used, and fit the brim (B) on the top cover (A).

### Power On

Connect the power supply to the unit and switch it on using the designated power button.

### Configuration

Use the provided manual to configure the settings according to your requirements.

### Operation

Once configured, start the drive and monitor its operation for any abnormalities.

## Frequently Asked Questions (FAQ)

**Q: What should I do if the unit does not power on?**

A: Check the power supply connection and ensure it is properly connected. If the issue persists, contact customer support.

**Q: How can I reset the unit to its default settings?**

A: Refer to the user manual for instructions on resetting the unit to factory defaults.

**Q: Can I use this product in outdoor environments?**

A: This product is designed for indoor use only; outdoor use may result in damage.

## Documents / Resources



[Danfoss MCF 101 Enclosure Option](#) [pdf] Instructions  
MCF 101, MCF 101 Enclosure Option, MCF 101, Enclosure Option, Option

## References

-  [Global AC drive manufacturer - Danfoss Drives | Danfoss](#)
- [User Manual](#)

### Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.