



Danfoss MTCV Multifunctional Thermostatic Circulation Valve Instructions

[Home](#) » [Danfoss](#) » Danfoss MTCV Multifunctional Thermostatic Circulation Valve Instructions 

Contents

- [1 Danfoss MTCV Multifunctional Thermostatic Circulation Valve](#)
- [2 Product Description](#)
- [3 Installation](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

The Danfoss logo, featuring the word "Danfoss" in a stylized, red, cursive script font.

Danfoss MTCV Multifunctional Thermostatic Circulation Valve






Product Description


DN	15	20
T _{range}	35 - 60 °C	35 - 60 °C
T _{set}	57 °C	57 °C
PN	10 bar	10 bar
Δp _{max}	1 bar	1 bar
T _{max}	100 °C	100 °C
k _{vs} (20 °C)	1.5 m³/h	1.8 m³/h

Installation


Step 1

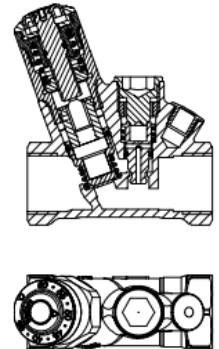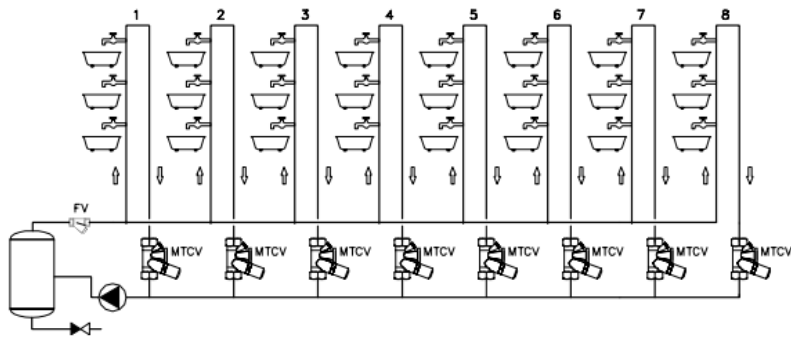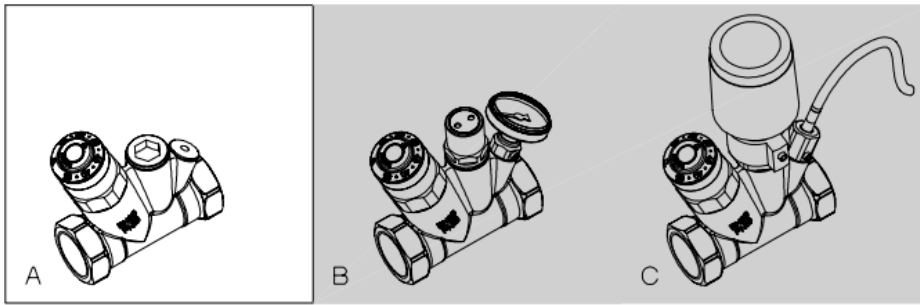


Step 2

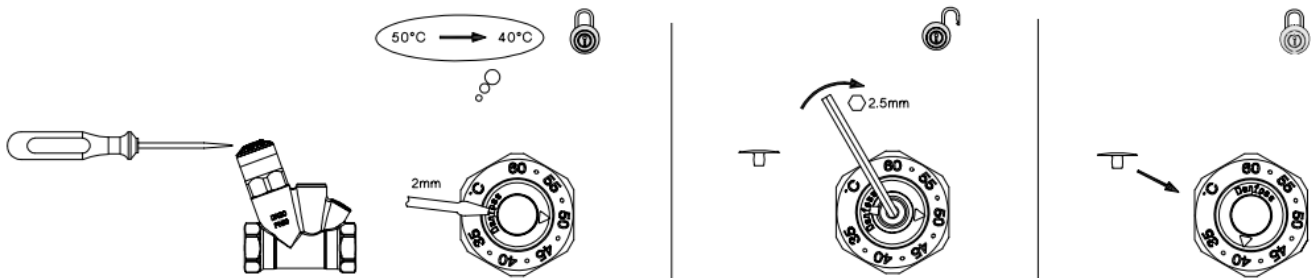

Step 3

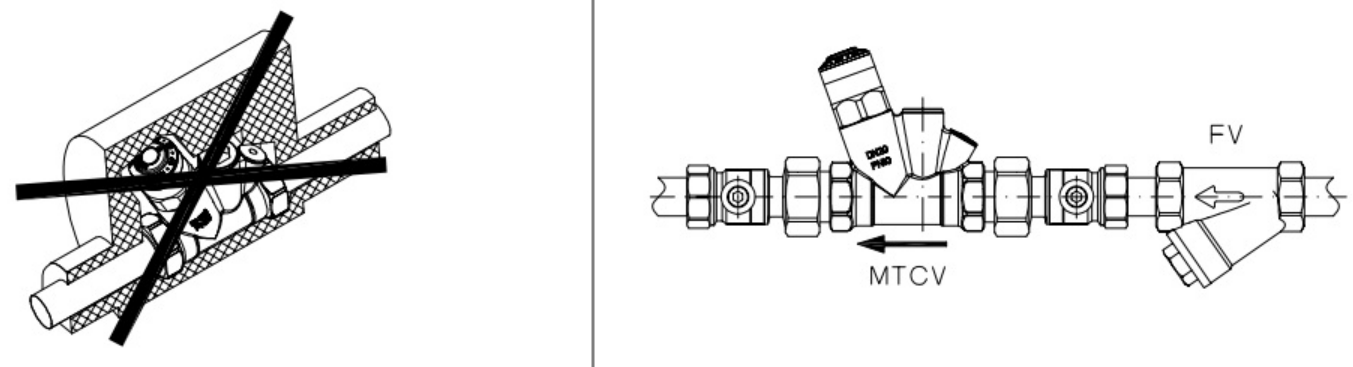

Documents / Resources

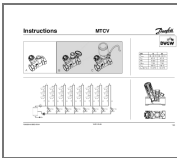

[Danfoss MTCV Multifunctional Thermostatic Circulation Valve](#) [pdf] Instructions
MTCV, Multifunctional Thermostatic Circulation Valve, MTCV Multifunctional Thermostatic Circulation Valve, 003Z1520