

# Danfoss MTCV with CCR2+ Thermal balancing valves Instruction Manual

Home » Danfoss » Danfoss MTCV with CCR2+ Thermal balancing valves Instruction Manual

#### FOF

#### Contents


- 1 Danfoss MTCV with CCR2+ Thermal balancing valves
- 2 TYPES
- **3 CONNECTIONS**
- **4 FEATURES**
- **5 HOW TO USE**
- 6 Documents / Resources
- 7 Related Posts




Danfoss MTCV with CCR2+ Thermal balancing valves




## **TYPES**

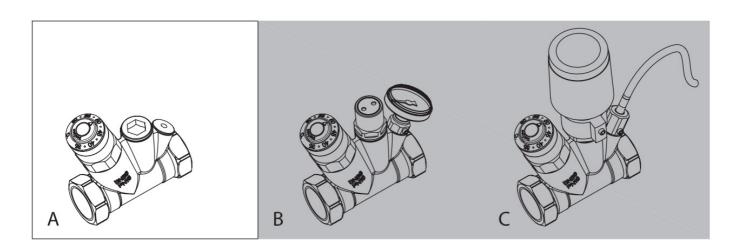


## **CONNECTIONS**

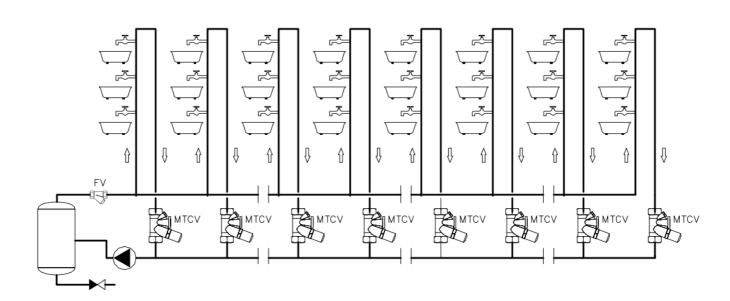


## **FEATURES**

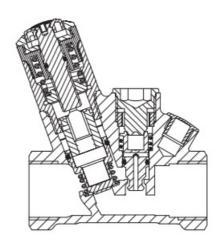


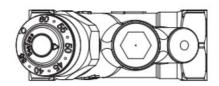

DN	15	20
Trange	35-60 °C	35-60 °C
Tset	50 °C	50 °C
PN	10 bar	10 bar
Δpmax	1 bar	1 bar
Tmax	100 °C	100 °C
kVS (20 °C)	1,5 m3/h	1,8 m3/h

## **HOW TO USE**

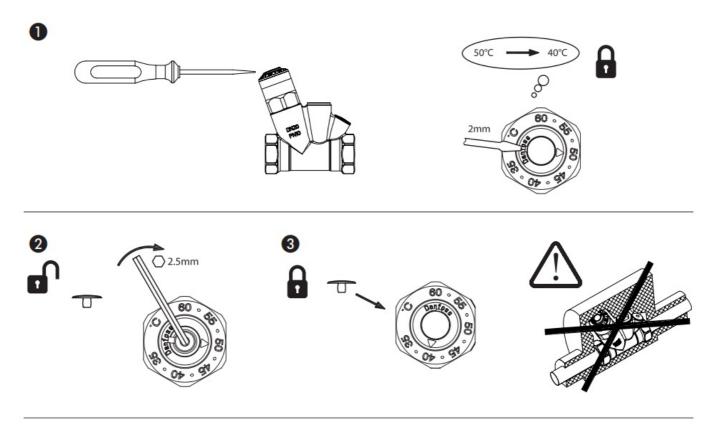

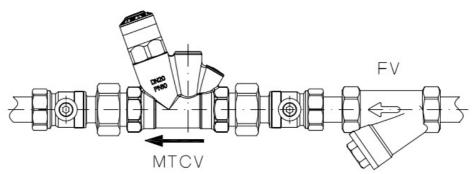

#### Danfoss A/S

Climate Solutions danfoss.com +45 7488 2222

Any information, including, but not limited to information on the selection of the product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogs descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or Via download, shall be considered informative and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogs, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

#### **Documents / Resources**



<u>Danfoss MTCV with CCR2+ Thermal balancing valves</u> [pdf] Instruction Manual MTCV with CCR2 Thermal balancing valves, MTCV with CCR2, Thermal balancing valves, bala ncing valves, valves

