

Danfoss PC 78xA IDCM Programming Software User Guide

Home » Danfoss » Danfoss PC 78xA IDCM Programming Software User Guide 🖺

Contents

- 1 Danfoss PC 78xA IDCM Programming Software
- 2 LT IDCM Compressor Setup
- **3 IDCM Compressor AO Setup**
- **4 LT IDCM Compressor Gen Purpose PI Controller Setup**
- 5 PI-2 Analog Output Setup
- **6 Documents / Resources**
 - **6.1 References**
- 7 Related Posts



Danfoss PC 78xA IDCM Programming Software



Specifications

- Model: AK-PC 78xA
- IDCM Programming
- LT IDCM Compressor Setup
- IDCM Compressor AO Setup

LT IDCM Compressor Setup

Follow these steps to set up the LT IDCM Compressor:

- 1. Ensure `Speed comp. LT-1 AO' is wired directly to `PI-2 in voltage' AI.
- 2. Module and point numbers are used as examples only.

PI Controller Setup

For setting up the LT IDCM Compressor General Purpose PI Controller:

- 1. Use PI-2 as an example to create `PI-2 in voltage' AI.
- 2. Module and point numbers are used as examples only.

PI-2 in Voltage Al Setup

Set up the PI-2 in voltage AI using the following steps:

1. Module and point numbers are used as examples only.

PI-2 Analog Output Setup

To complete the IDCM programming, follow these steps:


FAQ (Frequently Asked Questions)

1. Q: What is the purpose of LT IDCM Compressor Setup?


A: The LT IDCM Compressor Setup is designed to configure the compressor settings for optimal performance.

Programming Guide
AK-PC 78xA IDCM programming\

LT IDCM Compressor Setup

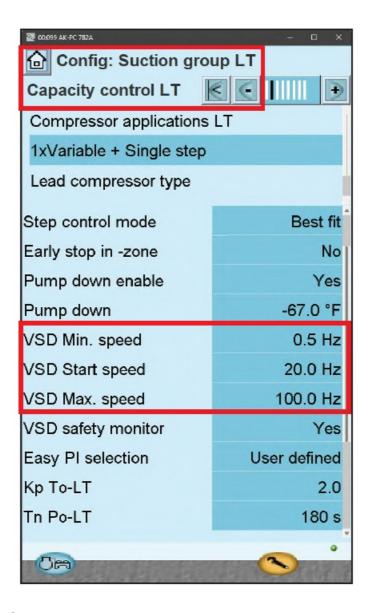


IDCM Compressor AO Setup

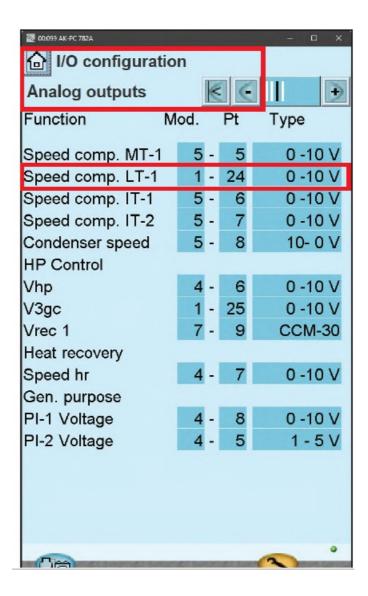


- 'Speed comp. LT-1 AO' is wired directly to 'PI-2 in voltage' AI created in next step.
- Module and point numbers used as example only.

LT IDCM Compressor Gen Purpose PI Controller Setup

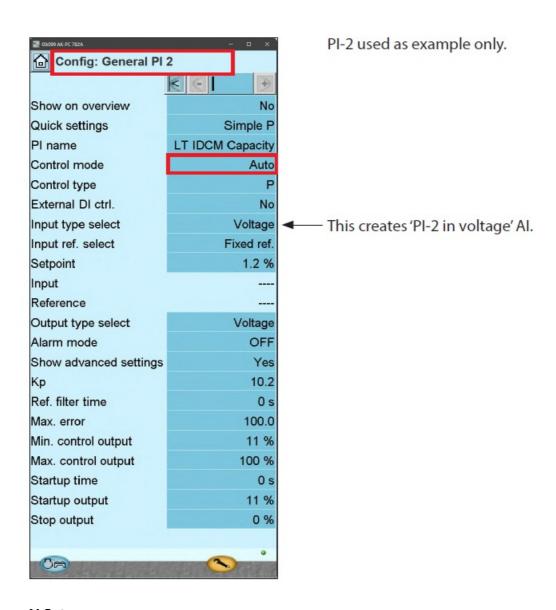


PI-2 in voltage Al Setup

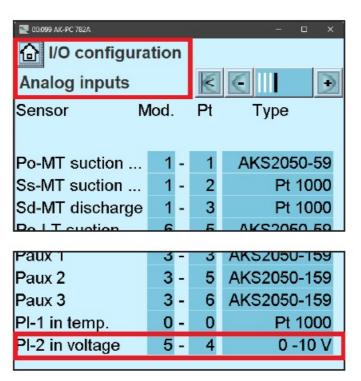

- Module and point numbers used as example only.
- PI-2 used as example only.

PI-2 Analog Output Setup

IDCM programming complete.

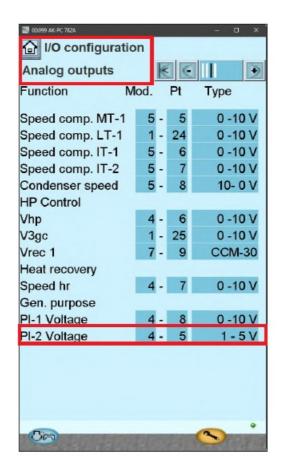

Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222 catalingues descriptions ad, Vertisemits ete. and whation made available in writing, orally, etectronically odie desian wend, smal bie considered informative, anchis only bia in groand manuals, bates reserveste right to ate in proctatis without notice. This also applies to products ordered sut not differed provided that suatalierations cautes made without changes to form, it or All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

Documents / Resources



Danfoss PC 78xA IDCM Programming Software [pdf] User Guide

78xA, PC 78xA IDCM Programming Software, 78xA IDCM Programming Software, IDCM Programming Software, Programming Software

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.