



## danfoss RAX-K Thermostatic sensor Instructions

[Home](#) » [Danfoss](#) » danfoss RAX-K Thermostatic sensor Instructions 

### danfoss RAX-K Thermostatic sensor Instructions



#### Contents


- [1 Thermostatic sensor RAX-K](#)
- [2 H-piece valves, type RLV-KB](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

### Thermostatic sensor RAX-K


#### Sets for systems

Sets for systems with flow coming from the bottom, with an M30x1.5 built-in valve insert:


- thermostatic sensor RAX-K
- H-Piece, type RLV-KB

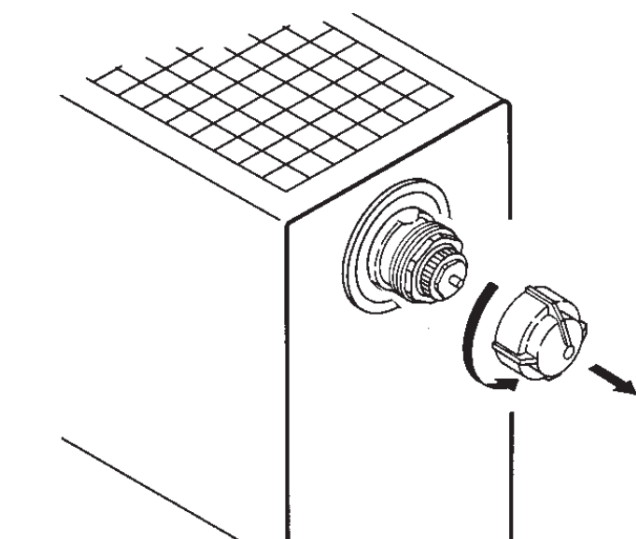

1.

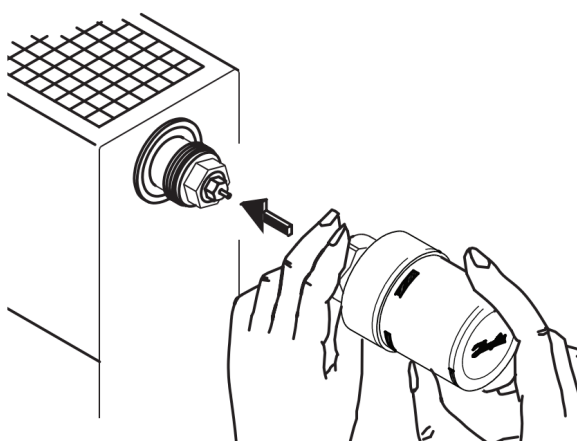

2.

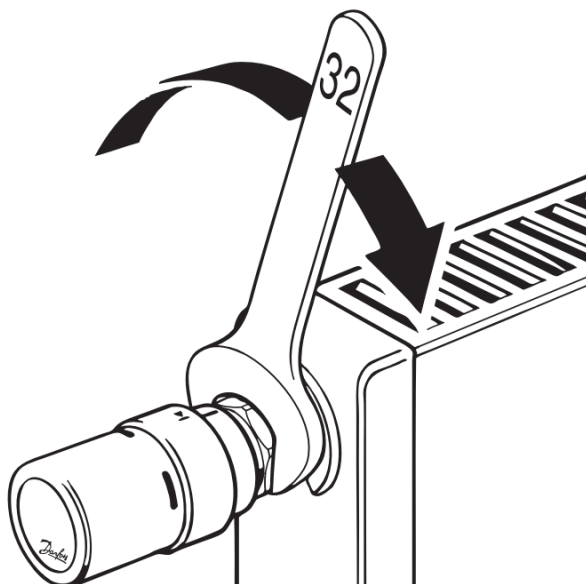





3.

### **Danfoss Thermostatic Sensors RAX-K**

1. Remove the protective cap from the valve insert by turning it anticlockwise.
2. Ensure that the setting mark on the sensor is positioned at the top before mounting the sensor.
3. Mount the thermostatic sensor on the valve and tighten it with a 32 mm spanner (max torque 15 Nm).

### **H-piece valves, type RLV-KB**

## Two pipe system

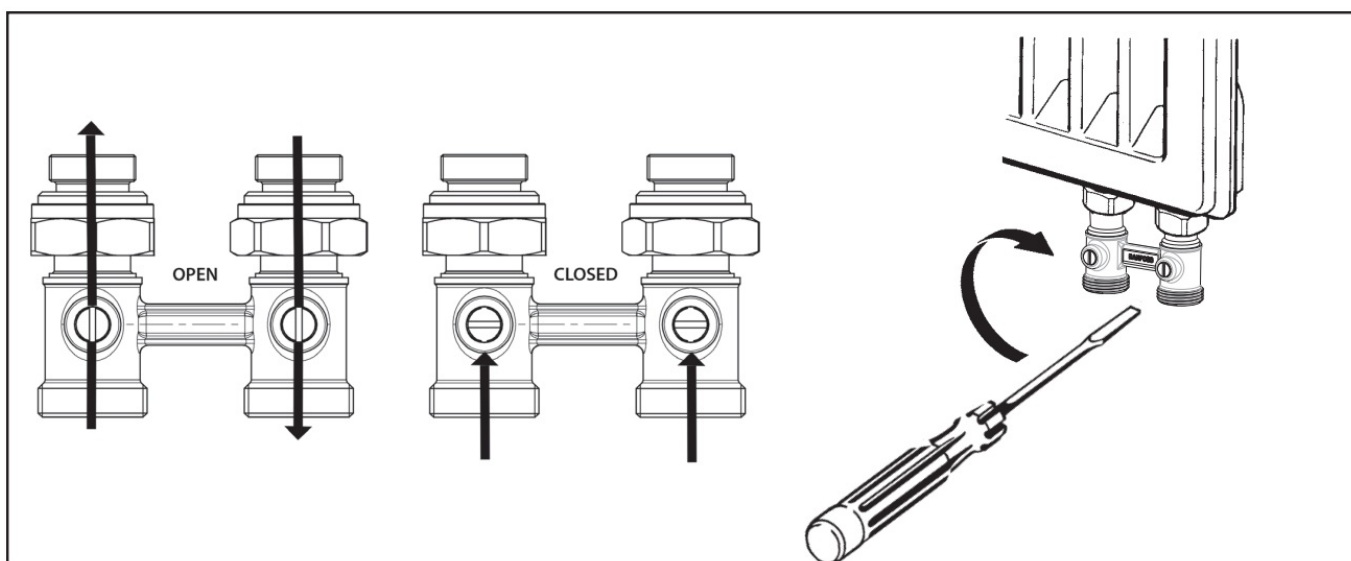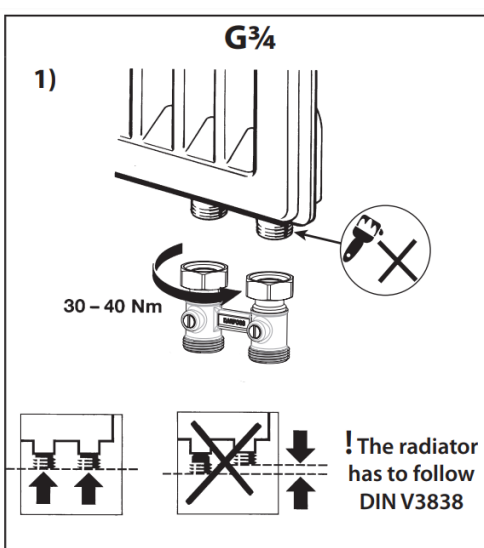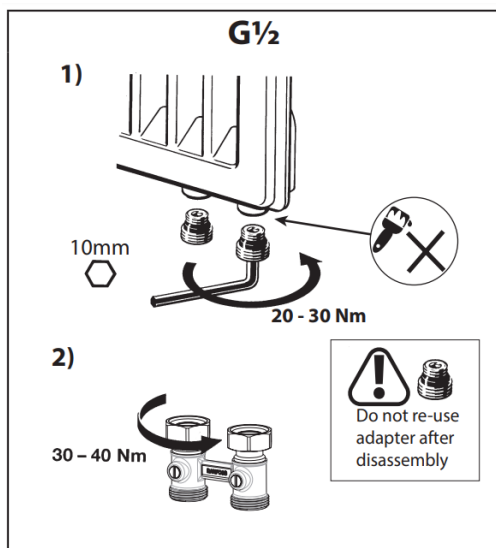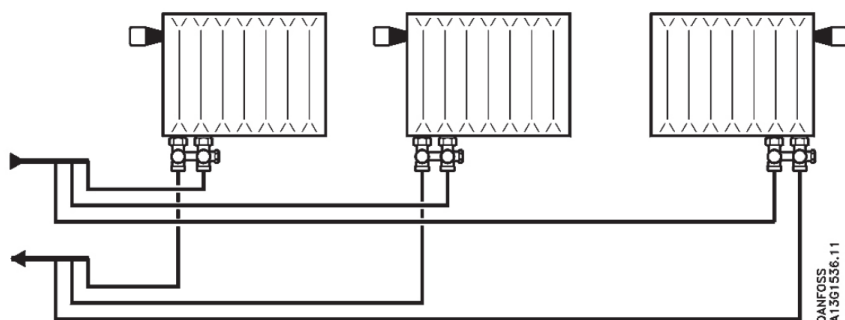

## Danfoss A/S

Climate Solutions

[danfoss.com](https://danfoss.com)

+45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and


other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

© Danfoss Climate Solutions | 03/2022 | AN408535149374en-000101



## Documents / Resources

	<p><a href="#">danfoss RAX-K Thermostatic sensor</a> [pdf] Instructions RAX-K Thermostatic sensor, Thermostatic sensor</p>
---	--

[Manuals+](#)