



Danfoss RET2001M-V2 Programmable Room Thermostats Installation Guide

[Home](#) » [Danfoss](#) » Danfoss RET2001M-V2 Programmable Room Thermostats Installation Guide 

Contents

- [1 Danfoss RET2001M-V2 Programmable Room Thermostats](#)
- [2 Specifications](#)
- [3 Installation Steps](#)
- [4 Dimensions and Wiring](#)
- [5 Error codes](#)
- [6 Technical Specifications](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



Danfoss RET2001M-V2 Programmable Room Thermostats




Specifications

- **Operating:** Product is designed for continuous use
- **Operating Voltage**
- **Output:** Volt free
- **Switch rating:** 3 A (1) at 250 Vac
- **Switch type:** 1x SPDT Type 1B
- **Terminals:** 1 to 2.5 mm² wires
- **IP rating:** IP30 (installed)
- **Load compensation control:** Yes
- **On/off control:** Yes
- **ErP class:** Class IV, efficiency gain 2%
- **Construction:** EN60730-2-9
- **Control pollution situation Degree:** 2
- **Rated impulse voltage:** 4 kV
- Ball pressure test
- **Dimensions:** H86 x W86 x D30
- Software classification
- Running and setting accuracy (for thermostats with build in timer)
- **RET2001M-V2:** Setting resolution 1 minute. Accuracy +/- 1 minute per month.
- **TP5001M-V2:** Setting resolution 1 minute. Accuracy +/- 1 minute per month.


Installation Steps

- User Guide can be downloaded from: heating.danfoss.com.


1. Installation must be done by an authorized electrician.
2. The room thermostat should be installed at approx. 1.5 m above floor and where the effects of sunlight, draught or other heat sources (eg. TV's) are avoided, see fig. 1 on page 44.

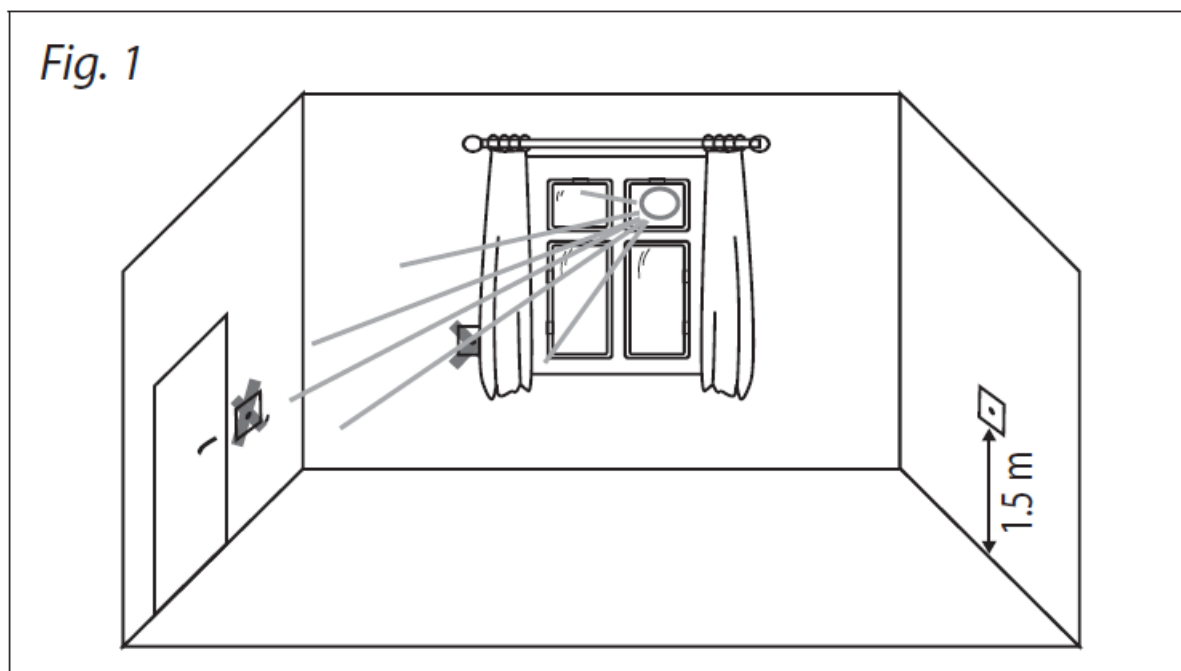


3. First loosen lower retaining screw and carefully remove back plate, see fig. 2 on page 44.

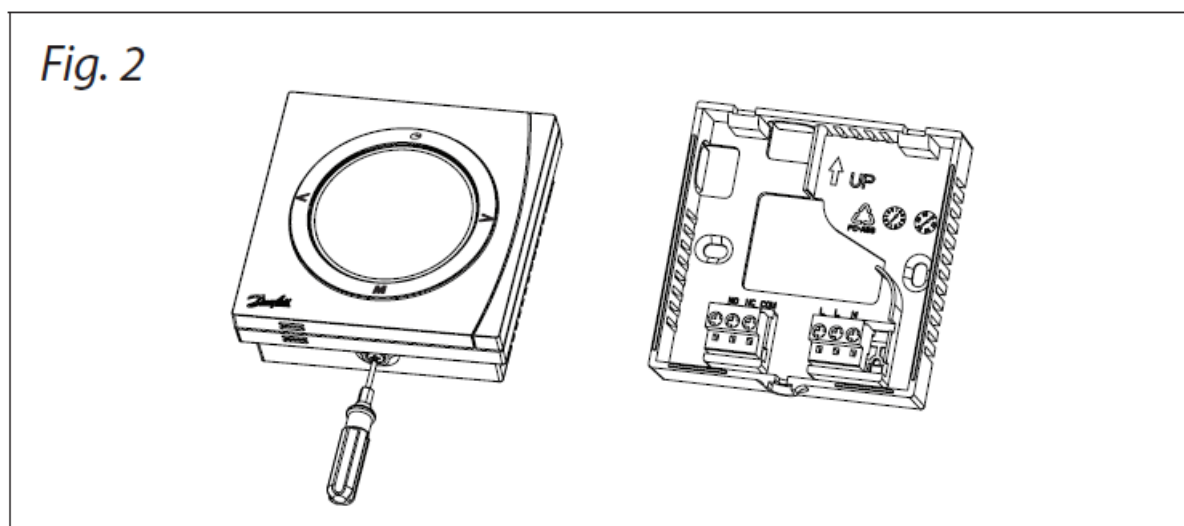

4. Mount back plate direct to wall or on wall box and wire according to application, see fig. 3 & 6 (pages 44 and 45).

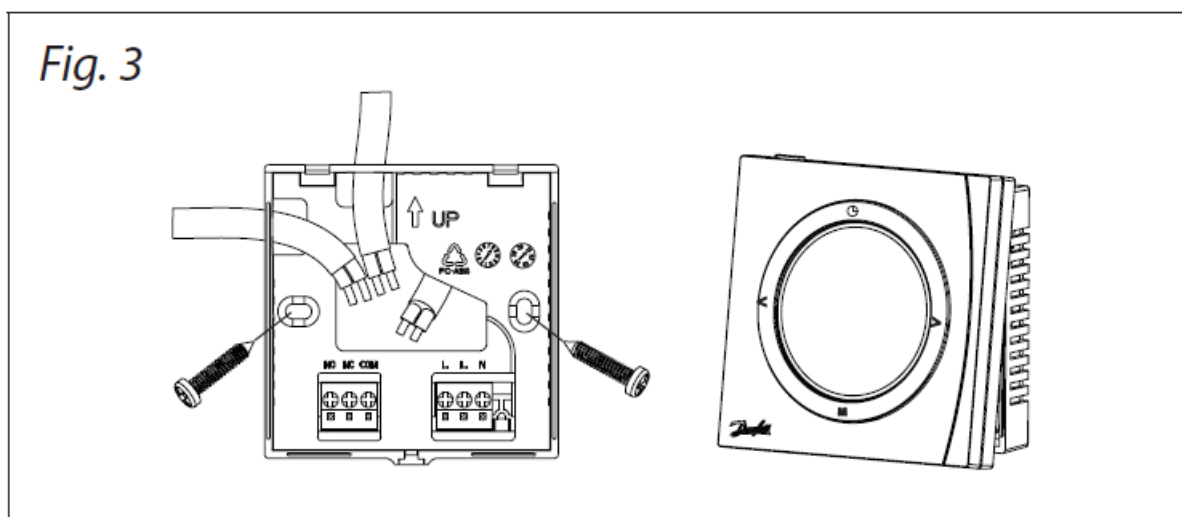


5. Remove battery backup tab, see fig. 4 on page 45.

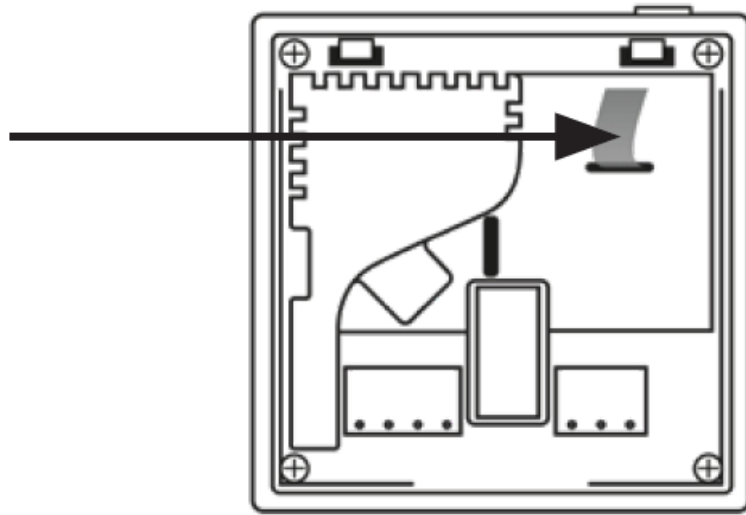

Remove battery backup tab

6. Locate hooks at top of front part into top of back plate and lower into position and tighten retaining screw.


Fig. 5

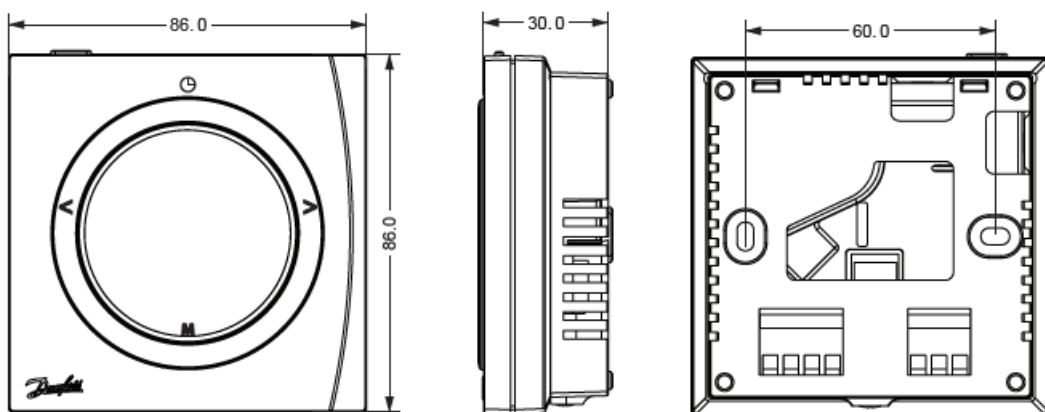

Dimensions and Wiring

See fig. 5 for dimensions and fig. 6 for wiring diagram on page 45.

Fig. 6

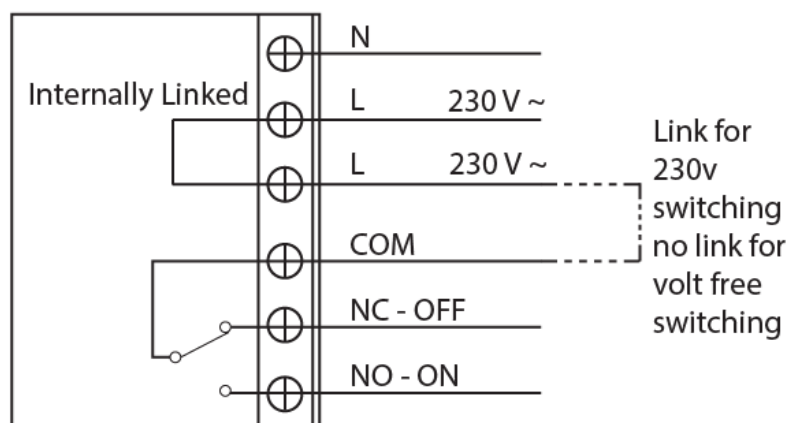

Error codes

Display	Description
E1	Sensor Failure
EE	EEPROM Failure
Lo	Measured temperature below 0 °C
Hi	Measure temperature above 50 °C
E6	Real Time Clock Failure(TP5001M Only)

Technical Specifications

Specifications	RET2001M-V2 TP5001M-V2
Operating	Product is designed for continuous use
Operating Voltage	230 Vac \pm 10 % 50/60 Hz
Output	Volt free
Setting temperature range	5 °C to 35 °C
Operating temperature range	0 °C to 40 °C
Switch rating	3 A (1) at 250 Vac
Switch type	1x SPDT Type 1B
Terminals	1 to 2.5 mm ² wires
IP rating	IP30 (installed)
Load compensation control	Yes
On/off control	Yes
ErP class	Class IV, efficiency gain 2 %
Construction	EN60730-2-9
Control pollution situation	Degree 2
Rated impulse voltage	4 kV
Ball pressure test	75 °C
Dimensions	H86 x W86 x D30

Specifications	RET2001M-V2 TP5001M-V2
Software classification	A
Running and setting accuracy (for thermostats with built in timer)	Setting resolution 1 minute. Accuracy +/- 1 minute per month.

Note

1. Both live(L) terminals are internally linked and available for ease of cable termination only.
2. If replacing a 230-volt room stat, a link between the live(L) and a common(COM) terminal is required.

Danfoss Ltd.

22 Wycombe End, HP9 1NB, GB

Danfoss A/S

- **Climate Solutions** • heating.danfoss.com
- +45 7488 2222
- **E-mail:** heating@danfoss.com
- Any information, including, but not limited to information on selection of product, its application or use, product


design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation.

- Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

VISUO14F | AN30483462054701-010103

© Danfoss | FEC | 01.2023

Documents / Resources

	<p>Danfoss RET2001M-V2 Programmable Room Thermostats [pdf] Installation Guide RET2001M-V2 Programmable Room Thermostats, RET2001M-V2, Programmable Room Thermostats, Room Thermostats, Thermostats</p>
---	--

References

- [Danfoss Climate Solutions for heating | Efficient solutions for superior comfort | Danfoss](#)
- [Danfoss Salg Danmark | Danfoss](#)
- [Danfoss Deutschland | Klima | Kälte | Heizung | Antriebe | Hydraulik | Danfoss](#)
- [Engineering Tomorrow | Danfoss](#)
- [Danfoss Climate Solutions for heating | Efficient solutions for superior comfort | Danfoss](#)
- [User Manual](#)