



Danfoss RLV-KS Radiator H-Type Connection Instructions

[Home](#) » [Danfoss](#) » Danfoss RLV-KS Radiator H-Type Connection Instructions 



RLV-KS Radiator H-Type
Connection Instructions



Contents

- [1 RLV-KS Radiator H-Type Connection](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)


RLV-KS Radiator H-Type Connection



013R9277



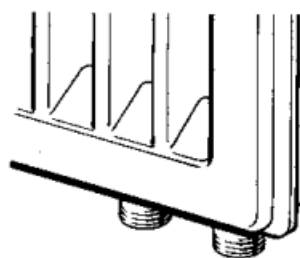
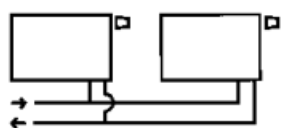


G 3/4 A

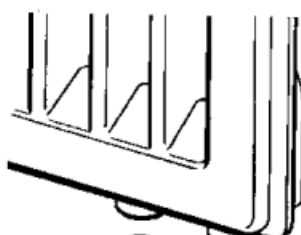


G 1/2

10 mm

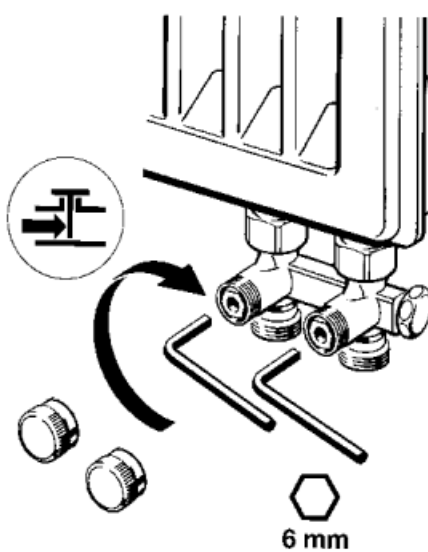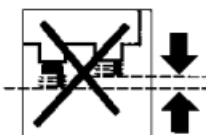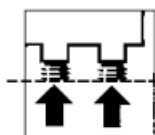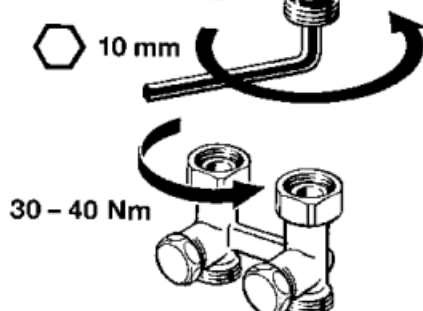

VI.16.G5.00 05-1999

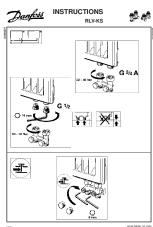

[Danfoss RLV-KS Radiator H-Type Connection](#) [pdf] Instructions
RLV-KS Radiator H-Type Connection, RLV-KS, Radiator H-Type Connection, H-Type Connection