

# **Danfoss Type 077B7 Service Thermostats Installation Guide**

Home » Danfoss » Danfoss Type 077B7 Service Thermostats Installation Guide 🖺

### **Contents**

- 1 Danfoss Type 077B7 Service
- **Thermostats**
- 2 Installation Guide
- 3 Accessories for 077B7099
- 4 Documents / Resources
  - 4.1 References
- **5 Related Posts**



**Danfoss Type 077B7 Service Thermostats** 



# **Specifications**

- Model Numbers: 077B218, 077B223, 077B7099, 077B7100, 077B7101,077B7102, 077B7103, 077B7104, 077B7105, 077B7108, 077B7109, 077B7274, 077B7242, 077B7049
- Length of Capillary: L = 1200 +30/-0 mm
- Min. Sensor Length Mounted on Evaporator: LS = 95-105 mm (varies based on model)
- Usage: Service thermostats for various refrigeration appliances

# **Product Usage Instructions**

# **Installation Guide**

Follow the guidelines provided in the installation guide for proper setup of the service thermostats.

# **Setting Adjustment**

Adjust the cut-in and cut-out temperatures as needed for your specific appliance using the designated settings.

# **Sensor Length Requirements**

Ensure the minimum sensor length mounted on the evaporator is met according to the specifications mentioned for each model.

# **Cold Setting Position**

Select the desired cold setting position (3 or 4) based on your cooling requirements.

#### Additional Information

For more detailed usage instructions and troubleshooting tips, refer to the complete user manual provided with the product.

# Frequently Asked Questions (FAQ)

# Q: What is the recommended sensor length for the evaporator?


A: The recommended minimum sensor length mounted on the evaporator varies between 95mm to 105mm depending on the specific model.


# **Installation Guide**

# Service thermostats Type 077B7

### Service thermostats 077B7099


Ice-cream cabinets and freezers without signal

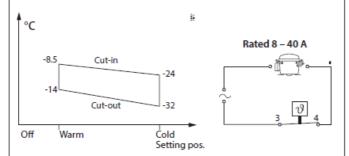


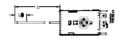

Length of capillary (mm): L = 1200 +30/-0 Min. sensor length mounted on evaporator (mm): LS = 95 (Used as airsensor min. 2 x LS)

# Service thermostats 077B7100 Commercial refrigerators

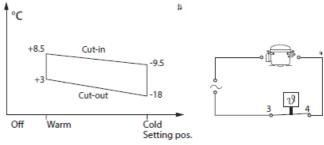


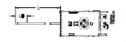


Length of capillary (mm): L = 1200 +30/-0 Min. sensor length mounted on evaporator (mm): LS = 95 (Used as airsensor min. 2 x LS)

# Service thermostats 077B7101

Bottle and liquid coolers

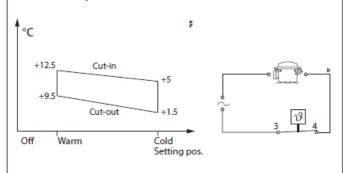


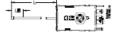

Length of capillary (mm): L = 1200 + 30/-0Min. sensor length mounted on evaporator (mm): LS = 100 (Used as airsensor min, 2 x LS)

#### Service thermostats 077B7102

Ice-cream cabinets and freezers without signal

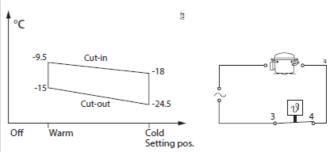




Length of capillary (mm): L = 1200 + 30/-0Min. sensor length mounted on evaporator (mm): 1.5 = 95(Used as airsensor min. 2 x LS)


# Service thermostats 077B7103


Refrigerators with push button defrost

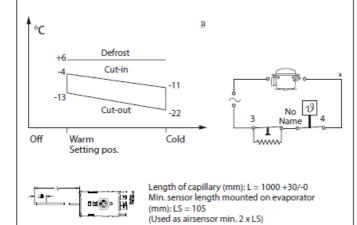

# Service thermostats 077B7104

Refrigerators with automatic defrost

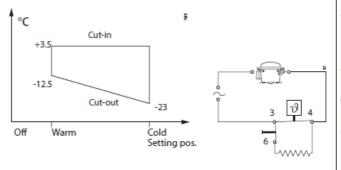

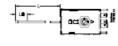

Length of capillary (mm): L = 1000 +30/-0 Min. sensor length mounted on evaporator (mm): LS = 100 (Used as airsensor min. 2 x LS)

# Service thermostats 077B7105 Commercial refrigerators ŀ °C +8.5 Cut-in -9.5 Cut-out -18 Off Warm Ċold Setting pos. Length of capillary (mm): L = 1200 +30/-0 Min. sensor length mounted on evaporator (mm): S = 95 (Used as airsensor min. 2 x LS) Service thermostats 077B7109 Bottle and liquid coolers ŝ °C +10.5 Cut-in +3

45

Ćold

LS = 85

Setting pos.

(Used as airsensor min. 2 x LS)

Length of capillary (mm): L = 1200 +30/-0


υ


Cut-out


ம⊚் Б


Warm

Off

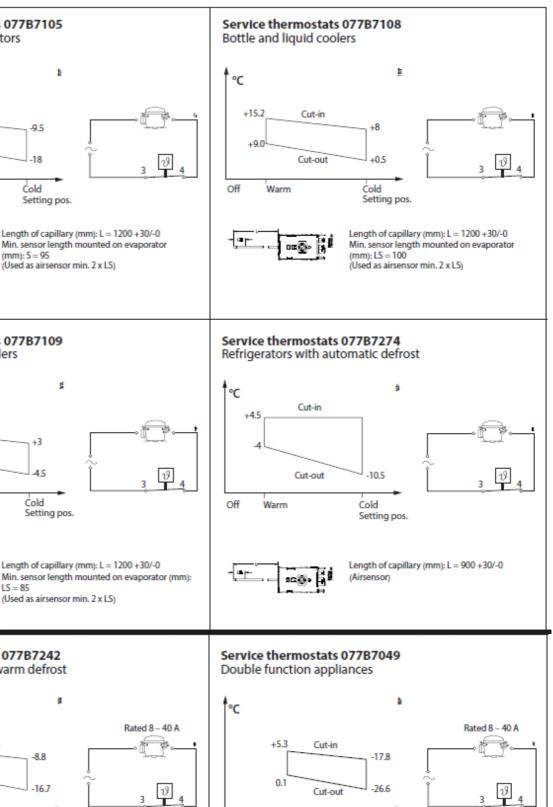


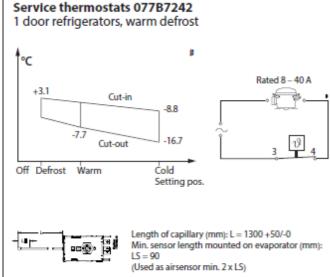


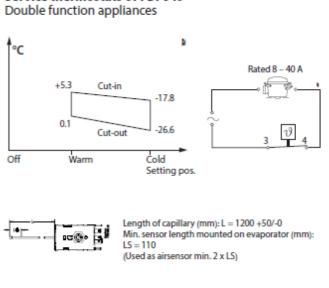


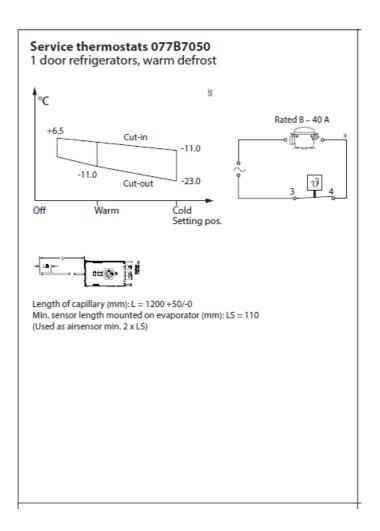



# Accessories for 077B7099

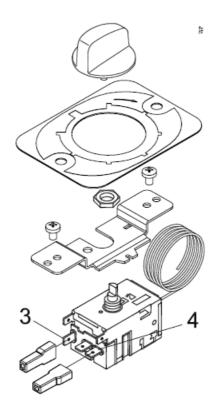

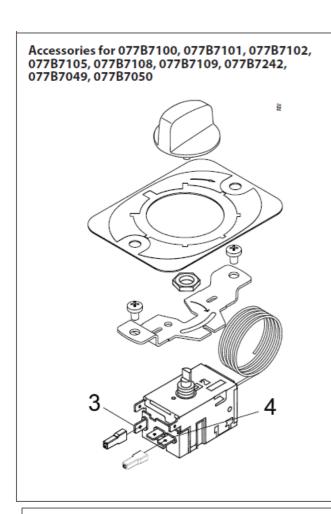

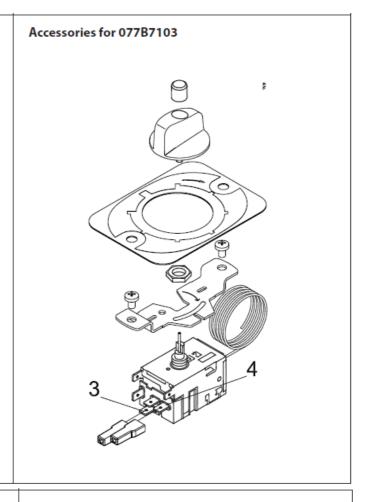

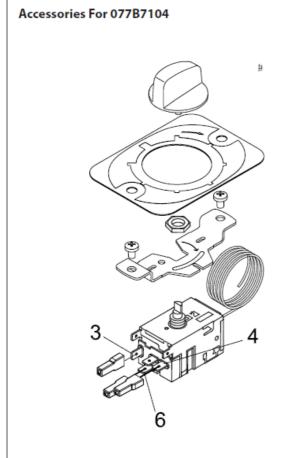

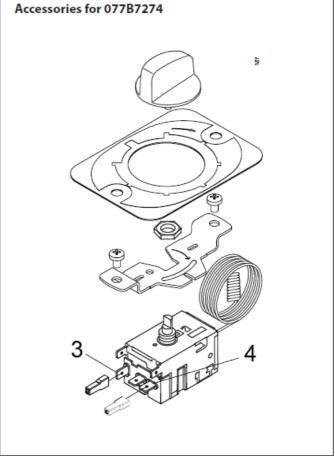

- The 077B....EBD, 077B....L EBD can be applied on systems with R290 and R600a as the working fluid.
- For countries where safety standards are not an indispensable part of the safety system Danfoss recommends the installer to get a third-party approval of the system containing flammable refrigerant.

• Note: All temperatures at 760 mm Hg (except 077B7242 at 700 mm Hg).

Danfoss A/S Climate Solutions • danfoss.com

+45 7488 2222 Any logues description adVertisements etc. and water made available in writing, orally, electronics, online or sid downed, small be considered in amative, all is clay binding it auc to anualS, extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogs, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

# **Documents / Resources**



<u>Danfoss Type 077B7 Service Thermostats</u> [pdf] Installation Guide Type 077B7, Type 077B7 Service Thermostats, Service Thermostats, Thermostats

### References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.