



Danfoss Type ESMT Outdoor Temperature Sensor Instruction Manual

[Home](#) » [Danfoss](#) » Danfoss Type ESMT Outdoor Temperature Sensor Instruction Manual 



Instructions
Type ESMT
084R9247




ESMT
outdoor temperature sensor
www.bc.danfoss.com

Contents

- 1 Type ESMT Outdoor Temperature Sensor
- 2 Mounting
- 3 Electrical connection
- 4 Documents / Resources
 - 4.1 References


Type ESMT Outdoor Temperature Sensor

Type ESMT is a Pt 1000 Ω outdoor temperature sensor.

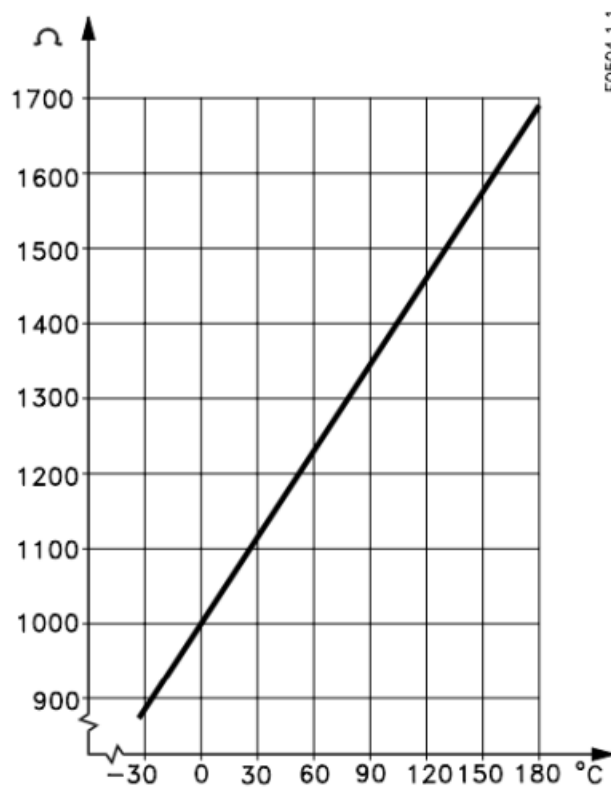

Mounting


The sensor is mounted on the coldest elevation of the building/zone (normally the north elevation).

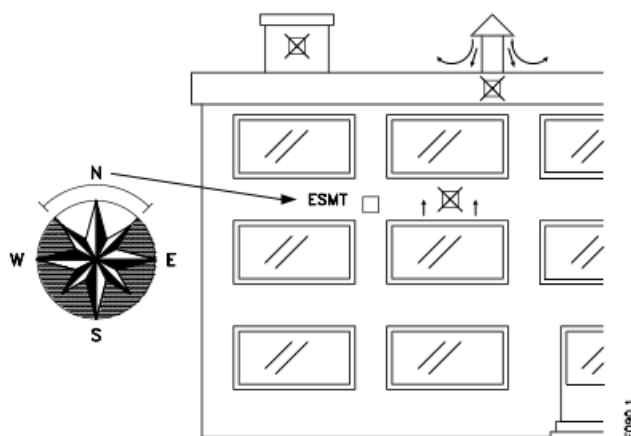

Electrical connection

Two wire non polarized (can be crossed).

Connection cable: 2 x 0.4 – 1.5 mm² .

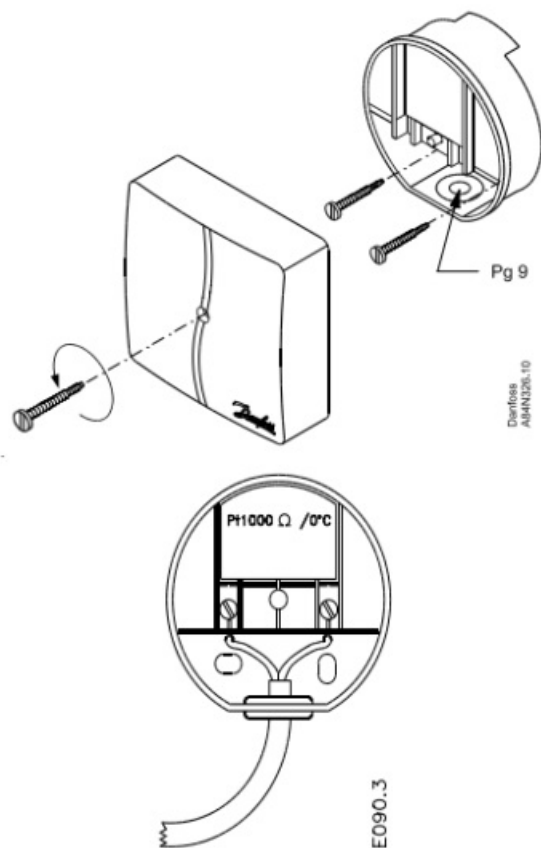


Danfoss

BC-SM, 04/2003

VI.75.M9.62

Documents / Resources

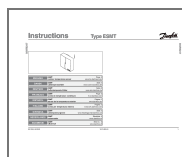

[Danfoss Type ESMT Outdoor Temperature Sensor](#) [pdf] Instruction Manual
Type ESMT, Type ESMT Outdoor Temperature Sensor, Outdoor Temperature Sensor, Temperature Sensor, Sensor

References

- [Danfoss España: Soluciones innovadoras y ahorro de energía | Danfoss](#)
- [Danfoss värmelösningar | Effektiva lösningar för överlägsen komfort | Danfoss](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.