



Danfoss Type EV225B Solenoid Valve Installation Guide

[Home](#) » [Danfoss](#) » Danfoss Type EV225B Solenoid Valve Installation Guide 


Danfoss Type EV225B Solenoid Valve Installation Guide




Contents

- [1 Product Usage Instructions](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)


Product Usage Instructions

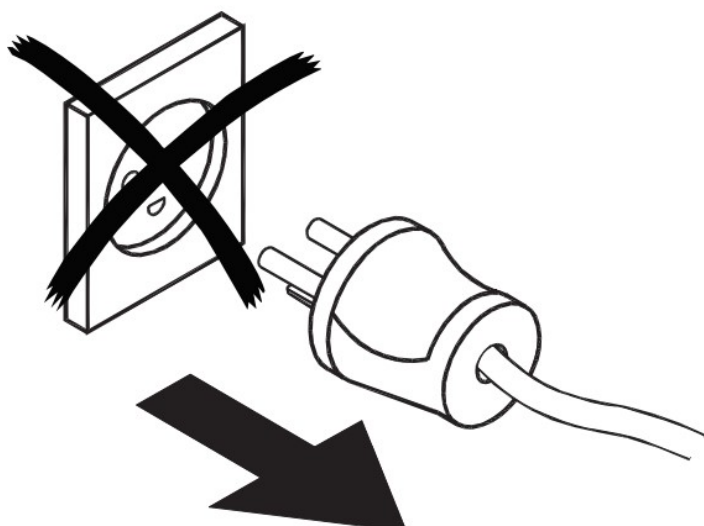


1.

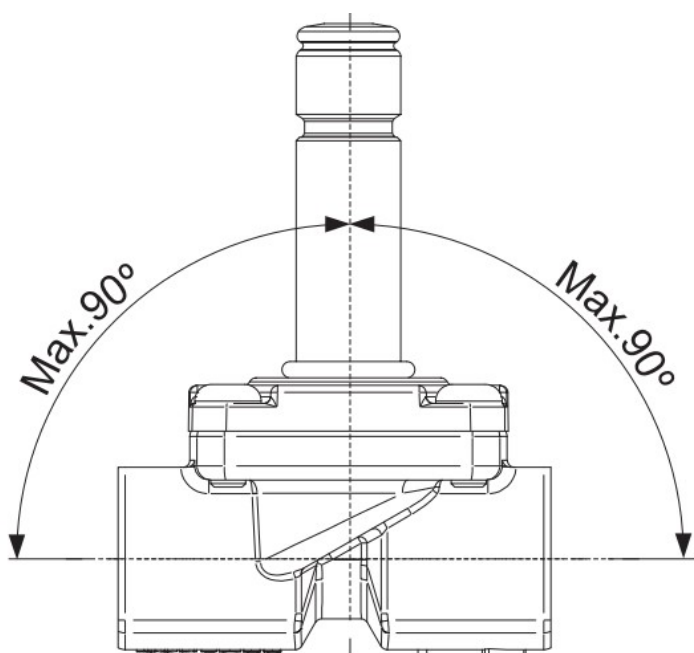


2.

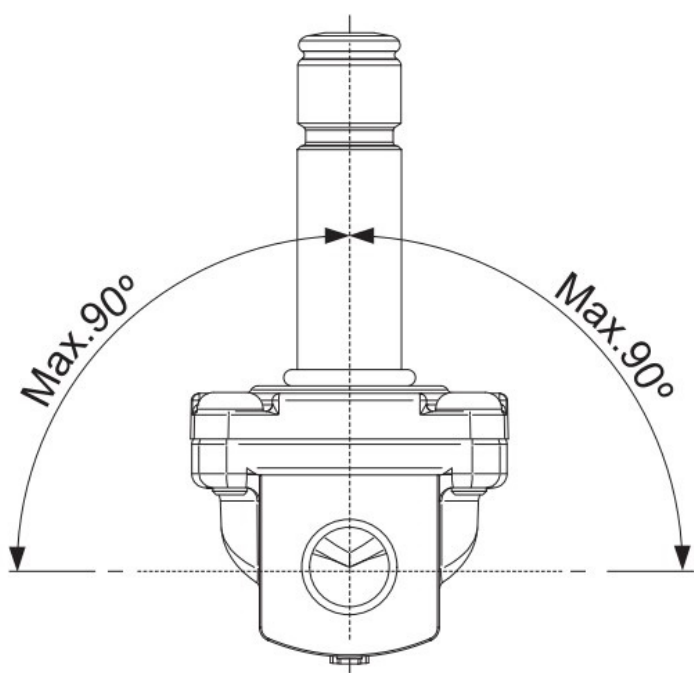


3.

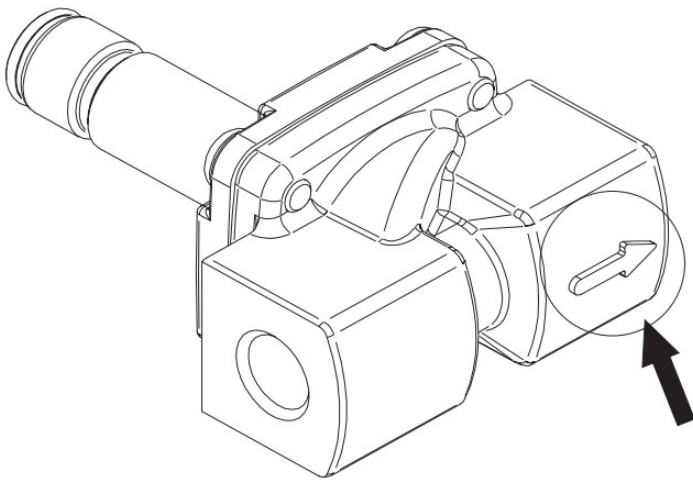


4.

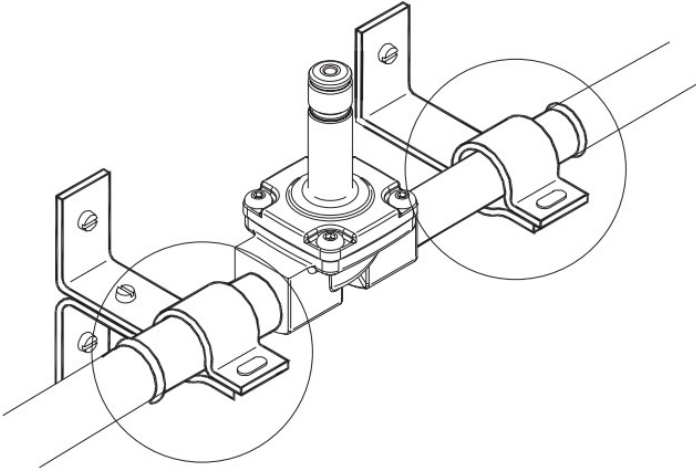


5.

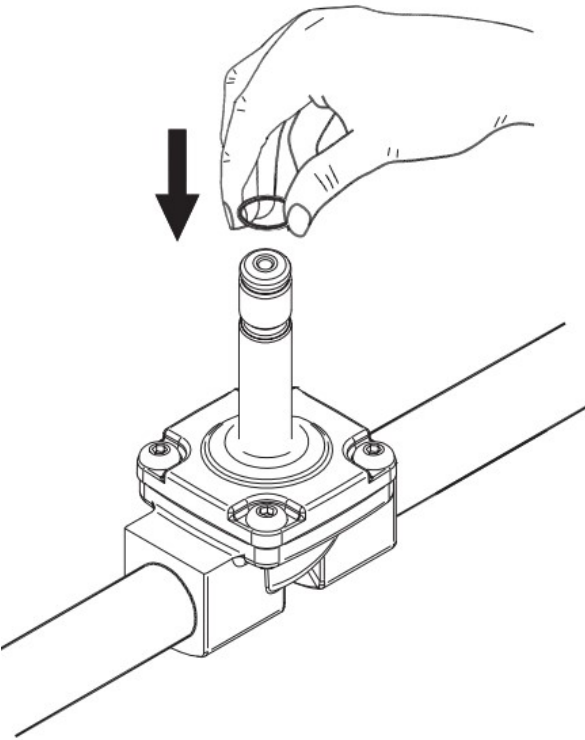


6.

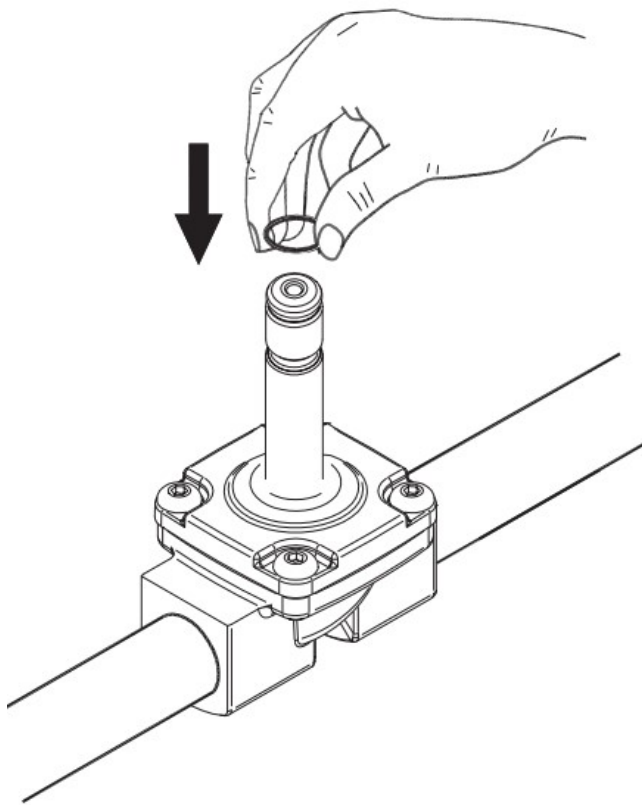


7.

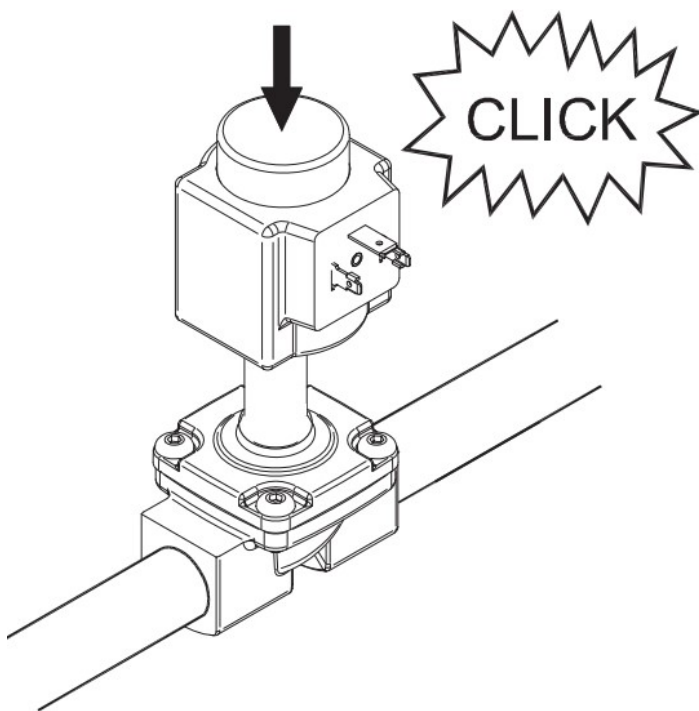


8.

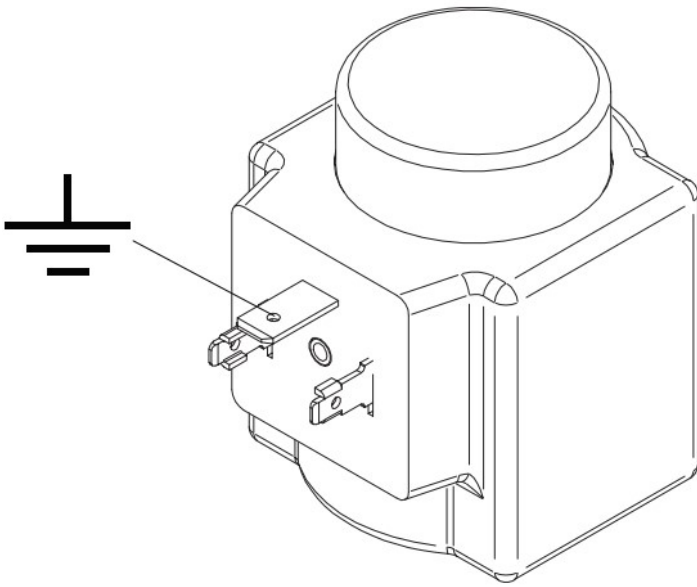



9.

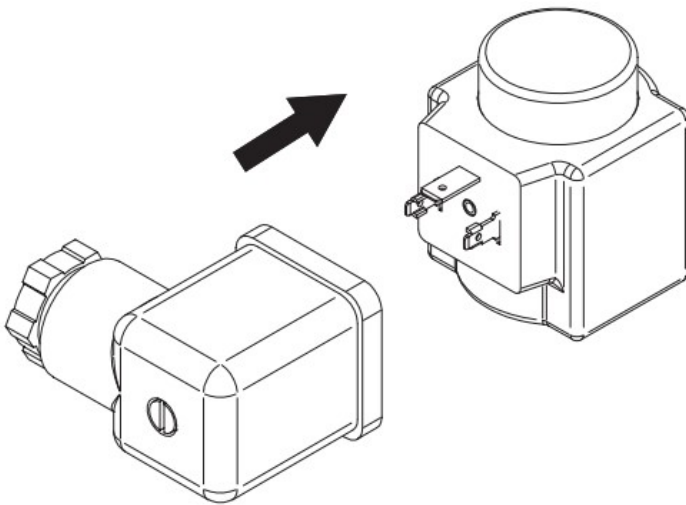

10.

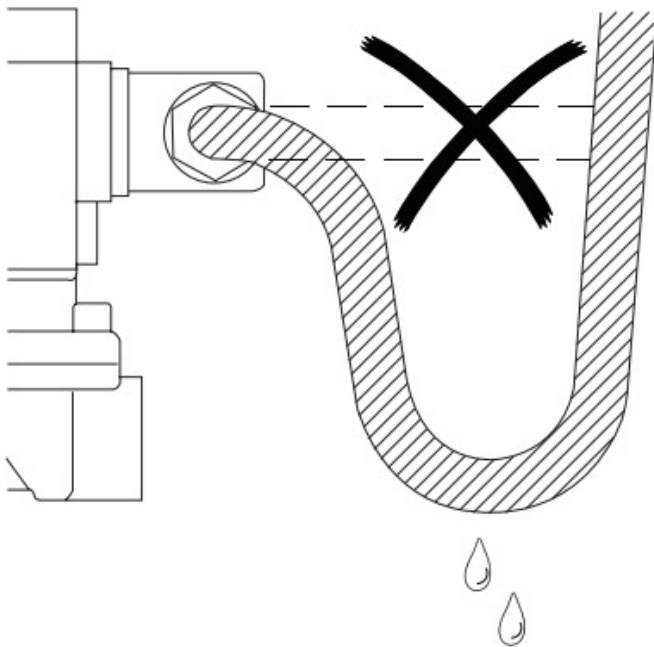

11.

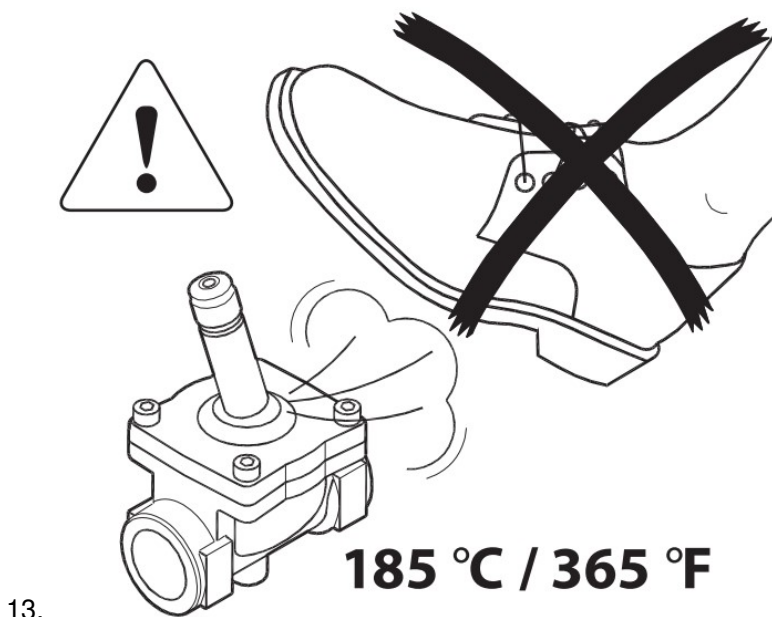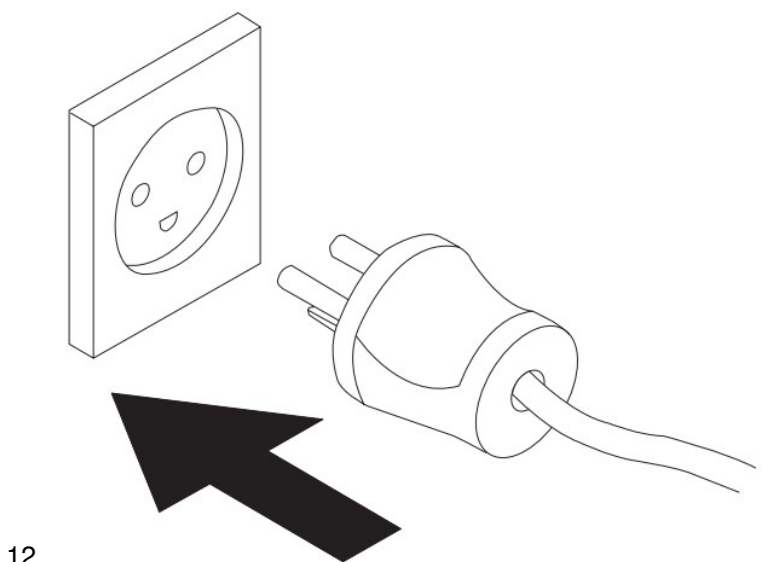


Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Deafness cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Deafness reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Deafness A/S or Deafness group companies. Deafness and the Deafness logo are trademarks of Deafness A/S. All rights reserved.

@ Danfoss I Climate Solutions I 2022.12 AN12588642414501-000201

Documents / Resources

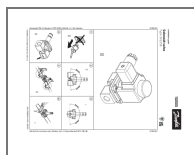

[Danfoss Type EV225B Solenoid Valve](#) [pdf] Installation Guide
Type EV225B Solenoid Valve, Type EV225B, Solenoid Valve, Valve