



Danfoss VIMDI148 Icon Wireless Room Thermostat Installation Guide

[Home](#) » [Danfoss](#) » Danfoss VIMDI148 Icon Wireless Room Thermostat Installation Guide 

Contents

- [1 Icon Wireless Room Thermostat VIMDI148](#)
- [2 Installation](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

Icon Wireless Room Thermostat VIMDI148

Installation Guide for Danfoss Link™ CC
Danfoss Icon™ Wireless
Room Thermostat

AN295352186211cs-000101 | VIMDI148 | 088N2106 www.smartheating.danfoss.com

Installation

Adding a Danfoss Icon room thermostat Dan to the Danfoss Link system™ is performed with the Danfoss Link-CC control unit. See for more information in the Danfoss Link-CC Controller Installation Manual. Insert the thermostat into the Link system™ following the instructions on the control screen Link™ CC and touch the thermostat screen when prompted Icon to switch it to insert mode. In insert mode, appears on the screen The thermostat displays a moving pattern, as shown below:
After successful insertion, a check mark will appear on the thermostat.
Touch the check mark to exit insert mode.

Open the menu


Wake up the thermostat. Touch and hold the button to open the menu (Fig. B).
 You can switch or confirm the menus with the button. Press the up button you return in the menu.

Offers

Step-1: Performs a connection test with the main controller. Returns the result as percentage values 0-100% (80% or higher is very strong connection).

Step-2 : Information / version number can be used to identify the product.

Step-3. Resetting

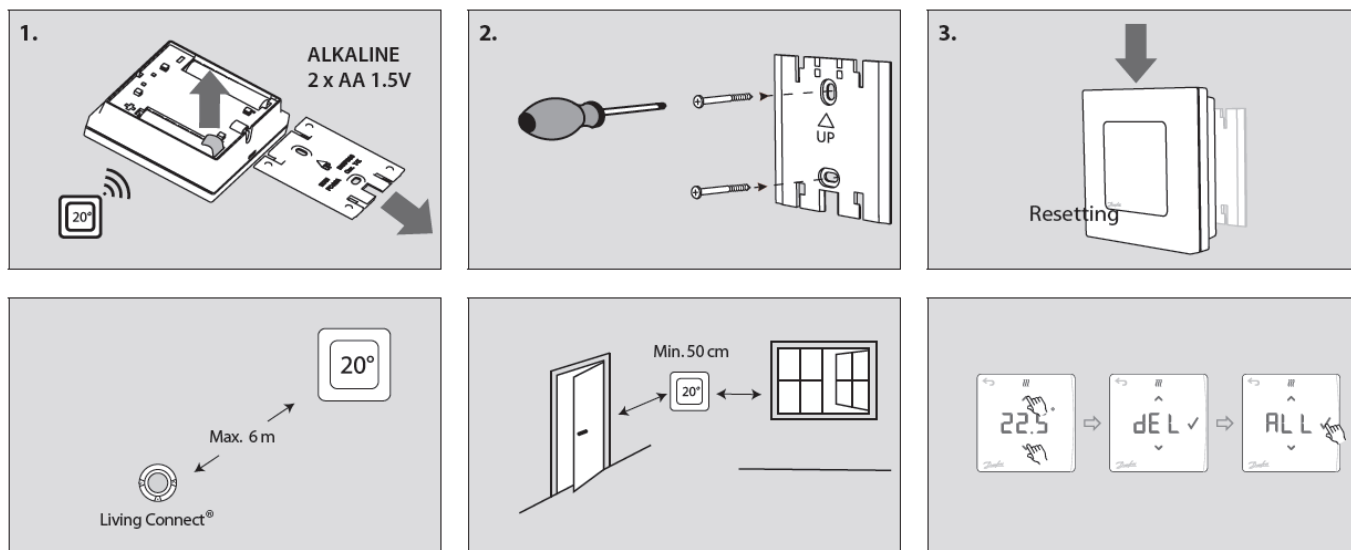


Menu  		
ME.1		Link Test
ME.2		Product ID / Version

Danfoss s.r.o.

Heating Segment • danfoss.cz • +420 228 887 666 • E-mail: zakaznickyservis@danfoss.com

Documents / Resources

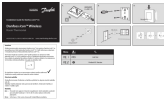	Danfoss VIMDI148 Icon Wireless Room Thermostat [pdf] Installation Guide VIMDI148, Danfoss, Icon Wireless Room Thermostat
---	---