

Danfoss
**VLT 5000 Series
LCP Remote Kit**



Danfoss VLT 5000 Series LCP Remote Kit Instructions

[Home](#) » [Danfoss](#) » Danfoss VLT 5000 Series LCP Remote Kit Instructions 

Contents

- [1 Danfoss VLT 5000 Series LCP Remote Kit](#)
- [2 Product Usage Instructions](#)
- [3 FAQ](#)
- [4 WHAT'S IN THE BOX](#)
- [5 INSTALLATION INSTRUCTION](#)
 - [5.1 MODELS | VLT®5001-5006, 200/240 V](#)
 - [5.2 MODELS | VLT®5008-5027, 200/240 V](#)
 - [5.3 MODELS | VLT®5032-5052, 200/240 V](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



Danfoss VLT 5000 Series LCP Remote Kit



Specifications

- **Product Name:** LCP Remote kit
- **Model Number:** MI.56.G2.52
- **Trademark:** VLT by Danfoss
- **IP Rating:** IP 54

Product Usage Instructions

Mounting Instructions

1. Ensure the area where the LCP Remote kit will be mounted is clean and dry.
2. Use the provided mounting hardware to securely attach the kit to a suitable surface.

Installation Steps

1. Connect the necessary cables according to the provided diagram.
2. Power on the LCP Remote kit and follow the setup instructions on the display.

FAQ

What should I do if the LCP Remote kit display shows an error?

If you encounter an error on the display, refer to the user manual for error code explanations and troubleshooting steps. If the issue persists, contact customer support.


Can the LCP Remote kit be used outdoors?

The LCP Remote kit has an IP rating of IP 54, making it suitable for outdoor use. However, it should be protected from direct exposure to heavy rain or extreme weather conditions.

- **Warning!** Electronic components within the VLT are susceptible to Electrostatic Discharge ESD.

- Make sure that the option card remains in the ESD protective bag at all times during transportation and storage.
- Before you take the card out of the protective back for mounting, make sure that you are properly connected to common ground, for example through a connected wristband, and that the same applies to the VLT.
- When the option card is out of the protective bag, you should only touch the rim, and never touch the electronic components, as they may suffer irreparable damage.


WHAT'S IN THE BOX

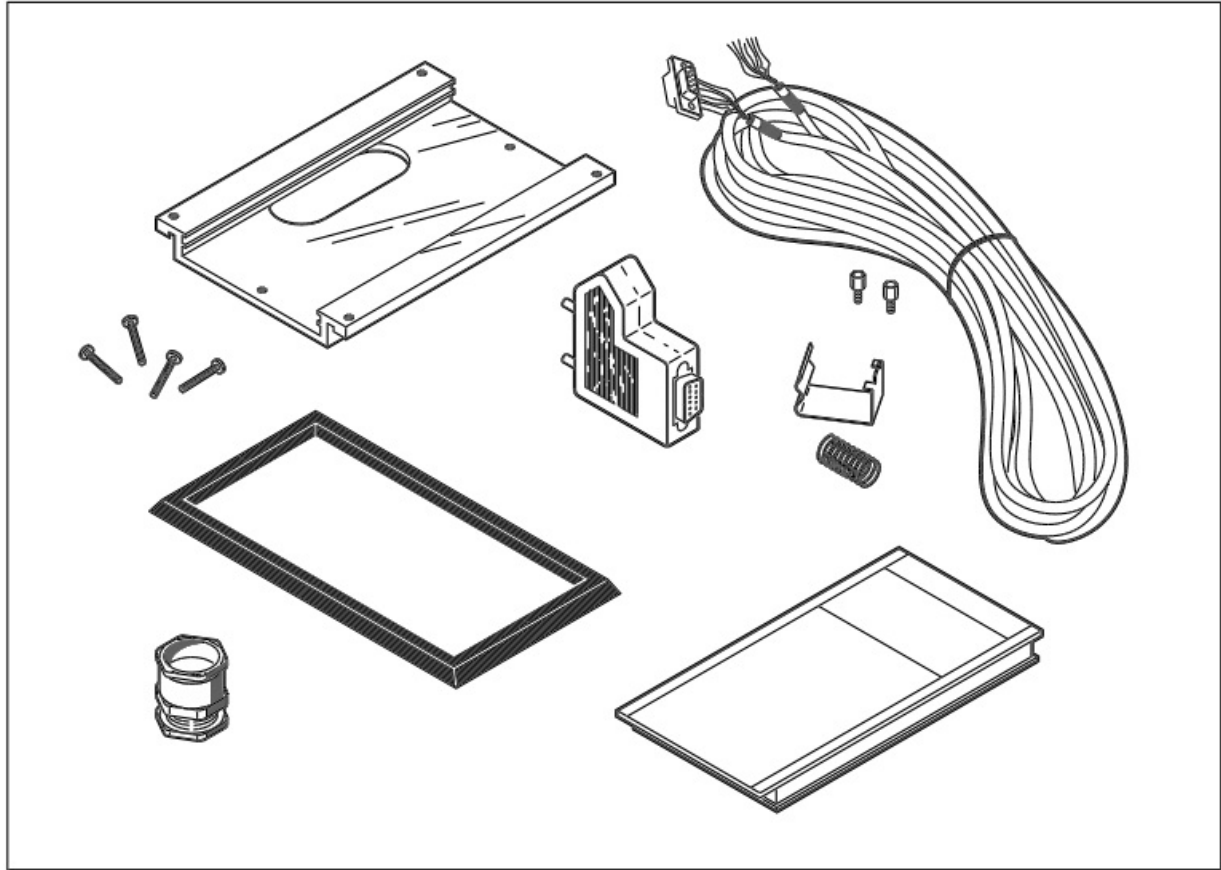


INSTALLATION INSTRUCTION

MODELS | VLT@5001-5006, 200/240 V


1.

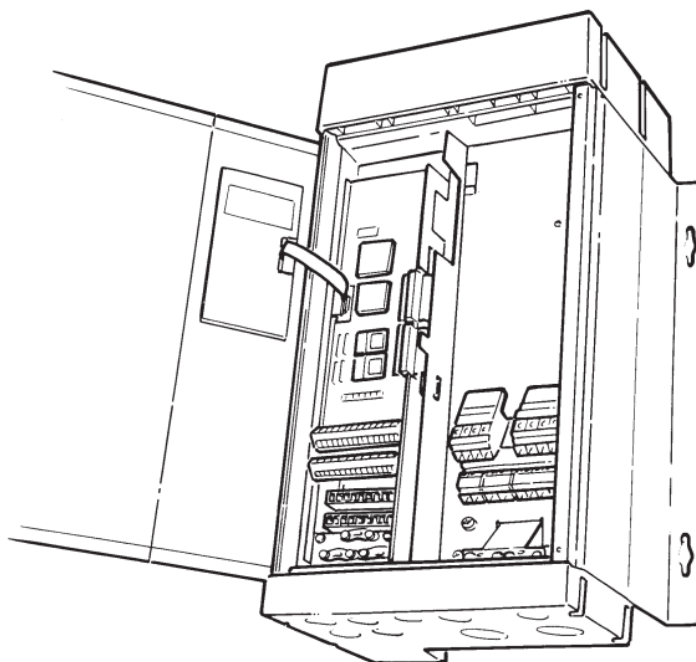


2.

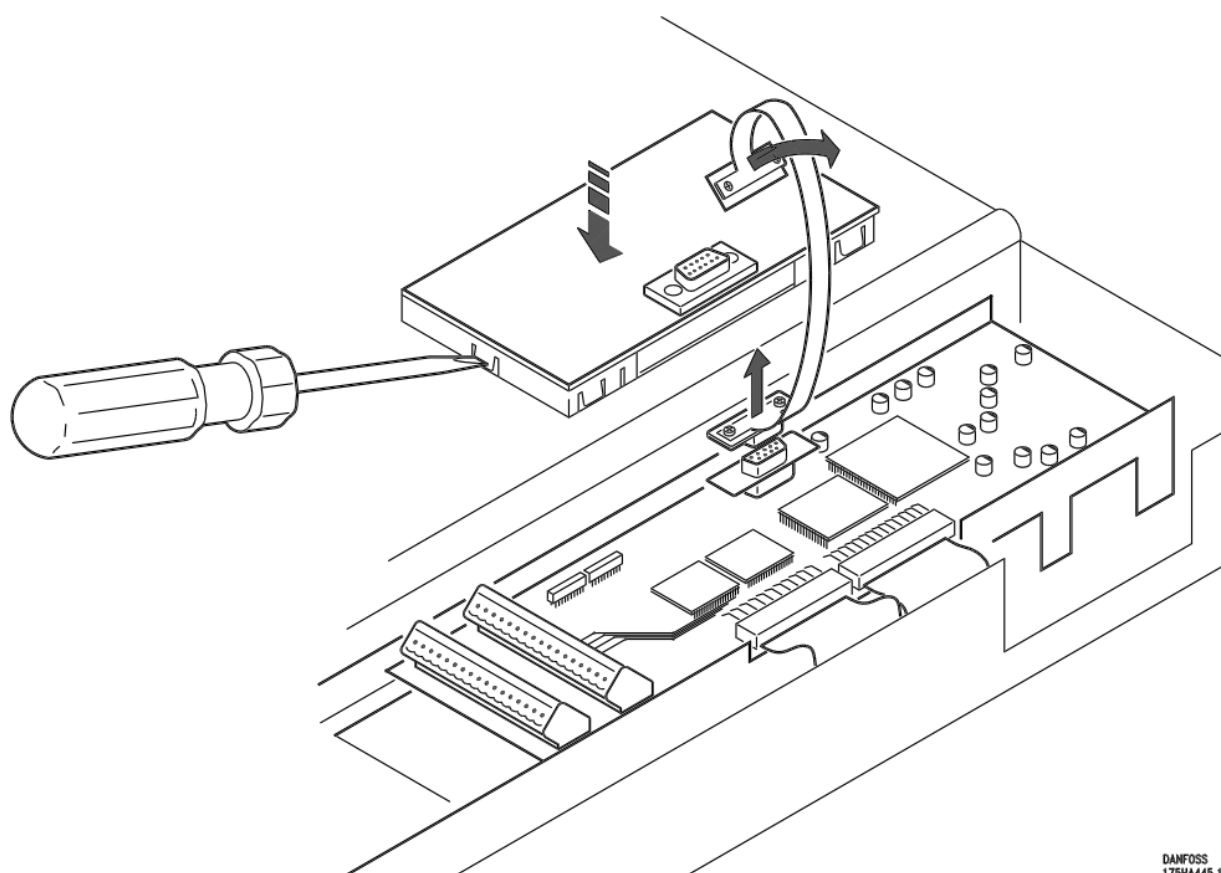


3.

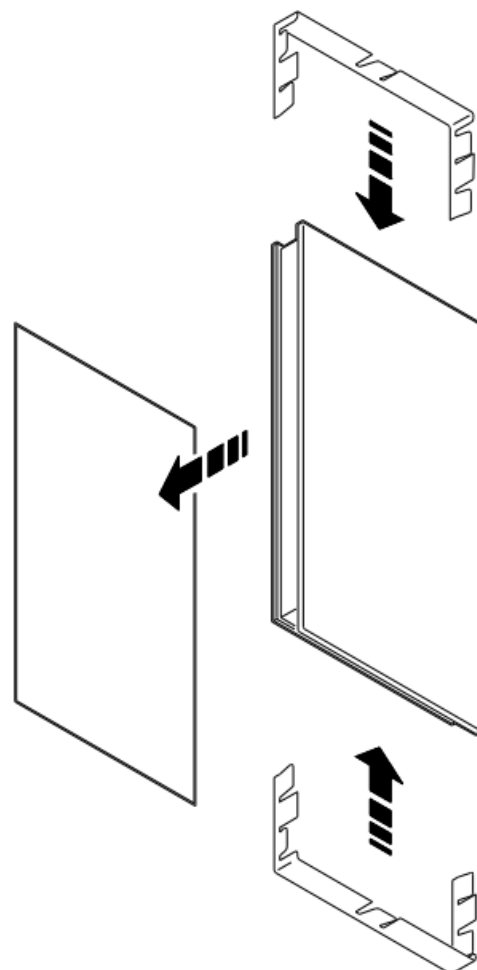



4.

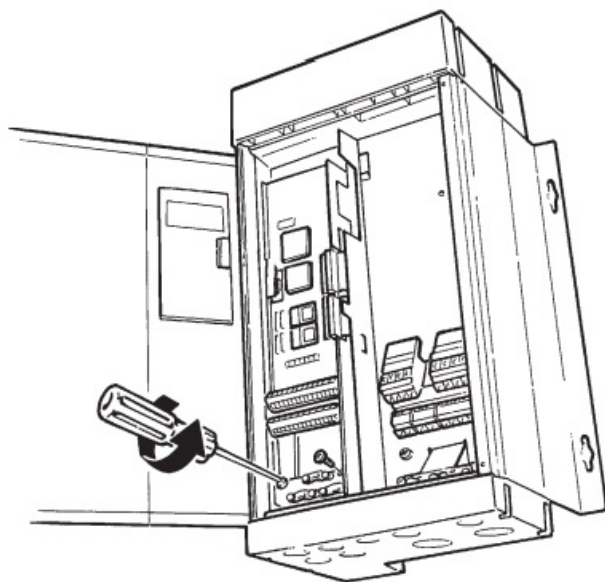

5.

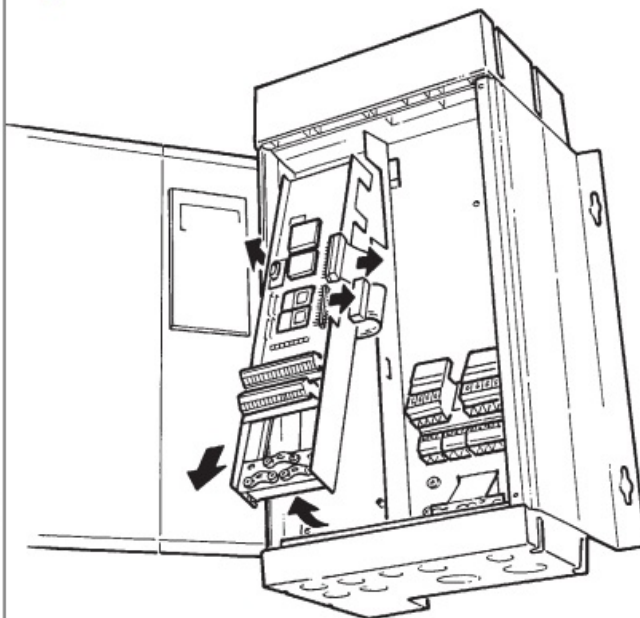


6.

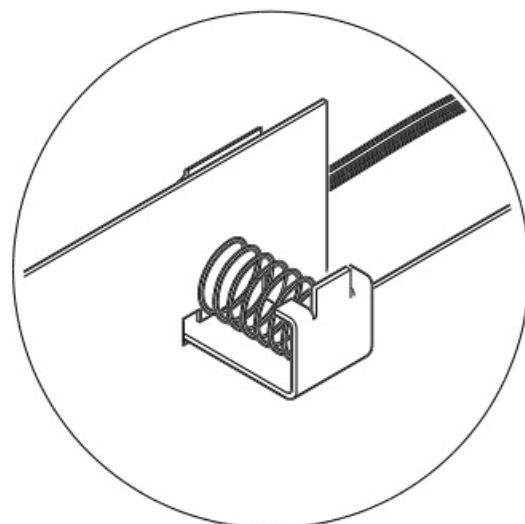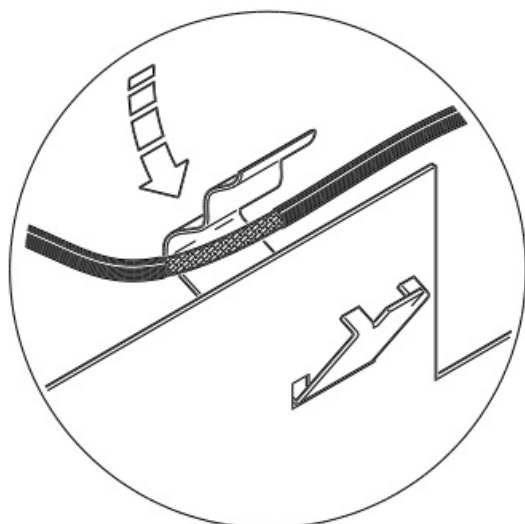


DANFOSS
175HA443.10

7.

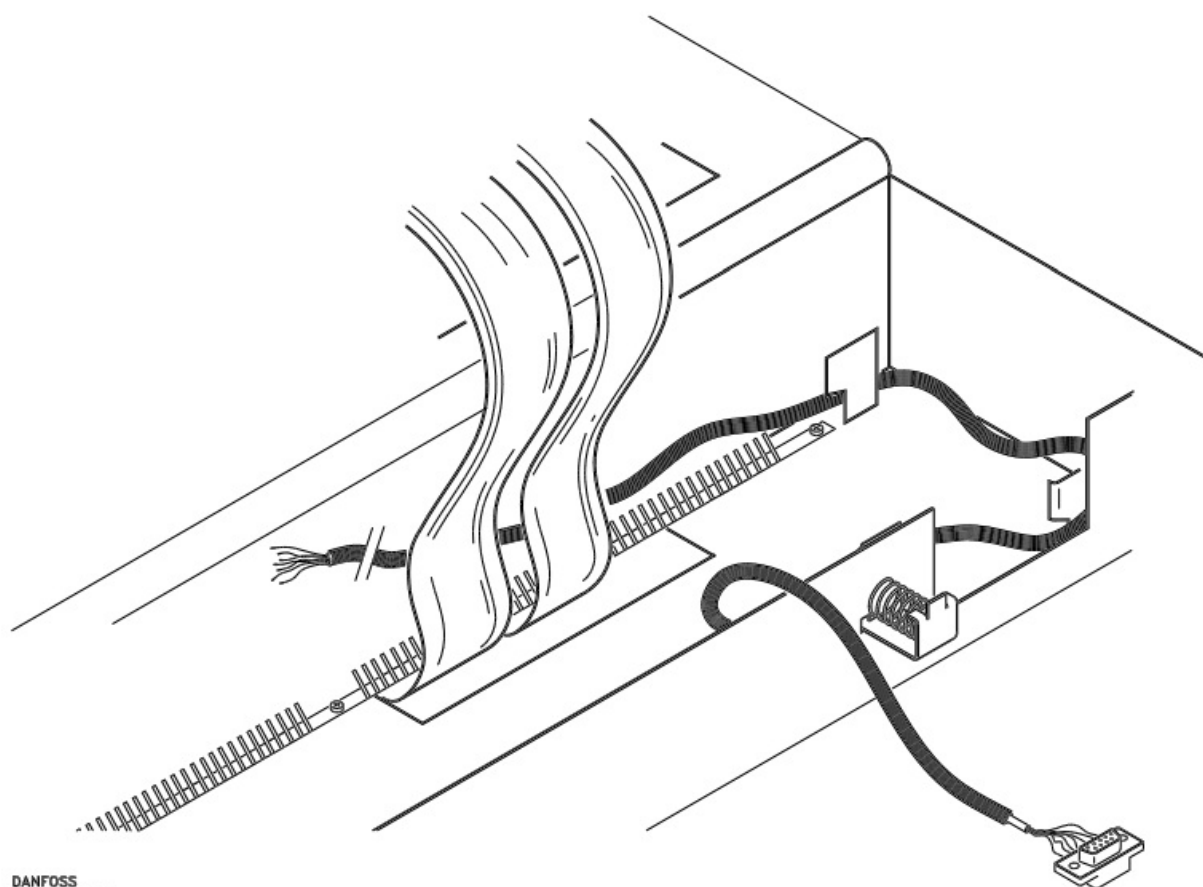


DANFOSS
175HA447.10

8.

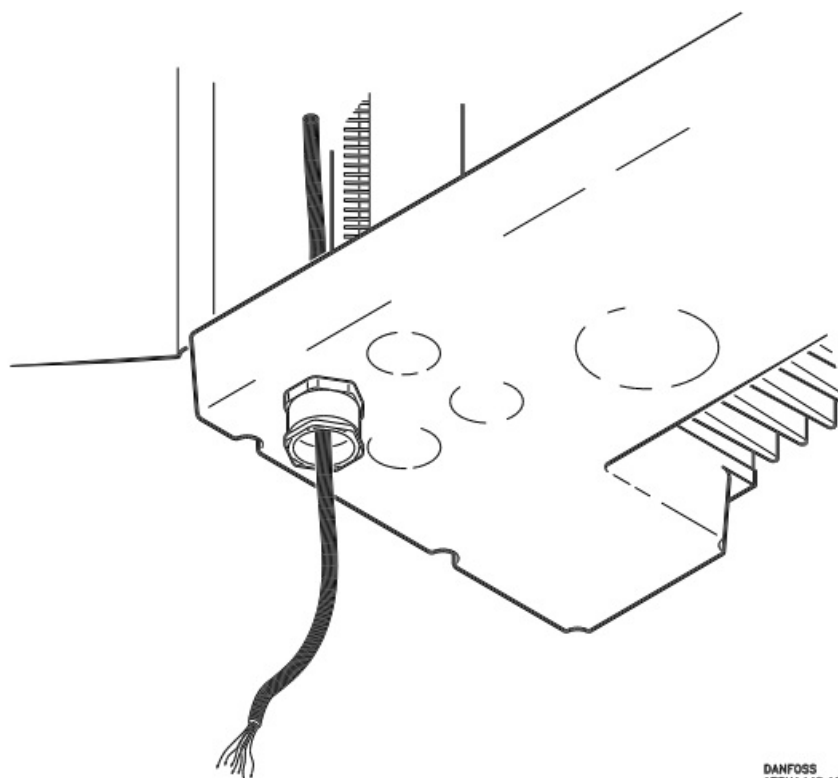


DANFOSS
175HA448.10

9.

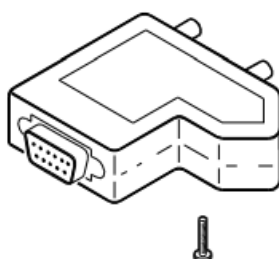


	Dansk	English	Deutsch	Francais	
A					B
1	Sort	Black	Schwarz	Noir	1
2	Brun	Brown	Braun	Marron	2
3	Rød	Red	Rot	Rouge	3
4	Gul	Yellow	Gelb	Jaune	4
5	Grøn	Green	Grün	Vert	5
6	Blå	Blue	Blau	Bleu	6
7	Lilla	Purple	Lila	Violet	7
8	Grå	Grey	Grau	Gris	8
9	Hvid	White	Weiss	Blanc	9

DANFOSS
175HA451.11

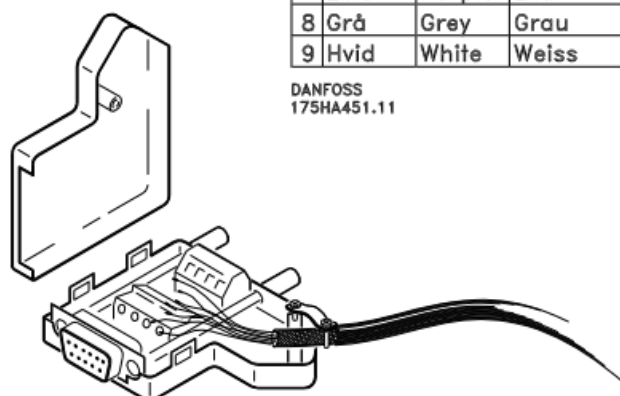


INSTALLATION INSTRUCTION


1.

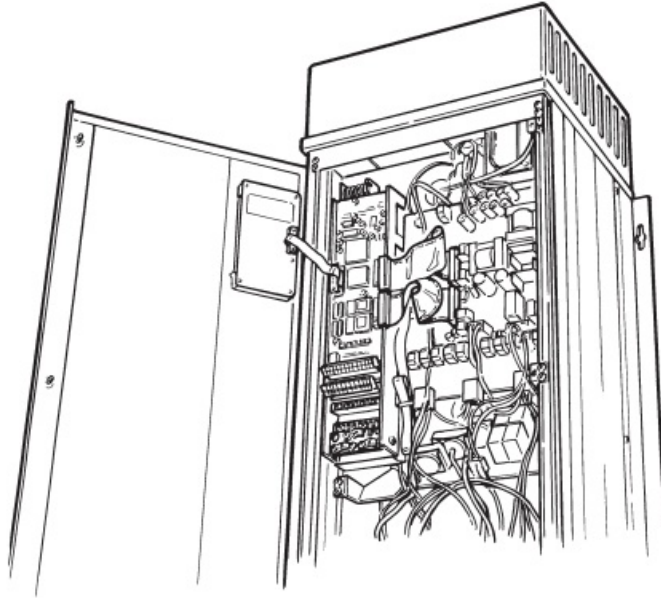


2.

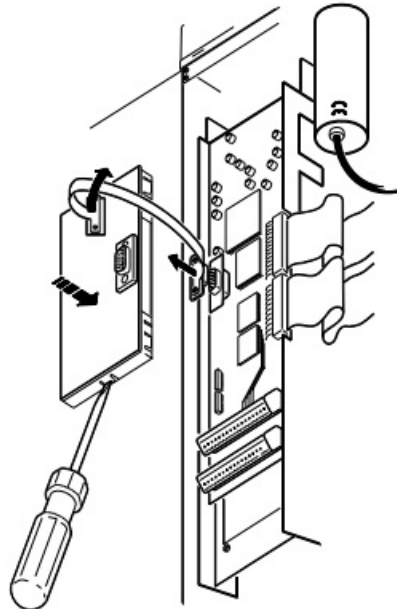

3.

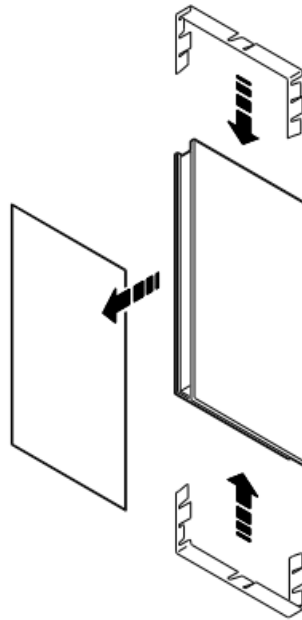

4.

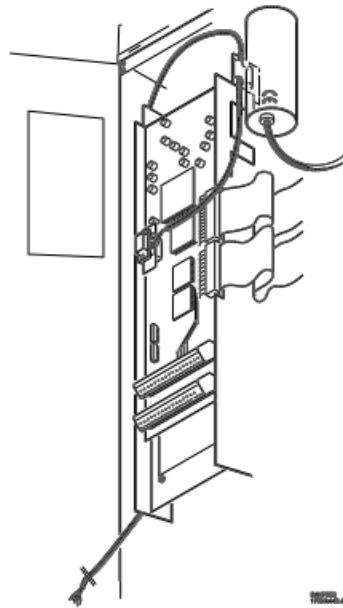


5.





DANFOSS
175HA444.10

6.

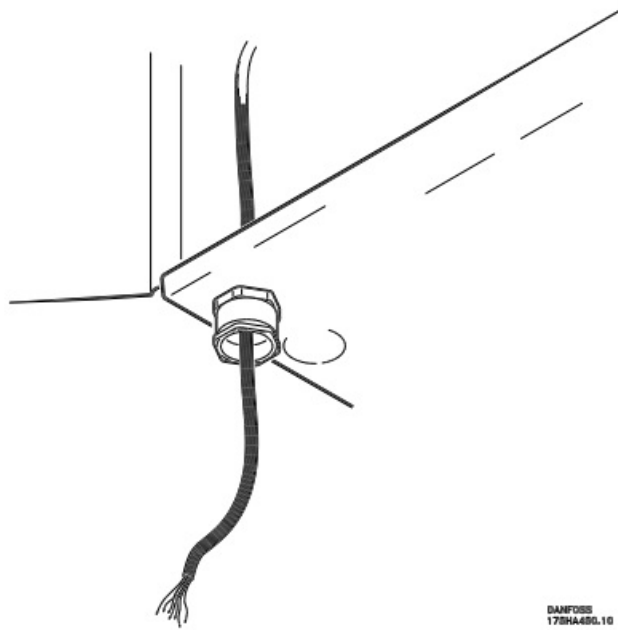

DANFOSS
175HA450.10


7.

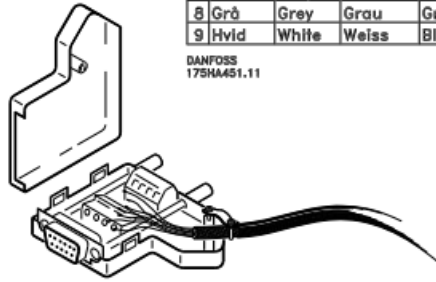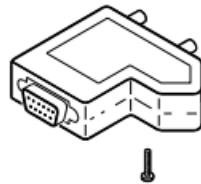

	Dansk	English	Deutsch	Français	
A					8
1	Sort	Black	Schwarz	Noir	1
2	Brun	Brown	Braun	Marron	2
3	Rød	Red	Rot	Rouge	3
4	Gul	Yellow	Gelb	Jaune	4
5	Grøn	Green	Grün	Vert	5
6	Blå	Blue	Blau	Bleu	6
7	Lilla	Purple	Lila	Violet	7
8	Grå	Grey	Grau	Gris	8
9	Hvid	White	Weiss	Blanc	9


DANFOSS
175HA451.11

8.

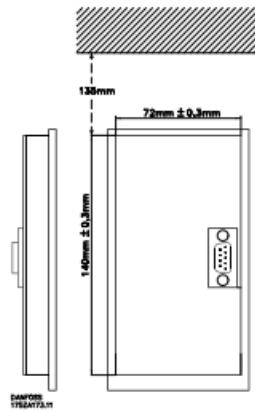


DANFOSS
175DA173.11

9.

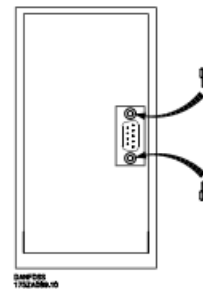


DANFOSS
175ZAT86.10

10.

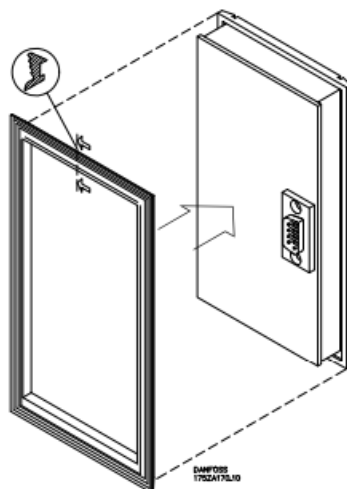

DANFOSS
175ZAT76.10


11.

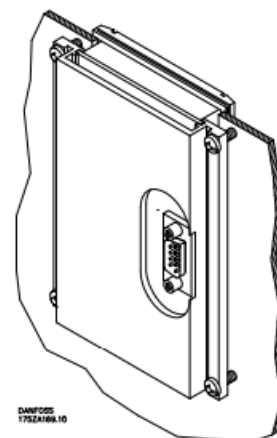

DANFOSS
175ZAT69.10


MODELS | VLT@5032-5052, 200/240 V

WHAT'S IN THE BOX

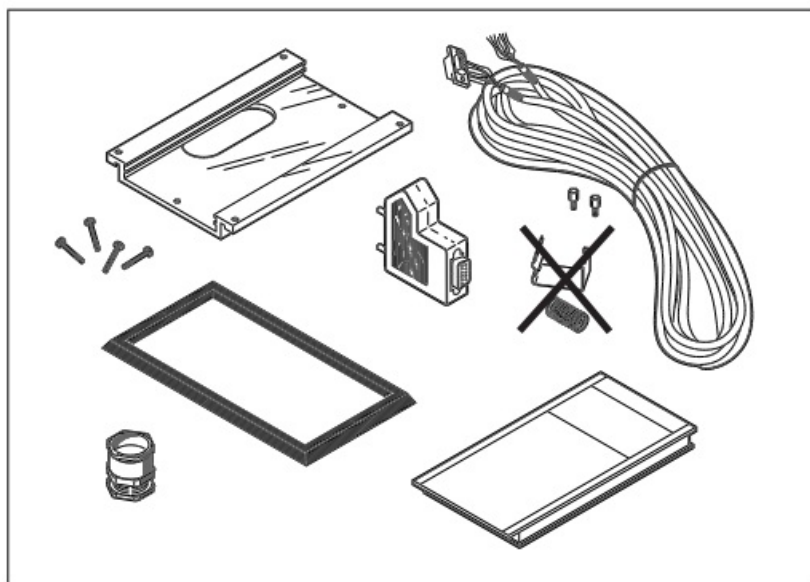


INSTALLATION INSTRUCTION


Not used

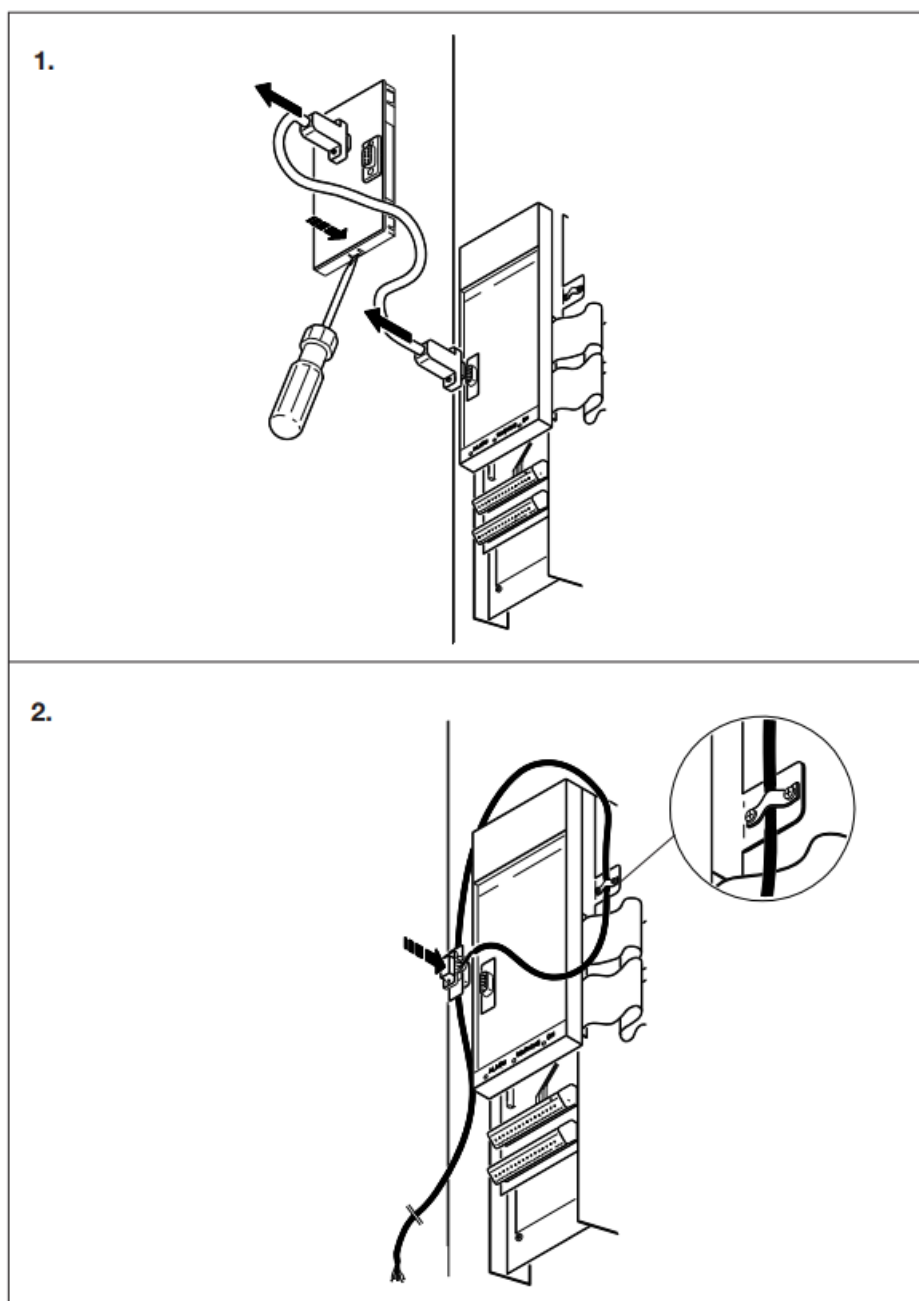


3.

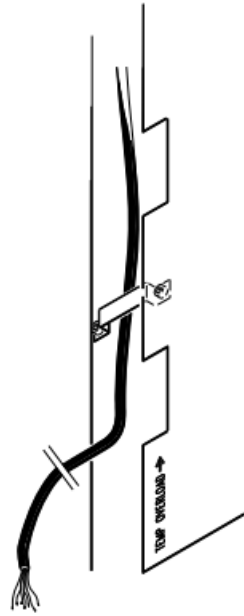



4.

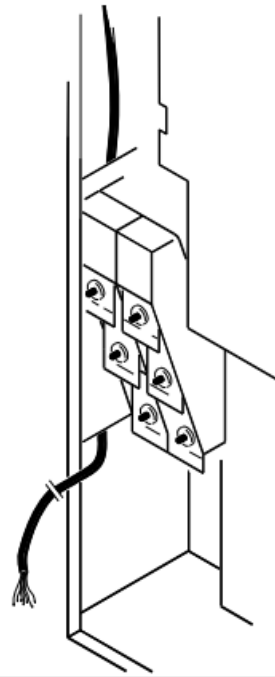

5.

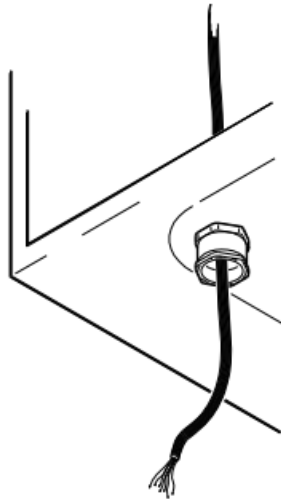


6.

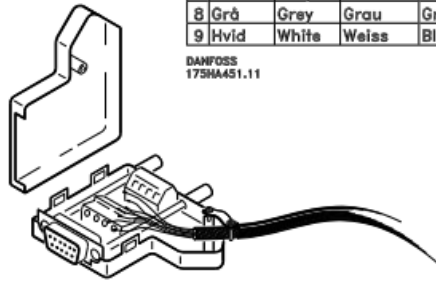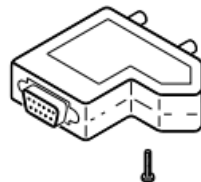

	Dansk	English	Deutsch	Français	
A					B
1	Sort	Black	Schwarz	Noir	1
2	Brun	Brown	Braun	Marron	2
3	Rød	Red	Rot	Rouge	3
4	Gul	Yellow	Gelb	Jaune	4
5	Grøn	Green	Grün	Vert	5
6	Blå	Blue	Blau	Bleu	6
7	Lilla	Purple	Lila	Violet	7
8	Grå	Grey	Grau	Gris	8
9	Hvid	White	Weiss	Blanc	9


DANFOSS
175HA451.11

7.

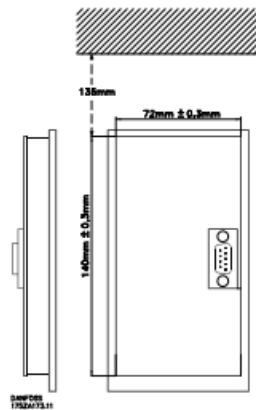


DANFOSS
1752A173.11

8.

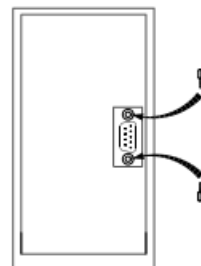


DANFOSS
1752A168.10

9.

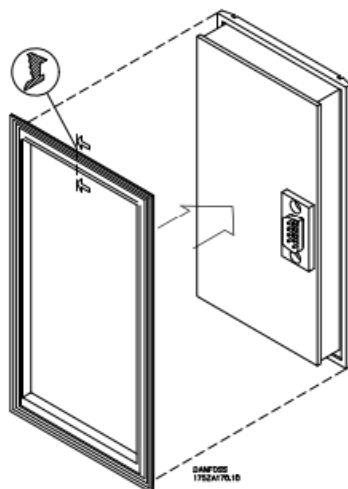

DANFOSS
1752A176.10

10.

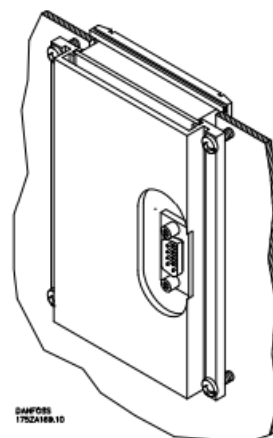


DANFOSS
1752A168.10

- Danfoss can accept no responsibility for possible errors in catalogs, brochures, and other printed material.
- Danfoss reserves the right to alter its products without notice. This also applies to products already on order

provided that such alterations can be made without subsequential changes being necessary in specifications already agreed.

- © Danfoss Drives A/S (DKDD-SIM) 10.98
- MI.56.G2.52 – VLT is a registered Danfoss trademark

Documents / Resources

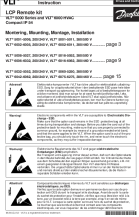	<p>Danfoss VLT 5000 Series LCP Remote Kit [pdf] Instructions VLT 5000 Series LCP Remote Kit, VLT 5000 Series, LCP Remote Kit, Remote Kit</p>
---	--

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.