



Danfoss VUMCA10F Room Thermostat User Guide

[Home](#) » [Danfoss](#) » Danfoss VUMCA10F Room Thermostat User Guide 



User Guide
Danfoss Icon2™ / 24V RT
Room Thermostat

Contents

- [1 Wake up the thermostat](#)
- [2 Set the temperature](#)
- [3 Open the Settings menu](#)
- [4 Menus](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Wake up the thermostat

Touch the screen – the actual room temperature is displayed (fig. A).

The Heating icon  is displayed if the heat is on, and the Cooling icon  is displayed if the cooling is on. The screen turns off after 10 seconds.

Set the temperature


Wake up the thermostat. Touch  or  to set the temperature (temperature flashes to indicate setting in progress). Touch  to confirm the new setting.

Open the Settings menu

Wake up the thermostat. Touch and hold ↶ to open the menu (fig. B).
Toggle the menu with ^ or v , confirm with ✓ .
Touch ↶ to go backward in the menu.

Menus

- ME. 1 : Temperature limitation, i.e. allowed setting range for room temperature.
 - ME.2 : Product ID – your product can be identified with this code.
 - ME.3 : Perform Link Test, if the thermostat has been moved. Check the signal, a result of 80 % or more equals a” strong connection”.
 - ME.5 : Set min. and max. the temperature of the floor surface (the menu is only displayed if your thermostat has a floor sensor).
- Note!** Menus 4, 6, and 7 are only available to the installer.

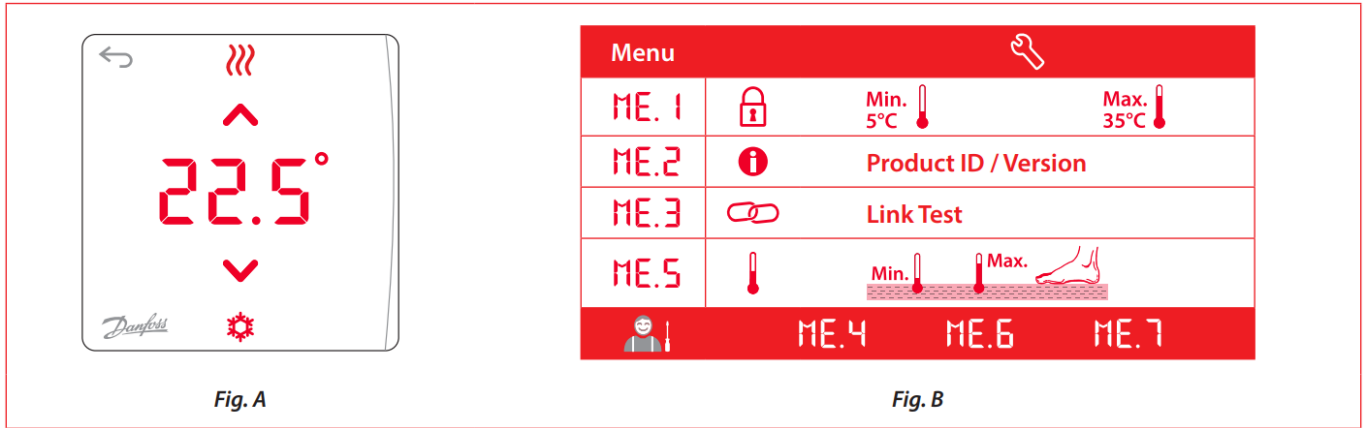

BC29653691242001-000201 | VUMCA10F | 088N3691 www.icon.danfoss.com

Documents / Resources



[Danfoss VUMCA10F Room Thermostat](#) [pdf] User Guide
VUMCA10F Room Thermostat, VUMCA10F, Room Thermostat

References

- 🌐 [Danfoss Icon](#) | [Danfoss](#)