













DarkWalker FO203 Mechanical Keyboard & Mouse User Manual

[Home](#) » [DarkWalker](#) » DarkWalker FO203 Mechanical Keyboard & Mouse User Manual 

Keyboard Lighting Effects User Manual Darkwalker

F0203 Keyboard and Mouse Combo for PH/Knox One/Nintendo Switch



- | | | | |
|---|---|--|--|
|  | + |  | Change Back Lighting Effects |
|  | + |  | Increase Back Lighting Breathing Speed |
|  | + |  | Decrease Back Lighting Breathing Speed |
|  | + |  | Increase Back Lighting intensity |
|  | + |  | Decrease Back Lighting intensity |

Contents

 
- 1 WARRANTY
- 2 Delta Keying Program
- 3 ZBOX ONE
- 4 XBOX ONE Default Keymap Guide
- 5 PLAYSTATION 4
- 6 Documents / Resources
- 7 Related Posts

WARRANTY

75-day free replacement policy. If you have got a problem with the product within 75 days. Please contact our customer support for free replacement: cs@mydarkwalker.com.

Delta Keying Program

Download the keymap program on <https://www.mydarkwalker.com/pages/download>

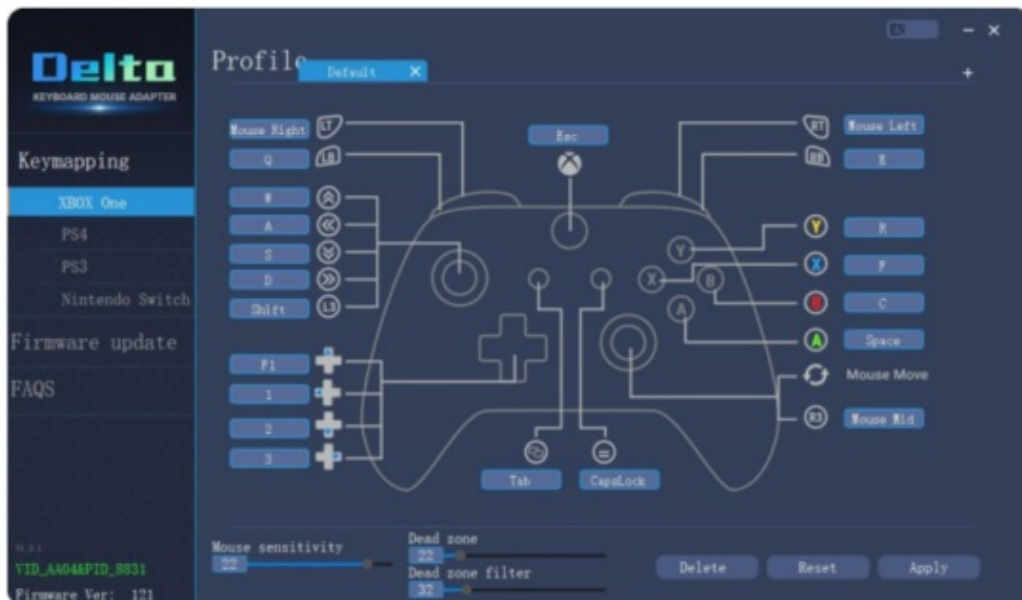

ZBOX ONE

Installation:

- Power your Xbox One official controller and connect it to the Keyboard's USB port with a charge&sync cable;
- Plug in your mouse to the Keyboard's USB port;
- Plug in the Keyboard to your Xbox One console. Wait for a few seconds, you will be able to use the keyboard&mouse instead of a game controller.

Controller vibration: Turn on/off the controller vibration by pressing the "Ctrl" and "-" buttons.

Voice chat: Plug in your headset to the headset jack on the Keyboard to start voice chat. Turn up/down the volume by pressing the "Ctrl" and "F1"/"F2" buttons. (You can't use the headset jack of the controller).

Tips in the FPS games:

Press “Alt” and “5” buttons to switch to Sprint/Walk;

Press the “Alt” and “Mouse left” buttons to turn on/off the Turbo function;

Press down the “Ctrl” button when you move the mouse to turn on Fast Viewing Angle Rotation;

Mouse sensitivity priorities:



1. Adjust the mouse DPI to the best;
2. Adjust the controller sensitivity in-game set to the best;
 - (1)While you move the mouse but the view doesn’t move accordingly. Decrease the Right Stick Dead Zone in-game setting.
 - (2)While you move the mouse slightly but the view moves too fast. Increase the Right Stick Dead Zone in-game setting.
 - (3)If you feel the mouse’s horizontal movement speed is inappropriate. Adjust the Horizontal Sensitivity in-game setting.
 - (4)If you feel the mouse’s vertical movement speed is inappropriate. Adjust the Vertical Sensitivity in-game setting.
3. Press F3/F4 to adjust the mouse sensitivity(No scope); Press 5/F5 to adjust the mouse sensitivity(ADS Aim).

Note:

Off-brand controllers do not work with the Keyboard.

If the keyboard&mouse does not work after you plug in everything. Please re-plug everything to the console.

XBOX ONE Default Keymap Guide

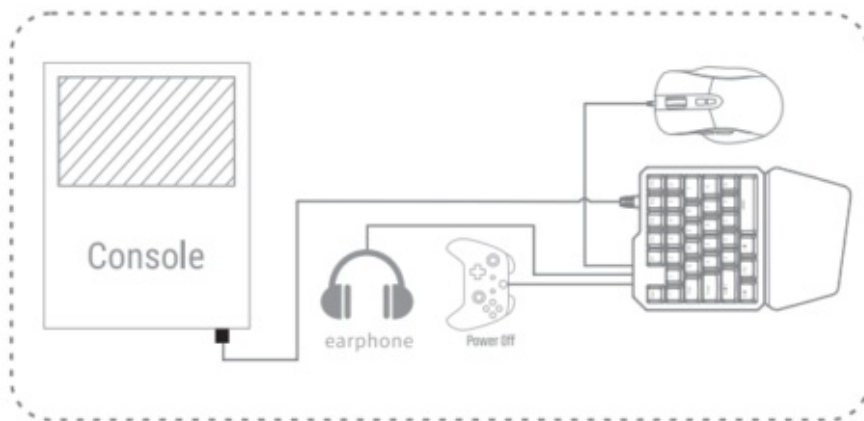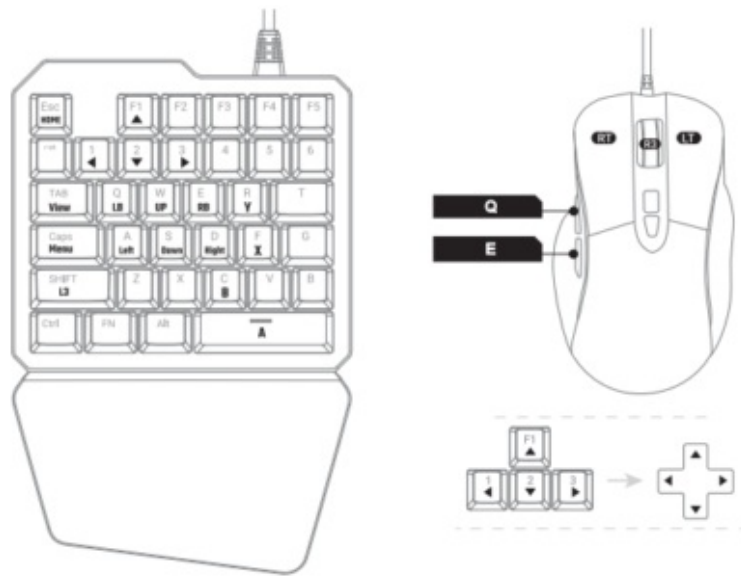

PLAYSTATION 4

Installation:

1. Power your PS4 official controller and connect it to the Keyboard's USB port with a charge&sync cable.
2. Plug in the mouse into the Keyboard's USB port.
3. Plug in the Keyboard to your PS4 console. Wait for a few seconds, you will be able to use the keyboard&mouse instead of a game controller.

Controller vibration: Turn on/off the controller vibration by pressing the “Ctrl” and “-” buttons.

VOW) Chat: Plug in your headset to the headset jack on the Keyboard to start voice chat. Turn up/down the volume by pressing the “Ctrl” and “F1”/“F2” buttons. (You can't use the headset jack of the controller).

Tips in the FPS games:

Press the “Alt” and “S” buttons to switch to Sprint/Walk;

Press the “Alt” and “Mouse left” buttons to turn on/off the Turbo function;

Press down the “Ctrl” button when you move the mouse to turn on Fast Viewing Angle Rotation;

Mouse sensitivity priorities:

1. Adjust the mouse DPI to the best;
2. Adjust the controller sensitivity in-game set to the best;

- 1) While you move the mouse but the view doesn't move accordingly. Decrease the Right Stick Dead Zone in-game setting.
 - (2) While you move the mouse slightly but the view moves too fast. Increase the Right Stick Dead Zone in-game setting.
 - (3) If you feel the mouse's horizontal movement speed is inappropriate. Adjust the Horizontal Sensitivity in-game setting.
 - (4) If you feel the mouse's vertical movement speed is inappropriate. Adjust the Vertical Sensitivity in-game setting.
3. Press F3/F4 to adjust the mouse sensitivity(No scope); Press 5/F5 to adjust the mouse sensitivity(ADS Aim).

Note:

Off-brand controllers do not work with the Keyboard&Mouse.

If the keyboard&mouse does not work after you plug in everything. Please re-plug everything to the console.

NINTENDO SWITCH

Installation:

1. Use the controller to turn on your Switch and go to "Settings" — "Controllers and Sensors" — "PRO Controller Wired Communication"— click ON. Back to Home menu.
2. Plug in the mouse to the Keyboard's USB port;
3. Plug in the Keyboard to your Nintendo Switch console.
4. Press "Ctrl" and "2(@)" to activate the keyboard&mouse. Press any key to go into K/M mode. Now destroy the competition!

Voice chat: Plug in your headset to the headset jack on the Keyboard to start voice chat. Turn up/down the volume by pressing the "Ctrl" and "**FI**"/" F2" buttons.

Tips in the FPS games:

Press "Alt" and "5" buttons to switch to Sprint/Walk;

Press the "Alt" and "Mouse left" buttons to turn on/off the Turbo function;

Press down the "Ctrl" button when you move the mouse to turn on Fast Viewing Angle Rotation;

Mouse sensitivity priorities:

1. Adjust the mouse DPI to the best;
2. Adjust the controller sensitivity in-game set to the best;
 1. While you move the mouse but the view doesn't move accordingly. Decrease the Right Stick Dead Zone in-game setting.
 2. While you move the mouse slightly but the view moves too fast. Increase the Right Stick Dead Zone in-game setting.
 3. If you feel the mouse's horizontal movement speed is inappropriate. Adjust the Horizontal Sensitivity in-game setting.
 4. If you feel the mouse's vertical movement speed is inappropriate. Adjust the Vertical Sensitivity in-game setting.

3. Press F3/F4 to adjust the mouse sensitivity(No scope); Press 5/F5 to adjust the mouse sensitivity(ADS Aim).

Note:


You must turn on the “PRO Controller Wired Communication” before you press Ctrl+2(@) or you will get an error message.

If the keyboard&mouse does not work after you plug in everything. Please re-plug everything.

Please follow our updates

		
http://twitter.com/Deltaessentials	http://www.facebook.com/mydarkwalker	https://www

Documents / Resources

	DarkWalker FO203 Mechanical Keyboard & Mouse [pdf] User Manual FO203, Mechanical Keyboard Mouse, FO203 Mechanical Keyboard Mouse
---	---