



DarkWalker FO217 Keyboard and Mouse User Manual

[Home](#) » [DarkWalker](#) » DarkWalker FO217 Keyboard and Mouse User Manual 

Contents

- [1 DarkWalker FO217 Keyboard and Mouse](#)
- [2 WARRANTY](#)
- [3 Delta Keymap Program \(only Remap Keyboard Keys\]](#)
- [4 XBOX ONE](#)
- [5 PLAYSTATION 4](#)
- [6 NINTENDO SWITCH](#)
- [7 MOUSE SENSITIVITY](#)
- [8 MARCO](#)
- [9 KEY FUNCTION](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)



DarkWalker FO217 Keyboard and Mouse

 


WARRANTY


2-month free replacement policy. If your product is broken or does not work properly after purchase. Please contact our after sales support with your Amazon order number. Buyers can also extend the product warranty to 12 month. Please scan to extend the product warranty.

Delta Keymap Program (only Remap Keyboard Keys]

Download the keymap program on www.darkwalkerpro.com/download

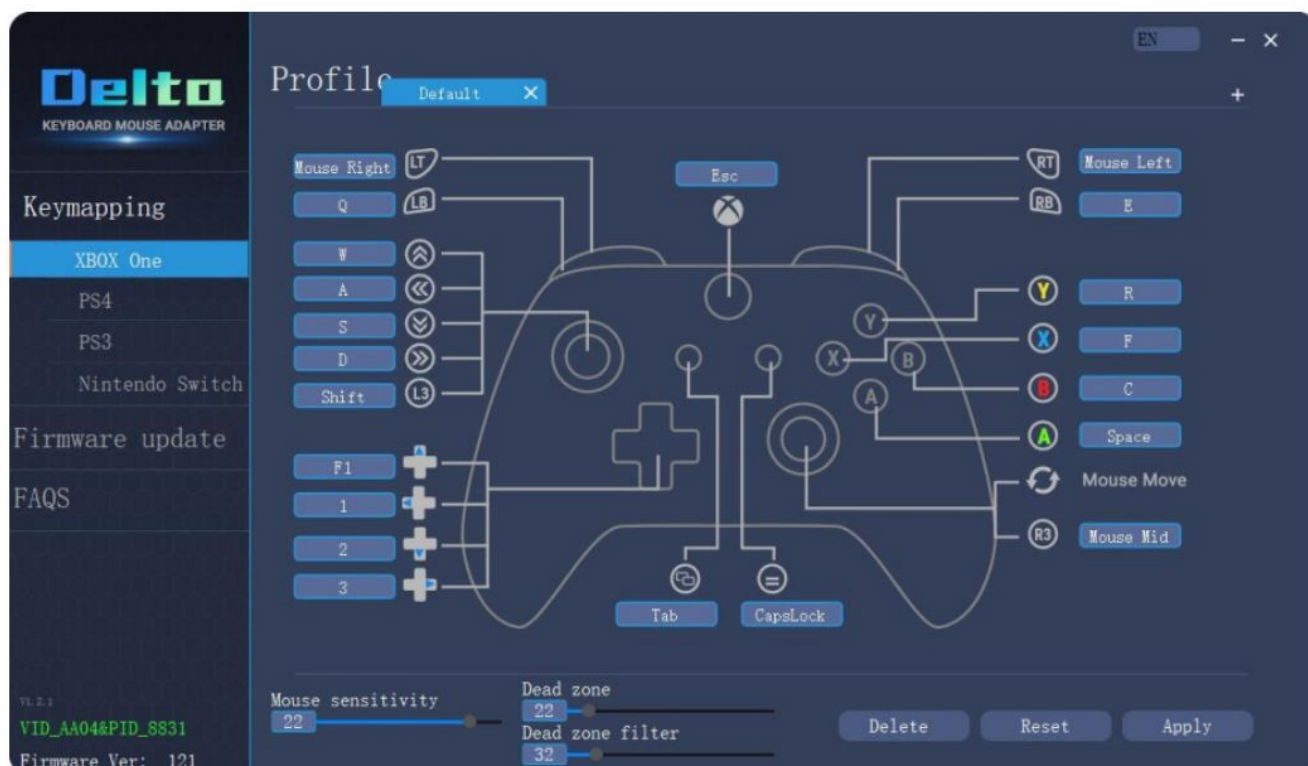

XBOX ONE

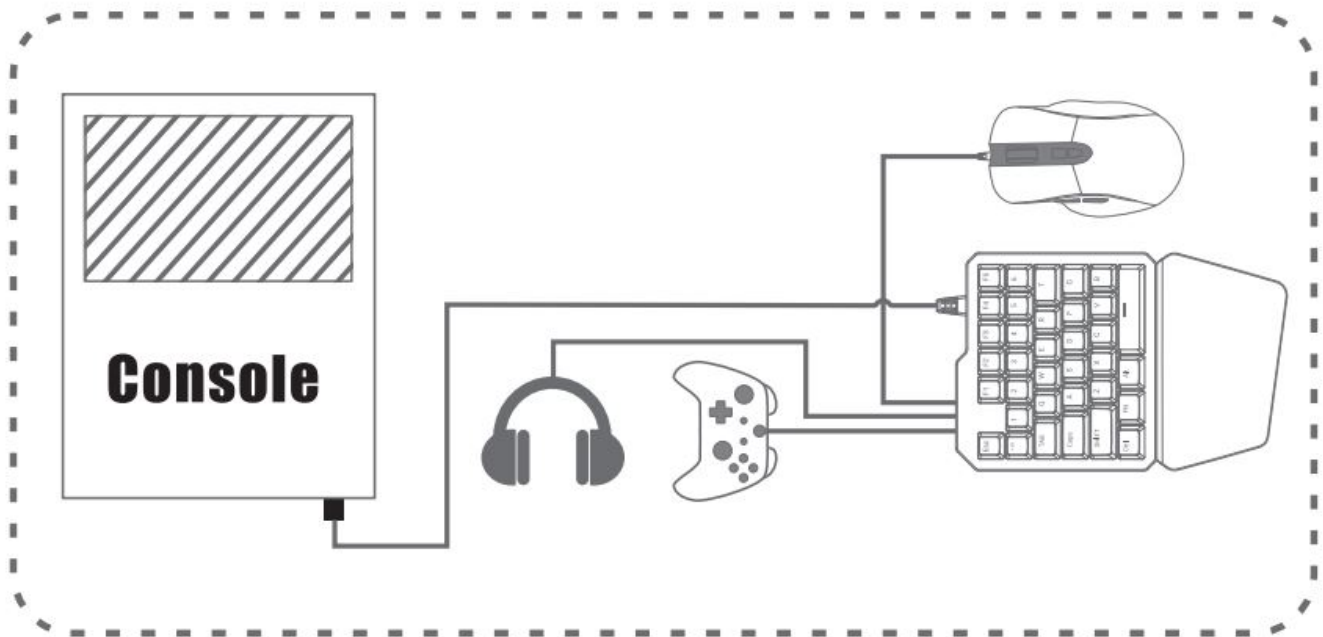 


Installation:

1. Power off your Xbox One official controller and connect it to the Keyboard's USB port with a charge&sync cable;
2. Plug in the mouse to the Keyboard's USB port;
3. Plug in the Keyboard to your Xbox One console. Wait for a few seconds, you will be able to use the keyboard&mouse instead of game controller.

Note:

Only Microsoft Xbox One controller works with the Keyboard. If the keyboard&mouse do not work after you plug in everything. Please re-plug in everything to the console. Voice chat only works when you plug in the headset to the keyboard.

 PLAYSTATION 4

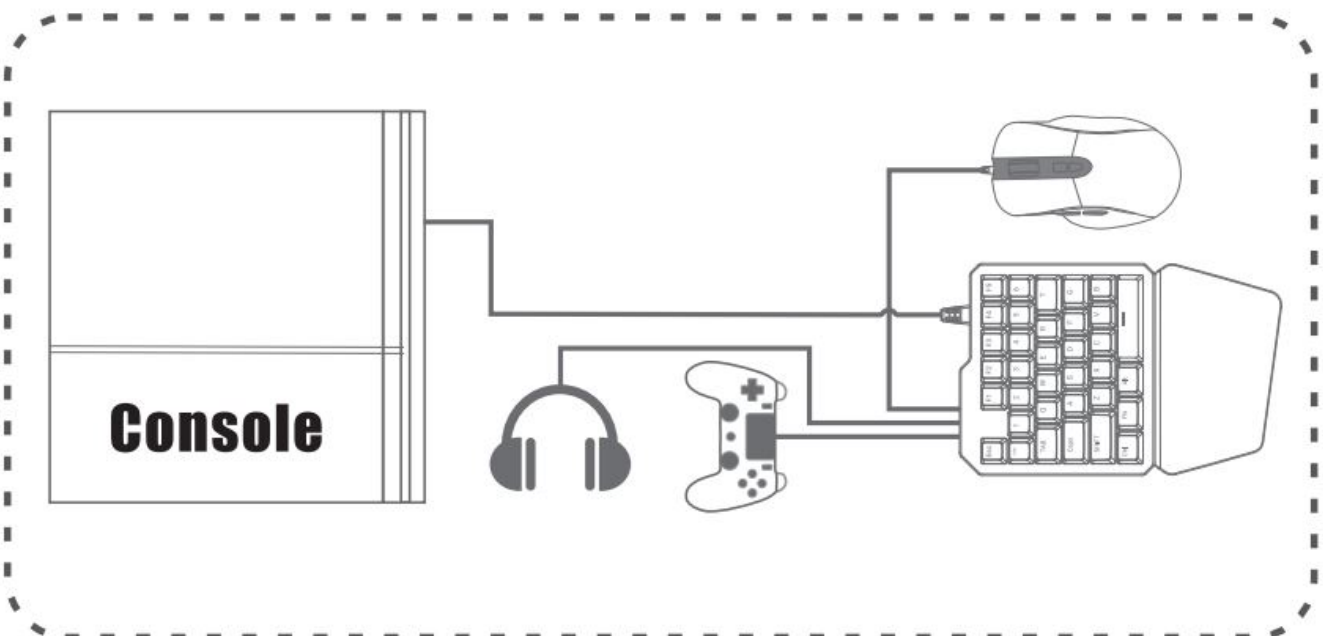


Installation:

1. Power off your official DualShock 4 controller and connect it to the Keyboard's USB port with a charge&sync cable.
2. Plug in the mouse to the Keyboard's USB port.
3. Plug in the Keyboard to your PS4 console. Wait for a few seconds, you will be able to use the keyboard&mouse instead of game controller.

Note:

Only Sony DualShock 4 controller works with the Keyboard. If the keyboard&mouse do not work after you plug in everything. Please re-plug in everything to the console. Voice chat only works when you plug in the headset to the keyboard.

NINTENDO SWITCH

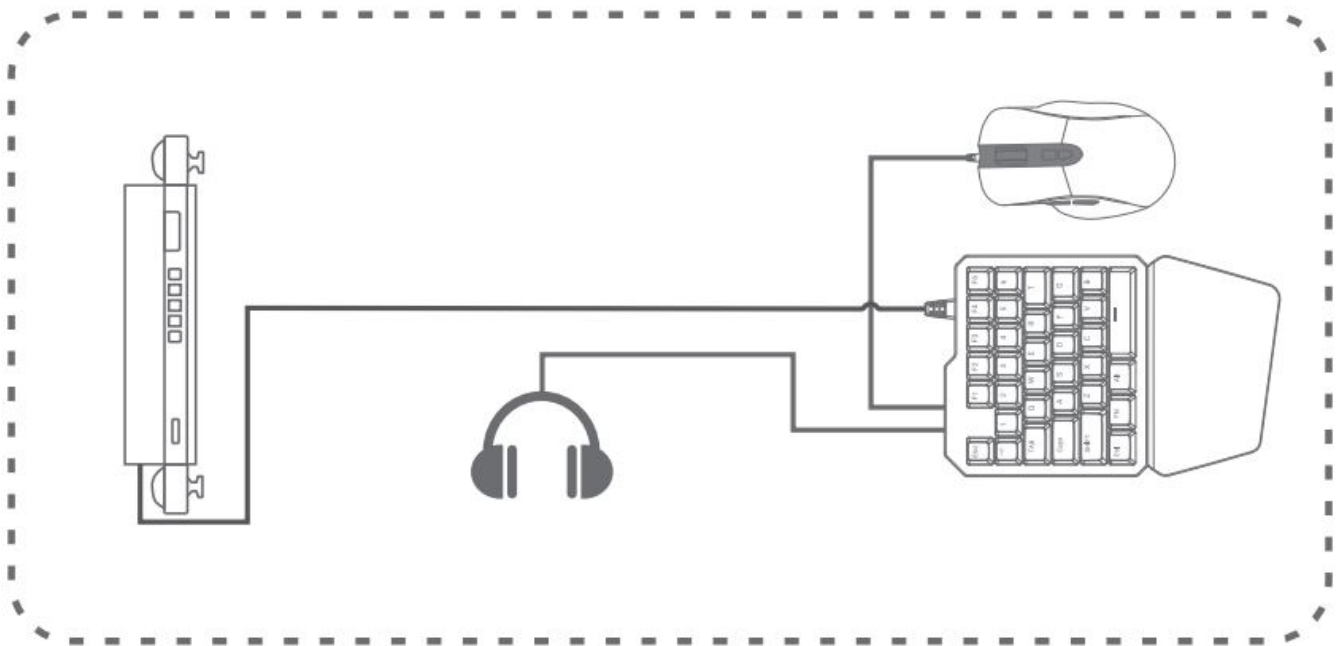

Installation:

1. Use controller to turn on your Switch and go to “Settings” — “Controllers and Sensors” — “PRO Controller Wired Communication” — click ON. Back to Home menu.
2. Plug in the mouse to the Keyboard's USB port.
3. Plug in the Keyboard to your Nintendo Switch console.

Note:

Do not control the menu with Pro or Joycon controller in-game, or the keyboard will be disconnected. You must turn on the “PRO Controller Wired Communication” or you will get an error message. If the keyboard&mouse do not work after you plug in everything. Please re-plug in everything.

MOUSE SENSITIVITY

Mouse Sensitivity Priorities:

1. 1: Adjust the mouse DPI to the best;

2. 2: Adjust the controller sensitivity in-game setting to the best;
 1. While you move the mouse but the view doesn't move accordingly. Decrease the Right Stick Dead Zone in-game setting
 2. While you move the mouse slightly but the view moves too fast. Increase the Right Stick Dead Zone in-game setting.
 3. If you feel the mouse's horizontal movement speed is inappropriate. Adjust the Horizontal Sensitivity in-game setting.
 4. if you feel the mouse's vertical movement speed is inappropriate. Adjust the Vertical Sensitivity in-game setting.
3. Press FN+3/4 to adjust the mouse sensitivity (No scope); Press FN+5/6 to adjust the mouse sensitivity(Scope).


MARCO

- **Macro:** The 4 memory keys(F2, F3, F4, F5) are able to record 4 different macros.
- **Create a macro:** Press FN+F2(F3,F4, F5) to go into recording mode. the keyboard light flashes. Strike the keyboard keys to record an event. Then press again FN+F2(F3,F4, F5) to save the macro.
- **Replay the macro:** Press F2(F3,F4, F5) to replay.
- **Clear the macro:** Press FN+F2(F3,F4,F5) to go into recording mode. Press and hold F2(F3,F4,F5) for 3 seconds to clear the macro.

KEY FUNCTION

- FN+Tab: Change keyboard light effect.
- FN+ESC: Set the keyboard to default.
- FN+1/2: Volume down/Up.
- FN+3/4: Decrease/Increase mouse sensitivity(No Scope).
- FN+5/6:Decrease/increase mouse sensitivity(Scope).
- FN+S: Switch to Sprint/Walk.

Documents / Resources

| | |
|---|--|
|  | DarkWalker FO217 Keyboard and Mouse [pdf] User Manual FO217 Keyboard and Mouse, FO217, Keyboard and Mouse |
|---|--|