




## DarkWalker FO218 Wireless Controller Pad User Manual

[Home](#) » [DarkWalker](#) » DarkWalker FO218 Wireless Controller Pad User Manual 

# DarkWalker

F218 PC/PS3/ANDROID Wireless  
Controller Pad

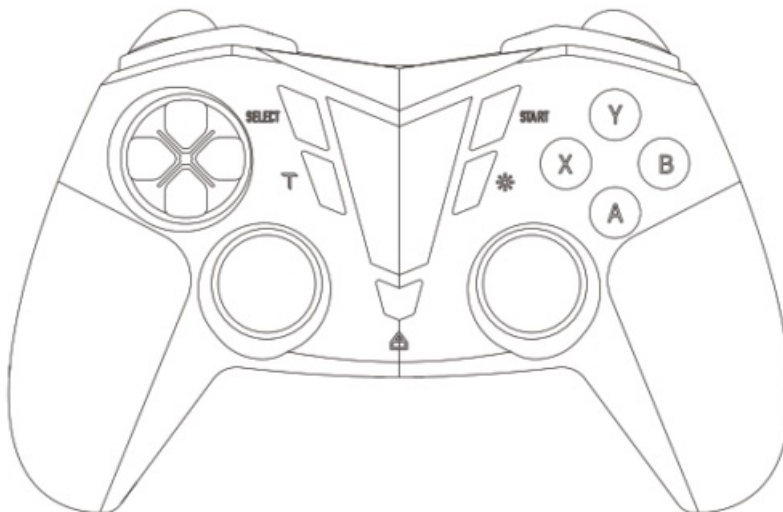

<http://twitter.com/Deltaesentials>




<http://www.facebook.com/mydarkwalker>



<https://www.youtube.com/channel/UC5fCwlutCmBhXgutvEM7LrA>

Let's be friends.

## BUTTON LAYOUT

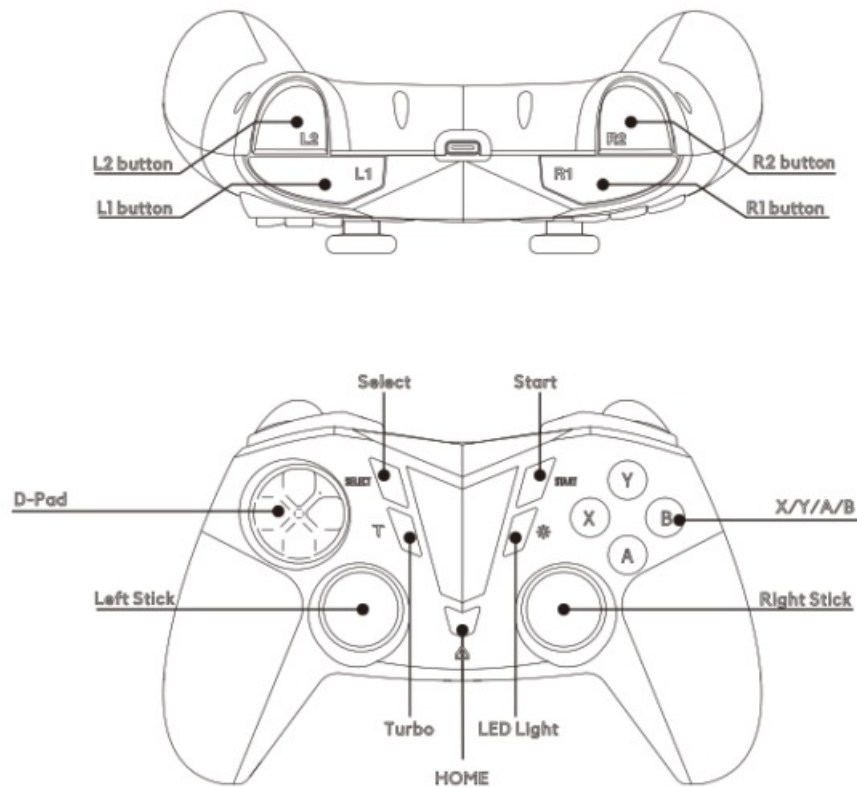

## CONNECT TO PC/PS3

1. Plug in the 2.4Ghz receiver to your PC/PS3.
2. Press the "HOME" button to connect to your device.

## X-INPUT/D-INPUT

The default mode is X-Input. Hold down the "HOME" button for more than 5 seconds to switch to D-input mode.

## CONNECT TO ANDROID TV

1. Plug in the 2.4Ghz receiver to your Android TV.
2. Press the "HOME" button to connect to your device.

## TURBO

Hold down a button and press the "T" button to activate the turbo function. The bottom indicator blinks fast. Press the "T" button again to clear the turbo function.

## TURBO SPEED

Hold down T" button and D-Pad "t" or "l" to adjust turbo speed.

## LEO Blue Light

Press the "Light" button to turn on/off the light.

## Parameter

Working Voltage: 3.7V

Battery Capacity: 600mAh

Input Voltage: 5V

Low Voltage Alarm: <3.7V

Pairing Time: <2

Charging: The indicator blink slowly

Fully charged: Indicator on

Low battery indication: The indicator blinks slowly

## WARRANTY

2-month free replacement policy. If your product is broken or does not work properly after purchase. Please contact our after-sales support with your Amazon order number. Buyers can also extend the product warranty to 12month. Please scan to extend the product warranty.



<https://www.mydarkwalker.com/pages/warranty-policy>

### Contents

[1 Documents / Resources](#)

[2 Related Posts](#)

## Documents / Resources



[DarkWalker FO218 Wireless Controller Pad](#) [pdf] User Manual

FO218 Wireless Controller Pad, FO218, Wireless Controller Pad