



DARTWOOD Digital Camera for Kids with 32GB Memory Card User Manual

[Home](#) » [DARTWOOD](#) » DARTWOOD Digital Camera for Kids with 32GB Memory Card User Manual 

Contents

- [1 DARTWOOD Digital Camera for Kids with 32GB Memory Card](#)
- [2 Specifications](#)
- [3 Features](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)


DARTWOOD

DARTWOOD Digital Camera for Kids with 32GB Memory Card



Specifications

- **Screen:** 2"
- **Camera:** 8MP
- **Video resolution:** 1080p
- **Battery capacity:** 400mAh
- **Weight:** 147g

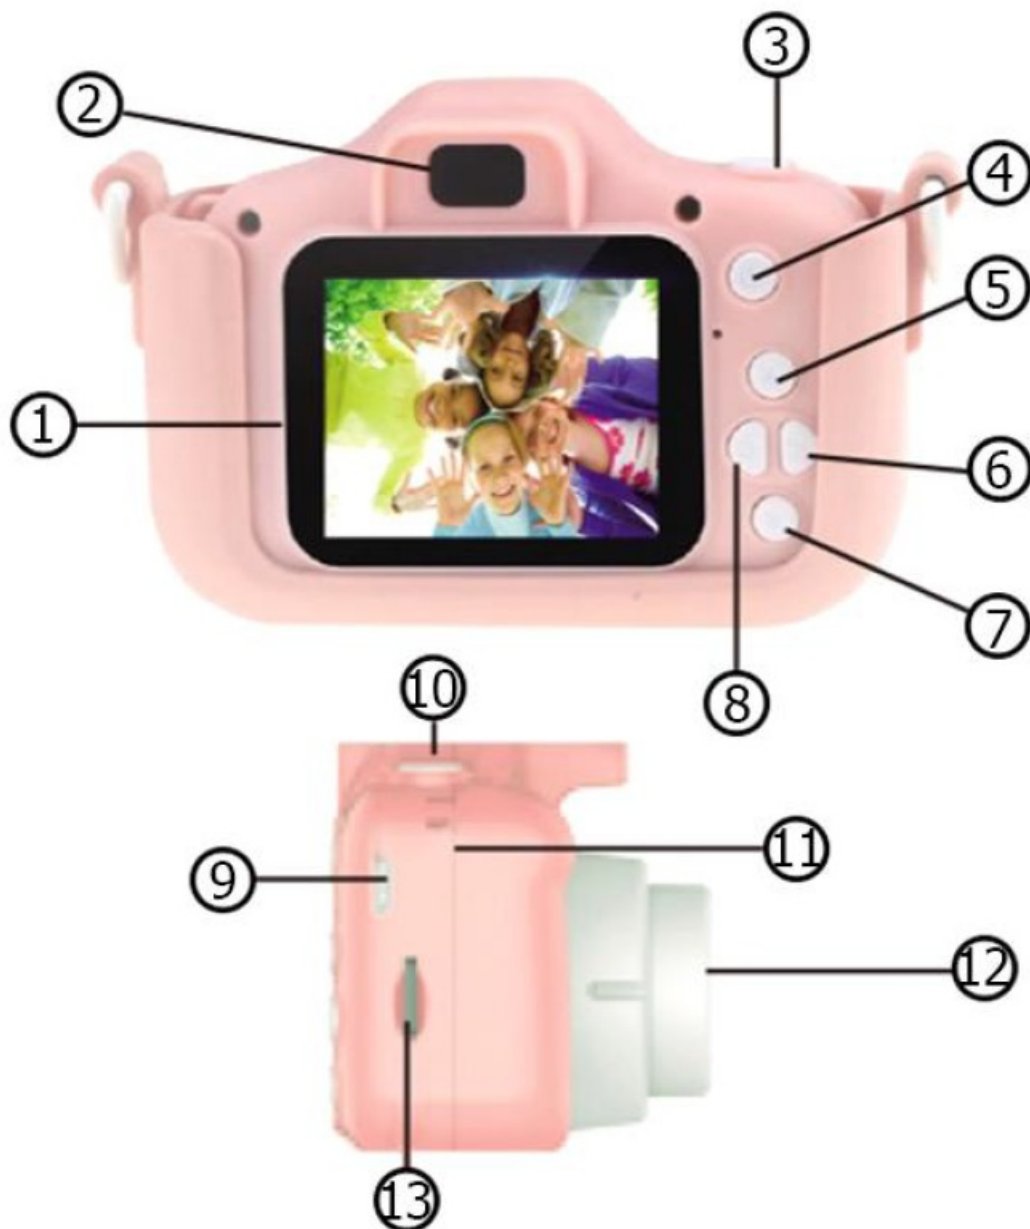


1. 2" IPS HD screen
2. Front camera
3. Shutter/Confirm button
4. Power/Return button
5. Up button
6. Right button
7. Down button
8. Left/timer setting button
9. MicroUSB port
10. Photo/Video/Confirm button
11. Reset button
12. HD lens
13. MicroSD/TF card slot

Features

Long press the Power button to boot and short press to go back to Main or Previous page. For shooting press the Shutter button and the display will show the number of remaining photos in the upper right corner. When the picture is taken, the indicator flashes once to indicate that the picture is complete. Press the Up/Down button to switch the Filter/Mirror image. Press the Right button to cut in/out the filter/mirror image. In the digital camera mode, press and hold the Up/Down button to zoom in/out. The zoom interval is 1-3 times and the zoom factor is displayed in the lower right corner of the screen. In the digital camera, mode press the Left button to show the timer mode. To start recording, press the Record button. The recording indicator starts flashing to indicate that the recording is in progress. The camera resolution is displayed at the top center of the screen. The recordable time is displayed in the upper right corner of the screen. To stop recording, press the Power button. Go to the album page and the newest photos and videos will be shown. Press the Left/Right button to switch between video and photo mode. Press the Enter button to play or pause the current video. To delete the current video/photo press the Up button and press the Down button to delete all videos/photos. For games, press the Left/Right button to choose the game. Press the Enter button to play and Power button to end the game. For settings, press the Up/Down button to select the object to set. Press the Enter button to confirm the object and the Power to exit. If the camera start behaving abnormal, use a paper clip and insert it in the reset hole to reset the camera. When the camera is not in use, it will enter the auto standby mode after 2 minutes, and it will shut down after 3 minutes of inactivity. When you connect the camera to a computer using the USB cable, there are two modes:

1. If it doesn't have a MicroSD/TF card, it will enter the PC camera mode.
2. If it has a MicroSD/TF card it will automatically enter the card reading mode.

Documents / Resources

	<p>DARTWOOD Digital Camera for Kids with 32GB Memory Card [pdf] User Manual Digital Camera for Kids with 32GB Memory Card, Digital, Camera for Kids with 32GB Memory Card, 32GB Memory Card</p>
--	---