



DASH CLEAR VIEW TOASTER DVTS501 User Guide

[Home](#) » [Dash](#) » DASH CLEAR VIEW TOASTER DVTS501 User Guide 



CLEAR VIEW TOASTER
Clear View Window
1100 Watts





Contents

- 1 **IMPORTANT SAFEGUARDS**
- 2 **PARTS AND FEATURES**
- 3 **USING YOUR TOASTER**
- 4 **CLEANING & MAINTENANCE**
- 5 **TIPS & TRICKS**
- 6 **CUSTOMER SUPPORT**
- 7 **Documents / Resources**
 - 7.1 **References**
 - 8 **Related Posts**

IMPORTANT SAFEGUARDS

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Please read and save this instruction and care manual.
- Remove all bags and packaging from the appliance prior to use.
- Never leave Toaster unattended while in use.
- Make sure the appliance is cleaned thoroughly before using.
- For maintenance questions other than cleaning, please contact StoreBound directly at 1-800-8986970 from 7AM–7PM PST Monday–Friday or by email at support@storebound.com.
- Warning: hot surfaces. Do not touch hot surfaces. Use handles or knobs.

- Close supervision is necessary when the appliance is used by or near children.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or is damaged in any manner. Return your Clear View Toaster to the nearest authorized service facility for examination, repair, electrical, or mechanical adjustment.
- Do not place the appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Never operate the Toaster without its proper accessories.
- Do not use the appliance if any of the parts are damaged.
- Do not place the cord, plug, or unit near water or other liquids.
- When using extension cords, make sure the marked electrical rating is at least as great as the electrical rating of the appliance.
- To protect against electric shock, do not immerse the appliance, plug, or cord in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Do not place utensils, fingers, or other foreign objects inside the Toaster while in use as this may result in fire, electric shock, or injury.
- Do not use appliances for other than its intended use.
- Always be sure to turn off and unplug the appliance prior to assembly, disassembly, cleaning, and storage.
- Do not let the cord hang over the edge of tables or counters.
- Do not attempt to dislodge food when the Toaster is plugged in. Unplug and allow the appliance to cool down completely before proceeding.
- Do not use attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Only plug your appliance into a power outlet of the correct voltage (A.C. only) as marked on the appliance.
- Warning: always unplug appliances from the outlet when not in use and before cleaning to prevent the risk of electric shock. Allow cooling before putting on or taking off parts.
- Do not let the power cord touch hot surfaces as the cord may become damaged by the heat.
- Do not use appliances outdoors or for commercial purposes.
- Make sure the appliance is off first before unplugging from the outlet.
- Do not use the appliance for defrosting food other than bread and waffles.
- If the Carriage Lever is stuck while the Toaster is on, immediately unplug the appliance and let it cool down before emptying and cleaning. If the problem persists, discontinue the use of the appliance.
- Do not place wet foods inside the Toaster.
- Oversized foods, utensils, or metal foil packages must not be inserted into the Toaster as this may result in fire or electric shock.
- Do not place food in the Toaster that has been covered with butter, jelly, frosting, or other condiments as this may result in fire, smoke, or jamming of the appliance.
- A fire may occur if the Toaster is covered or touching flammable materials, such as curtains, draperies, or walls, when in operation.
- stormbound shall not accept liability for damages caused by improper use of the appliance.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plugin anyway.

- A shorter power cord is provided to reduce the risk of tripping and entanglement. Be cautious of the risks when using a long extension cord. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

PARTS AND FEATURES



USING YOUR TOASTER

USING YOUR TOASTER

- Remove all packaging material and stickers from your Dash Clear View Toaster.
- Clean the appliance and all of its components prior to assembly and use.
- Make sure loose objects have not fallen inside the Toaster.
- In order to eliminate any manufacturing residues, turn on the Toaster without bread and set the Browning Dial to level 4. The appliance may give off some smoke which is perfectly normal.



GETTING STARTED

1. Place the Clear View Toaster on a clean and stable surface. Make sure that no liquids or flammable objects are near the appliance.
2. Place the bread slices in the Toasting Slot. Press the Carriage Lever down until it locks into place to start the heating process. If the handle doesn't lock, check if the appliance is plugged in. The Carriage lever will not click into place if the toaster is not plugged in.
3. Turn the Browning Dial to the desired level. The higher the number, the more toasted your bread will be. You can stop the toasting process at any time by simply pressing the Cancel Button.
4. Always unplug the appliance after use and let it cool down before cleaning or storing. When storing the Clear View Toaster, wind the power cord around the hooks located on the bottom of the appliance.

Note: Never stick your bare hands in the Toaster to remove food.

TYPE	DESCRIPTION
DEFROST	Thoroughly toasts frozen bread with an extended toasting cycle.
REHEAT	Reheats already toasted bread or toasts bread that is not browned enough.
BAGEL	Toasts bagels by using only one side of the heating element.

BROWNING DIAL

Seven heating levels give you precise toasting results. Simply select your desired browning level from the chart below.



CLEANING & MAINTENANCE

CLEANING & MAINTENANCE

DO NOT SUBMERGE the unit in water. Instead, use a damp cloth to wipe down the surface of the Toaster. Clean the Slide-Out Crumb Tray with warm water and mild dish soap. Rinse and dry thoroughly with a lint-free cloth.

Caution: Be sure to clean the Slide-Out Crumb Tray regularly to prevent crumbs from accumulating at the bottom of the Toaster.

- Before cleaning your Toaster, unplug the appliance and let it cool down completely
- Do not use abrasive scrubbers, sponges, or chemical cleaners to clean your appliance as this may damage it. Instead, use a damp cloth to wipe down the surface of your Clear View Toaster.
- When not in use, store your Toaster in a clean, dry place.

CLEANING THE SLIDE-OUT CRUMB TRAY

- Remove the Slide-Out Crumb Tray located at the bottom of the Toaster by sliding it out from the side.
- Wash the Tray with warm, soapy water. Rinse and dry thoroughly before returning the Tray to its slot.
- To avoid any lingering food odors, remove and clean the Slide-Out Crumb Tray after each use.

CLEANING THE GLASS PANEL

- Make sure the Slide-Out Crumb Tray is empty. Turn the Toaster upside down or on its side. Gently press the Glass Panel Clamp underneath the Toaster and then slide the Glass Panel out of the Toaster.
- Carefully wash the Glass Panel in warm, soapy water. Rinse and dry thoroughly. Slide the Glass Panel back into its grooves until the Glass Panel Clamp locks into place.



TIPS & TRICKS



- If the bread is too small to be removed from the Toasting Slot, simply lift the Carriage Lever to raise the Carriage to its uppermost position and then pick up the toasted bread. If you still cannot carefully take out the bread, unplug your Toaster and use thin heat-resistant tongs to remove the bread from the Toasting Slot.
- Do NOT touch the metal parts as they will be hot!
- For pop tarts or frozen waffles, toast as directed.
- ONLY toast food that is meant to be toasted in a slot toaster.
- If the Toaster jams, the bread might be too thick. Remove the bread from the Toaster and slice it thinly.



LOX BAGELS

toasted bagel, light cream cheese, lox, red onion, capers, dill



AVOCADO TOAST

toasted baguette, mashed avocado, diced tomato, onion, salt, pepper, drizzle of olive oil



STRAWBERRY NUTELLA


toasted bread, Nutella, sliced strawberries



CUSTOMER SUPPORT

We welcome and value all concerns and questions from our customers. Please do not hesitate to contact us for product support, warranty, and maintenance-related questions directly at: 1 (800)-898-6970 from 7AM – 7PM PST, Monday – Friday, or by email at support@storebound.com.

Feel free to give us a call at 1 (800) 898-6970 during the hours below

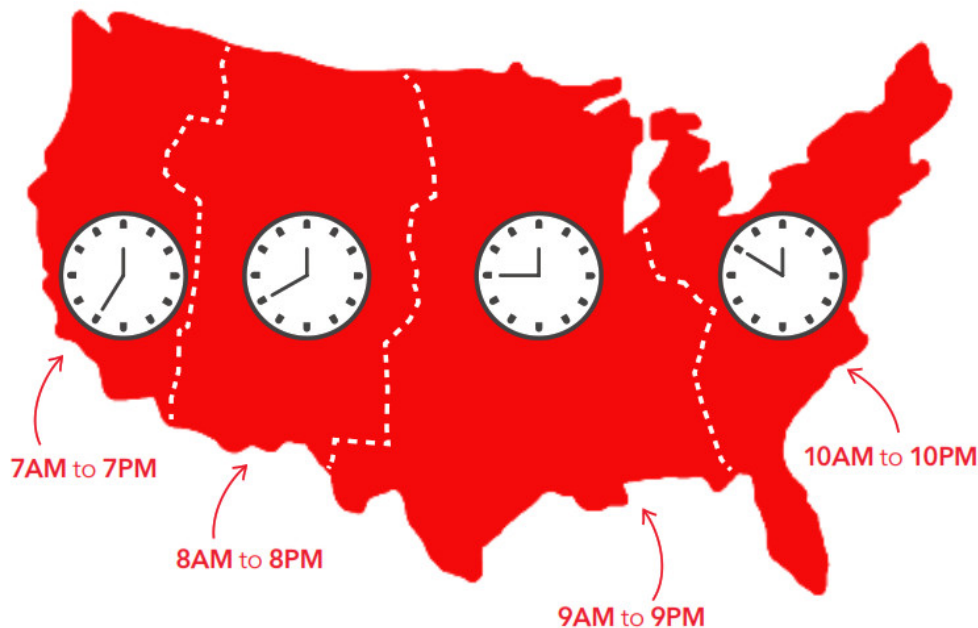

Hey Hawaii! You can reach our customer service team from 5AM to 5PM HAST. And also, Alaska, feel free to reach out from 6AM – 6PM UTC.

STOREBOUND, LLC – 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@storebound.com.

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

REPAIRS

DANGER! Risk of electric shock! The Dash Clear View Toaster is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Model: DVTS501

Voltage 120V ~ 60Hz

Power Rating 1100W

Stock #: DVTS501_20170803_v6

Designed in NYC | 1-800-898-6970 | @unprocessyourfood | bydash.com



Documents / Resources



[DASH CLEAR VIEW TOASTER DVTS501](#) [pdf] User Guide

DASH, DVTS501, CLEAR VIEW, TOASTER, Clear View Window, 1100 Watts

References

-  [Dash](http://Dash.com)