



Dash Multi-plate Mini Waffle Maker DIWCH12RM50 User Manual

[Home](#) » [Support](#) » Dash Multi-plate Mini Waffle Maker DIWCH12RM50 User Manual 

Contents

- [1 Dash Multi-plate Mini Waffle Maker User Manual](#)
- [2 FEATURES & BENEFITS](#)
- [3 SPECIFICATIONS](#)
- [4 BEFORE FIRST USE](#)
- [5 INSTALLING YOUR PLATES](#)
- [6 COOKING WITH YOUR MULTI-PLATE MINI MAKER](#)
- [7 REMOVING YOUR PLATES](#)
- [8 DOWNLOAD](#)
- [9 References](#)
- [10 Related Posts](#)

Dash Multi-plate Mini Waffle Maker User Manual



MULTI-PLATE MINI MAKER

DIWCH12RM50

FEATURES & BENEFITS

- Includes two 4" Removable Plates compatible with the Dash 3-in-1 Mini Maker and Multi-Plate Mini Waffle Maker
- Gingerbread Man and Snowflake patterns—festive holiday fun!
- Plates are nonstick and pop out easily for a no-mess cleanup
- Heats quickly and cooks evenly
- Recipe Guide offers both sweet and savory inspiration.
- Includes: One Gingerbread Man Plate and one Snowflake Plate
- 1-year manufacturer warranty, 2-year warranty available with registration to the Feel Good Rewards program.
- Designed in NYC. US-based Customer Support available.
- DIWCH12RM50

SPECIFICATIONS

Dimensions: 0.8" x 5.0" x 5.0"

Weight: 0.5 lbs

BEFORE FIRST USE



Never touch the Removable Plates or Cover while appliance is in use.



Never touch the Removable Plates or the inside of the Mini Maker while it is plugged in and preheating, or when it has not fully cooled.



DO NOT lift the Cover so that your arm is over the Removable Plates as they are hot and may cause injury.

INSTALLING YOUR PLATES



TOP



BOTTOM

Install your Removable Plates by sliding them into the slots located at the top and bottom of the Mini Maker (photo A).

Each Removable Plate is labeled either “Top” or “Bottom.”

The Top Plate fits into the top of the Maker, and the Bottom Plate fits into the bottom of the Maker (photo B). You should feel a slight click when each plate is properly in place.



1-800-898-6970 | @bydash | bydash.com

COOKING WITH YOUR MULTI-PLATE MINI MAKER

To cook a waffle in the shape of a heart or pumpkin using the Heart Waffle Plate or Pumpkin Waffle Plate, use 1.5 tbsp of batter. For a 4" circular waffle, use 3-4 tbsp of batter.



REMOVING YOUR PLATES

To remove them, press the corresponding Release Tabs inside the Handle [there's one at the bottom (photo A) and one at the top (photo B).]





CAUTION: Always lift and lower from the right side using the Cover Handle to avoid ! hitting the Release Tab.

1-800-898-6970 | @bydash | bydash.com

DOWNLOAD

Dash Multi-plate Mini Waffle Maker DIWCH12RM50 User Manual – [[Download PDF](#)]

References

- [User Manual](#)