



Dash Retro Milkshake Maker DMM100 User Manual

[Home](#) » [Dash](#) » Dash Retro Milkshake Maker DMM100 User Manual 

Contents

- [1 Dash Retro Milkshake Maker DMM100 User Manual](#)
- [2 IMPORTANT SAFEGUARDS](#)
- [3 PARTS & FEATURES](#)
- [4 USING YOUR RETRO MILKSHAKE MAKER](#)
- [5 TIPS & TRICKS](#)
- [6 CLEANING & MAINTENANCE](#)
- [7 RECIPES](#)
- [8 Customer Support](#)
- [9 WARRANTY](#)
 - [9.1 TECHNICAL SPECIFICATIONS](#)
- [10 Download](#)
- [11 Related Posts](#)

Dash Retro Milkshake Maker DMM100 User Manual



IMPORTANT SAFEGUARDS

PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Please read this manual carefully before using the appliance.
- When using electrical appliances, basic safety precautions should be followed including:
- Read all instructions.
- Remove all bags and packaging from the appliance before use.
- Make sure the appliance is cleaned thoroughly before using.
- Never leave the appliance unattended when in use.
- Do not use the appliance for other than its intended use.
- For household use only. Do not use outdoors.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number 1-800-898-6970 for information on examination, repair, or adjustment.
- Never touch moving parts.
- Never operate appliance when empty.
- Never add ingredients while the appliance is operating.
- Never use hot ingredients.
- Keep hands and utensils out of container to reduce the risk of injury to persons or damage to the mixer.
- Never add to container while appliance is operating.

- Container must be properly in place before operating appliance.
- Do not touch surfaces that may be hot. Use handles or knobs provided.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 9AM-9PM EST Monday-Friday or by email at support@storebound.com.
- Do not place the appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as doing so can result in fire, electric shock, or personal injury.
- Do not let the cord touch hot surfaces or hang over the edges of tables or counters.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience of knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Do not let children use this appliance. Close supervision is necessary when any kitchen appliance is used by or near children.
- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
Permanently Installed – Make sure appliance is OFF when not in use, before putting on or taking off parts, and before cleaning. Remove plug from outlet when the appliance is not in use, before putting on or taking off parts, and before cleaning. Allow to cool before handling.
- Never use harsh, abrasive or caustic cleaners to clean this appliance.
- To protect against electrical shock do not immerse cord, plugs, portable appliances or Motor Base in water or other liquid.
- Do not place the Motor Base in a dishwasher.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or personal injury.
- Make sure that the voltage indicated on the appliance matches the local mains voltage. Always make sure that the plug is inserted into a grounded wall socket properly.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- The power supply cord is short to reduce risk from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as high as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.


PARTS & FEATURES



USING YOUR RETRO MILKSHAKE MAKER

BEFORE USING YOUR MILKSHAKE MAKER

- Remove all packaging materials.
- Check that the Milkshake Maker has no visible damage and that no parts are missing.
- Before using the appliance for the first time or before using it after prolonged storage, wash and dry the appliance along with any accompanying accessories. See “Cleaning & Maintenance” for instructions.
- Please do not remove the Mixing Wand.

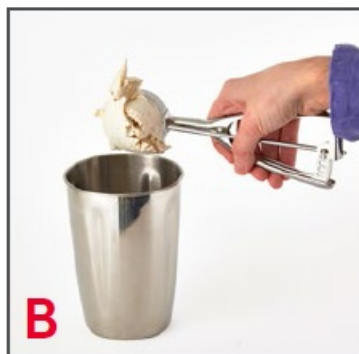

1. Place the appliance on a stable, flat, heat-resistant surface (photo A). Plug the Milkshake Maker into a wall socket.
2. Prepare your ingredients and add them to the Milkshake Cup (photo B).



3. Slide the lip of the Milkshake Cup into the Cup Support and rest the bottom of the Milkshake Cup on the Cup Rest (photo C).

4. Once the Milkshake Cup is securely and properly placed onto the Cup Rest, turn the Milkshake Maker on to the “Pulse” setting by press-ing the On/Off/Pulse Switch up into the “I” position. Hold this button down for approximately 10-15 seconds. Then run the Milkshake Maker on the “I” setting for approximately 30-45 seconds (photo D). Do not run the Milkshake Maker for more than 3 minutes at a time.

TIPS & TRICKS

- If you wish to add fruits to your milkshake, blend the fruits before you put them into the Milkshake Cup. This will help achieve a creamier result.
- The more wet ingredients you add, the creamier your milkshake will be. Dry and frozen ingredients produce a thicker milkshake.
- The longer you run the Milkshake Maker, the creamier your milkshake will be. Do not run your Milkshake Maker for more than 3 minutes at a time.
- For best results, place wet ingredients in the Milkshake Cup before dry ingredients.
- If using ice, use crushed ice only. Whole ice cubes may damage the appliance.
- Only use the Milkshake Cup provided with the Milkshake Maker.
- Softer ingredients give better results.
- For the frothiest milkshakes, use well-chilled milk.

CLEANING & MAINTANANCE

- Remove the plug from the wall socket.
- Clean the appliance after every use.
- Do not clean the appliance or the Milkshake Cup with metal kitchen utensils or abrasive cleaning materials as this may damage the appliance.
- Wipe the outside of the appliance with a moist cloth.
- Clean the inside of the Milkshake Cup with hot water and a non-abrasive sponge.
- Any other servicing should be performed by an authorized representative.
- Wipe down the Mixing Wand with a moist cloth or a non-abrasive sponge.

CAUTION: The Mixing Wand is not removable.



RECIPES

The chart on the opposite page is a guide to help you create tons of tasty milkshake flavors. Keep in mind that more solid ingredients need to be blended before being added to the Milkshake Maker and slightly adjusting the ratio of ice cream to milk will make for a creamier or thicker milkshake.

These recipes are guidelines. The temperature of your ice cream, or milk will produce slightly different consistencies. Try adjusting the ratio of ice cream to milk to achieve a creamier or thicker milkshake.

For the following recipes, add your ice cream to the Milkshake Cup, then the milk and extra ingredients. Pulse in the Milkshake Maker for 10-15 seconds on setting "II" then mix for another 30-45 seconds on setting "I". Once mixed, pour your shake into a glass and top with toppings.

Flavor	Ice Cream	Milk	Extra Ingredients	Fun Toppings & Special Instructions
Classic Vanilla	1½ cup Vanilla	1 cup	n/a	Whipped cream, cherries
Chocolatey Goodness	1½ cup Chocolate	1 cup	n/a	Whipped cream, chocolate sauce
Peanut Butter and Banana	1½ cup Vanilla	1 cup	1 blended banana, 1 cup peanut butter	Whipped cream, chocolate sprinkles
Sweet Strawberry	1½ cup Vanilla	1 cup	Handful of strawberries, blended	Whipped cream, mint
PB+J	1½ cup Vanilla	1 cup	2 tbsp peanut butter, 2 tbsp grape jelly	Whipped cream, crushed peanuts
Black & White	1½ cup Vanilla	1 cup	1 tbsp malt powder, hot fudge	Another scoop of ice cream ** Coat your glass with hot fudge before pouring milkshake. Top milkshake with scoop of ice cream and more hot fudge.


Flavor	Ice Cream	Milk	Extra Ingredients	Fun Toppings & Special Instructions
Chocolate egg cream	none	½ cup	½ cup of seltzer, chocolate syrup	** Pour seltzer first and let fizz. Use caution while mixing to not overfizz.
S'mores	1½ cup Chocolate	1 cup	Handful of marshmallows, softened	** Toast marshmallows until browned then add to milkshake mixture. Top with whipped cream and Graham crackers.
Boozy banana	1½ cup Vanilla	1 cup	1 blended banana, 2 oz. rum	Whipped cream
Irish Cream Shake	1½ cup Chocolate	1 cup	2 oz. Irish cream	Whipped cream



Customer Support

Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit bydash.com/feelgood.

Our customer support teams in the US and Canada are at your service Monday – Friday during the times below. Contact us at 1 (800) 898-6970 or support@bydash.com

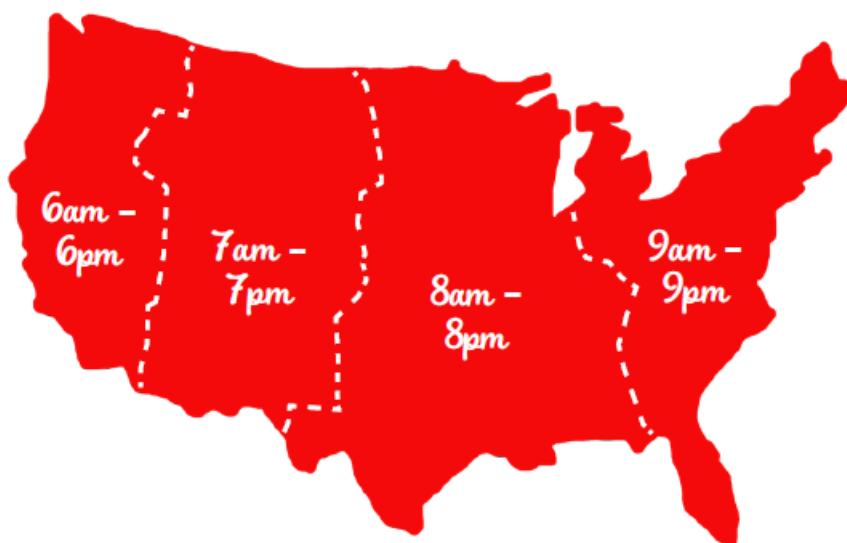

Hey Hawaii! You can reach our customer service team from 3AM to 3PM. And also, Alaska, feel free to reach out from 5AM to 5PM.

WARRANTY

STOREBOUND, LLC – 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@bydash.com.

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

REPAIRS

DANGER! Risk of electric shock! The Dash Retro Milkshake Maker is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances.

Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Voltage 120V ~ 60Hz

Power Rating 100W

Stock#: DMM100_20220728_v8

Download

Dash Retro Milkshake Maker DMM100 User Manual – [[Download PDF](#)]
