



[Home](#) » [Dash](#) » **DASH DSIM100GBAQ02 Shaved Ice Maker Instruction Manual** 

Contents [[hide](#)]

- [1 DASH DSIM100GBAQ02 Shaved Ice Maker](#)
- [2 Product Specifications](#)
- [3 Product Usage Instructions](#)
- [4 IMPORTANT SAFEGUARDS](#)
- [5 PARTS & FEATURES](#)
- [6 SETTING UP YOUR DASH SHAVED ICE MAKER](#)
- [7 USING YOUR DASH SHAVED ICE MAKER](#)
- [8 DISASSEMBLY & ASSEMBLY](#)
- [9 CLEANING & MAINTENANCE](#)
- [10 FAQ](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)



DASH DSIM100GBAQ02 Shaved Ice Maker



Product Specifications

- Model Number: 814100043
- Country of Origin: Mexico
- Printed By: J.M.
- Manufacturing Date: 02-28-2025
- Version: DSIM100_20171215_v6

Product Usage Instructions

Before First Use

- Thoroughly rinse the water reservoir with fresh water to remove any condensation from the refurbishing process.
- Ensure all accessories are included as per the model variation.

Operating the Unit

- Refer to the user manual for specific instructions on different functions.
- Connect the unit to a power source following the provided guidelines.
- Fill the water reservoir with clean water before use.
- Follow the recommended settings for optimal performance.
- Regularly clean all parts according to the instructions provided in the manual.

- Ensure the unit is unplugged before cleaning or performing maintenance.
- Store the unit in a dry and safe place when not in use.

IMPORTANT SAFEGUARDS

PLEASE READ AND SAVE THESE INSTRUCTIONS AND CARE MANUAL.


When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions
- When using electrical appliances, basic safety precautions should be followed, including:
 - Read all instructions.
 - Remove all bags and packaging from the appliance before use.
 - Never leave an appliance unattended when in use.
 - Make sure the appliance is cleaned thoroughly before using.
 - Do not use the appliance for anything other than its intended use. For household use only. Do not use outdoors.
 - Close supervision is necessary when any appliance is used by or near children.
 - To prevent electric shock, do not submerge the cord, plugs, motor unit, or any electrical parts in water or other liquids.
 - Do not operate the machine without ice. Do not use the appliance to shave or crush substances other than ice.
 - Do not place your fingers in the appliance, as the blades are sharp and may cause injury.
 - Do not attempt to sharpen the blades.
 - In order to prevent the Dash Shaved Ice Maker from overheating, do not operate this appliance for more than 2 minutes continuously. Allow the appliance to rest in between uses.
 - Do not operate this appliance with a damaged cord, damaged plug, or after the appliance malfunctions, is dropped, or is damaged in any manner.
Contact a service center
 - Do not place the appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
 - Refrain from using attachments that are not recommended by the appliance

manufacturer, as this may result in fire, electric shock, or personal injury.

- Do not let the cord touch hot surfaces, or hang over the edges of tables or counters.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Always be sure to unplug the appliance from the outlet prior to moving, cleaning, storing, and when not in use.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

PARTS & FEATURES

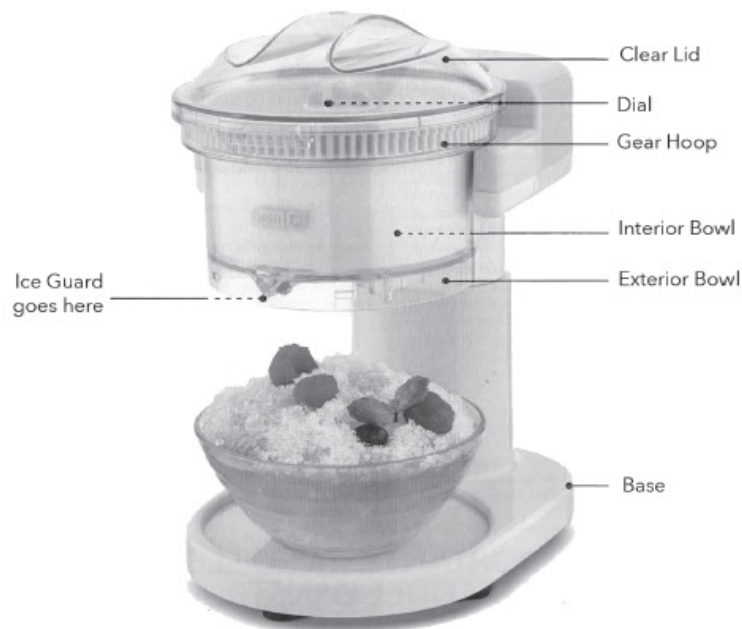

SETTING UP YOUR DASH SHAVED ICE MAKER

NOTE:

Please clean your Dash Shaved Ice Maker before first use.

1. Place the Base on a stable and dry surface.



2. Install the Motor Unit on the Base.



3. Align and insert the Exterior Bowl onto the assembled Motor Unit and Base. The two notches on the side of the Exterior Bowl should fit into the two notches on the inside of the Motor Unit.

Lastly, plug in the Power Cord.




USING YOUR DASH SHAVED ICE MAKER

1. Place ice cubes inside the Interior Bowl. The bowl should be filled to the top level. If the ice has been in the freezer for a long time, it may be too hard and may need to rest at room temperature for a few minutes before shaving. The machine will then produce fluffier snow.



2. Place the Clear Lid on top of the Interior Bowl, locking it into place by aligning the fin-shaped notch on the lid with the corresponding notch on the Motor Unit.

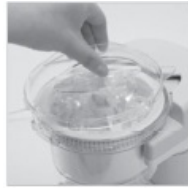

3. Place an empty bowl on the base of the unit. This bowl will be used to collect the shaved ice.

NOTE: At this time, you may want to insert the Ice Guard, which helps the ice shavings go more directly into the bowl. Simply slide the Ice Guard into place so that the notches on the Ice Guard and the Exterior Bowl align. (See red arrows on the left for reference)



4. To activate the machine, turn the lid counterclockwise until the fin-shaped notch activates the Safety Switch. To stop the shaving process, turn the lid clockwise to deactivate the Safety Switch. For optimal results, hold onto the lid during the shaving process to ensure all ice is shaved.

Unplug the Dash Shaved Ice Maker after each use.



The images shown in this manual are for illustrative purposes only and may be subject to change.

PARTS & FEATURES



Accessory type and quantity may vary depending on the model.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

DISASSEMBLY & ASSEMBLY

- Always ensure that the appliance is switched off and that it is not plugged into an electrical outlet before you disassemble or assemble the Dash Shaved Ice Maker.

TO DISASSEMBLE

1. First, make sure the unit is unplugged, then remove the Dial from the Interior Bowl by turning counterclockwise.



2. Remove the Interior Bowl.



3. Remove the Gear Hoop from the Exterior Bowl, then remove the Exterior Bowl.



4. Lift up the Motor Unit to release from the Base.



5. The Dash Shaved Ice Maker is now disassembled.



TO ASSEMBLE

- To assemble the Shaved Ice Maker, simply follow the steps in reverse order.
- The images shown in this manual are for illustrative purposes only and may be subject to change.

CLEANING & MAINTENANCE

IMPORTANT

- Disassemble the appliance before cleaning.
- When cleaning, exercise caution and avoid touching the Shaving Blade to prevent injury.

- DO NOT submerge the Motor Unit in water or other liquids. Wipe with a damp cloth before drying thoroughly.
- Avoid using abrasive cleaning agents when cleaning the appliance.
- All other parts may be washed in warm water with mild soap and rinsed. All parts of the Dash Shaved Ice Maker are NOT dishwasher safe.
- Dry all parts thoroughly before storing.

PRINTED IN MEXICO


- Elbrd: J.M. / SC: 02-28-2025
- OBPN: DSIM10O_20171215_V6
- SHDML: DSIM10OGBAQ02_B



FAQ

- **Q: Is the recipe book included with the product?**
 - **A:** No, the recipe book is not included. However, you can find various recipes online or create your own.
- **Q: What should I do if I notice condensation in the water reservoir?**
 - **A:** It is recommended to rinse the water reservoir with fresh water before the first use to remove any condensation from the refurbishing process.
- **Q: How can I ensure optimal performance of the unit?**
 - **A:** Regularly clean and maintain the unit as per the instructions in the manual, and follow recommended usage guidelines for best results.

Documents / Resources

	<p>DASH DSIM100GBAQ02 Shaved Ice Maker [pdf] Instruction Manual DSIM100GBAQ02 Shaved Ice Maker, DSIM100GBAQ02, Shaved Ice Ma ker, Ice Maker</p>
---	---

References

- [User Manual](#)

📌 Dash, DSIM100GBAQ02, DSIM100GBAQ02 Shaved Ice Maker, Ice Maker, Shaved Ice

📁 Dash Maker

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos

are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.