



Multi Maker
Mini Maker



DASH Multi Maker Mini Maker Instructions

[Home](#) » [Dash](#) » DASH Multi Maker Mini Maker Instructions 

Contents

- [1 DASH Multi Maker Mini Maker](#)
- [2 Before First Use](#)
- [3 Installing The Removable Plates](#)
- [4 Cooking with the MultiMaker™ Mini Maker](#)
- [5 Removing The Plates](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



DASH Multi Maker Mini Maker



Before First Use



Never touch the Cover while appliance is in use.



Never touch the Removable Plates or the inside of the MultiMaker™ while it is preheating or before it has fully cooled off.



DO NOT lift the Cover with your arm positioned over the Removable Plates. They are hot and may cause injury.

Installing The Removable Plates

Choose two Removable Plates for cooking. Install the Removable Plates by sliding them into the two open slots located at the top and bottom of the MultiMaker™ (photo A). Each Removable Plate is labeled either “Top” or “Bottom.” Slide each Plate into its respective slot. Push down at the corner where the plate is labeled “Top” or “Bottom” until there is a slight click indicating that the Plate is properly in place (photo B).



TOP




BOTTOM



Cooking with the MultiMaker™ Mini Maker

To make a mini imprint waffle, use 1.5 tablespoons of batter. For a 4" circular waffle with the imprint, use 3-4 tablespoons of batter.

1.5 TABLESPOONS

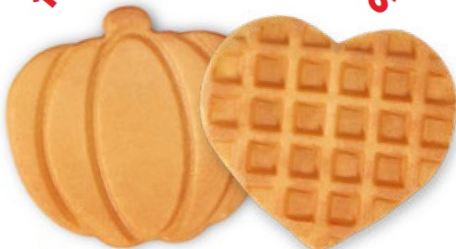

**SCAN HERE
FOR RECIPES
& MORE!**



3-4 TABLESPOONS



**collect
them all!!**

Removing The Plates


To remove the Plates, press the corresponding Release Tabs inside the Handle [there's one at the bottom (photo A) and one at the top (photo B).] After pressing the Release Tab, lift and slide the Plate out.



CAUTION: Always lift and lower the Cover Handle from the right side to avoid hitting the Release Tab.

1-[800-898-6970](tel:800-898-6970)
bydash.com

Documents / Resources

	<p>DASH Multi Maker Mini Maker [pdf] Instructions Multi Maker Mini Maker, Maker Mini Maker, Mini Maker, Maker</p>
---	---

References

- [Dash](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.