



## Contents [ [hide](#) ]

- [1 DATA FROG P03 Wireless Controller](#)
- [2 Precautions](#)
- [3 Package Contents](#)
- [4 Product Features](#)
- [5 Product Overview](#)
- [6 Button Layout Diagram](#)
- [7 Connection Guide](#)
  - [7.1 PS4 Console Connection](#)
  - [7.2 Multi-Platform Connections](#)
- [8 Advanced Function Details](#)
- [9 6. Reset to Factory Settings](#)
- [10 Technical Specifications](#)
- [11 FAQ](#)
  - [11.1 Q: How do I connect the controller to different platforms?](#)
  - [11.2 Q: What is the maximum wireless range of the controller?](#)
  - [11.3 Q: How can I adjust the RGB lighting on the controller?](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)
- [13 Related Posts](#)

## DATA FROG P03 Wireless Controller



## USER MANUAL

The wireless controller features various functionalities including Turbo Burst, programmable back keys, 6-axis gyro, 3 levels of vibration, deadzone adjustment, and calibration.

### Precautions

- Avoid extreme temperatures, humidity, or physical impact; do not disassemble the product.
- For long-term storage, charge the battery at least once every month to maintain performance.
- In case of malfunction, press and hold the HOME button for 5 seconds to reset, or use the reset key on the back of the controller.

### Package Contents

- Game Controller x 1
- User Manual X 1
- USB Charging Cable x 1


### Product Features

- Wide Compatibility: Supports PS4, PS3, PC, Android, iOS, and Steam Deck.
- Dual-mode Connection: Connect wirelessly via Bluetooth to a PS4 console or use a data cable for wired connection.
- Advanced Functions:
  - Turbo Burst (manual/auto mode, supports custom settings for 12 keys).
  - Cool RGB lighting (four brightness levels, multiple modes available).
  - Dual-back key macro programming (supports mapping multiple key functions).
  - Six-axis gyroscope for precise control, three levels of vibration intensity.
  - Joystick dead-zone mode switch, supports joystick calibration.

## **Product Overview**

P03 controller is a multi-functional game controller compatible with PS4, PS3, PC, Android, iOS, and Steam Deck. It supports both wireless and wired connection modes. Featuring a PS4-standard button layout, it integrates advanced functions such as Turbo Burst, RGB lighting, six-axis gyroscope, and vibration feedback, providing an immersive gaming experience.

## **Button Layout Diagram**

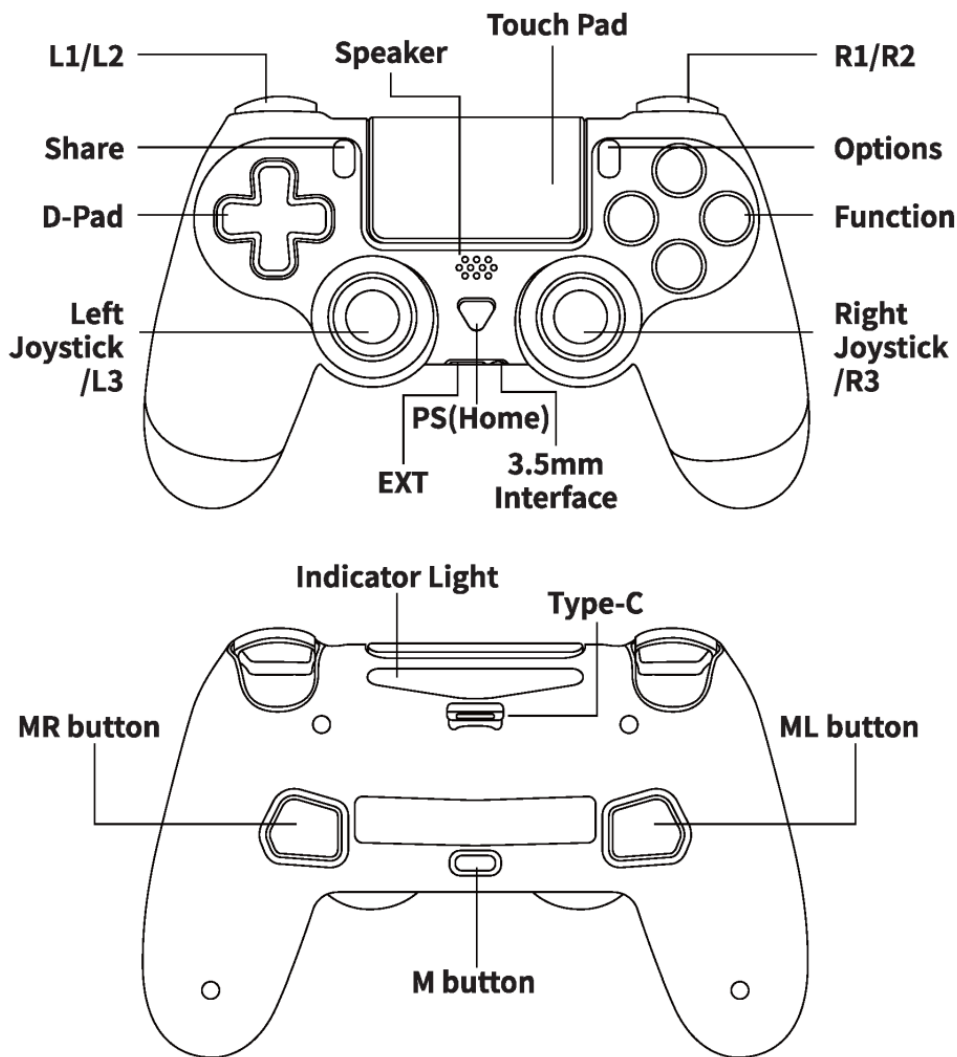


## Connection Guide

The P03 Bluetooth gamepad has extensive compatibility and can be connected to a variety of platform devices. The specific operations are as follows.

### PS4 Console Connection


#### Wired connection

1. The controller to PS4 via USB cable
2. Press the PS (HOME) button to establish connecti

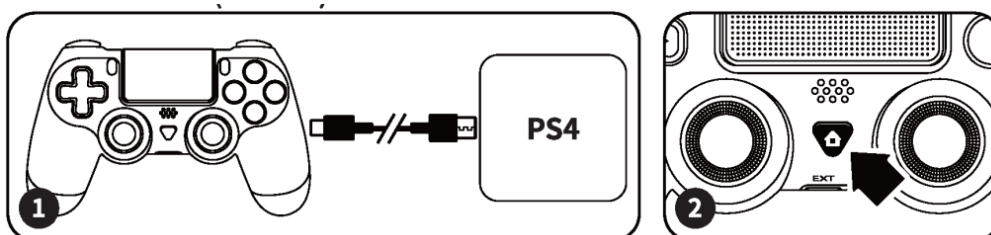

Wireless Connection


- 1. Complete initial wired pairing as above
- 2. Disconnect USB cable
- 3. Press PS (HOME) button to reconnect wirelessly

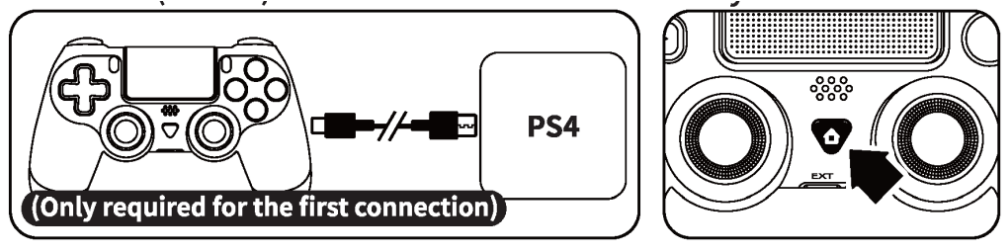

Note: Requires < 10 m operating distance from console

Multi-Platform Connections

NO.	Compatible Platforms	Supported Modes	Wired/Bluetooth Connection Operations
1	PS5 Console (P03 can only be used to play PS4 disc games on the PSS console and cannot be used to play PSS games.)	Wired /Wireless	Wired: Use a USB data cable to directly connect to the PSS console, and press the “PS” button to connect in wired mode.
			Wireless: After a successful wired connection, unplug the USB data cable and press the “PS” button to reconnect to the PSS console.
2	PC (Desktop/Laptop)	Wired /Wireless	Compatible Systems: Windows 11, Windows 10, Windows 7.
			Wired: Use a USB data cable to directly connect to the computer.

			Wireless: Press and hold the  "SHARE" button and the "PS" button simultaneously for 5 seconds to turn on Bluetooth connection.
3	PCX-INPUT	Wired	Press and hold the "SHARE" button and the "OPTIONS" button simultaneously for 4 seconds to switch to X-input mode.
4	Steam	Wired /Wireless	Wired: Use a USB data cable to directly connect to the computer, and open the Steam platform to use.
			Wireless: Press and hold the "SHARE" button and the "PS" button simultaneously for 5 seconds to turn on Bluetooth connection with 4.0/5.0 Bluetooth devices, and open the Steam platform to use.
5	Android 10 and above	Wired /Wireless	Wired: Use an OTG adapter to directly connect the gamepad to the device via a data cable.
			Wireless: Press and hold the "SHARE" button and the "PS" button simultaneously for 5 seconds to turn on Bluetooth search and connect.
6	iOS 13 and above	Wireless	Press and hold the "SHARE" button and the "PS" button simultaneously for 5 seconds to turn on Bluetooth search and connect.
			Wired: Use a USB data cable to directly connect to the PS3 console.

7	PS3 Console	Wired /Wireless	Wireless: After a successful wired connection, unplug the USB data cable and press the “PS” button to reconnect to the PS3 console.
8	8BitDo Wireless Device	Wireless	Press and hold the “SHARE” button and the “PS” button simultaneously for 5 seconds to turn on Bluetooth search and connect


## Advanced Function Details

### 1. Turbo Burst Function

- **Manual Burst:** Press and hold M + target key (e.g., O).
- **Auto Burst:** While holding the target key in manual burst mode, press it again.
- **Disable Burst:** Press and hold M + active burst key.
- **Clear All Bursts:** Press and hold M + OPTIONS; the controller vibrates to confirm.
- **Adjust Burst Speed:**

Press and hold M + move the left joystick up/down to adjust speed (5/12/25 rounds per second).


Speed corresponds to light flashing: slow flash (5 rounds) → medium flash (12 rounds) → fast flash (25 rounds)

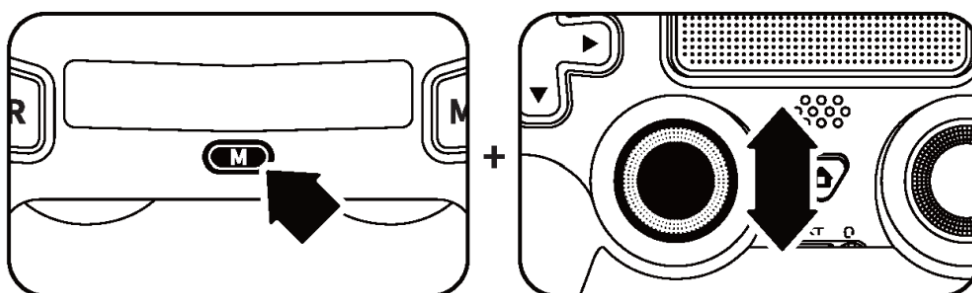

### 2. Vibration Intensity Adjustment

Hold L1 + R1 + L2 + R2 for 1.5 seconds to cycle through the three levels of intensity

(00/0/50%/100%).

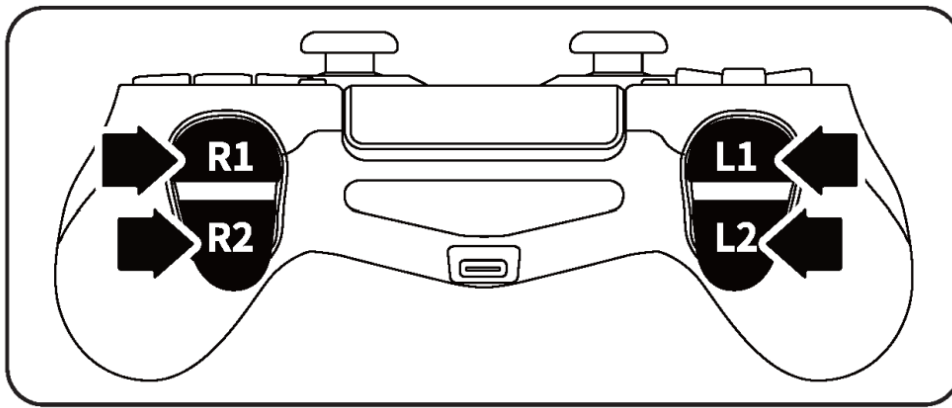

### 3. Back Key Mapping Function

**Function of Back Keys :** The ML and MR back keys on the controller can replicate other key functions, making operations more convenient.

- Setup Steps:
- Enable: Press and hold the M key and the back key you want to set (e.g., M + MR) . The controller vibrates and the light flashes slowly, entering setup mode.
  - Select Key: Press the key whose function you want to copy (e.g., A, B, etc.), or multiple keys (e.g., A+B+X). Each press increases the light flashing speed .
  - Confirm: Once the light flashes quickly, press the back key you started with (e.g., MR} to confirm.
  - Example : To map A, B, and X to MR, first press M + MR to enter mode, then press A, B, and X, followed by MR to confirm.
  - Clear Settings: Hold the M key for 5 seconds; the controller vibrates and the light flashes red, clearing all back key functions and restoring them to their initial state

### 4. RGB Lighting Adjustment

- Mode Switching: Press SHARE+ OPTIONS.
- Brightness Adjustment: Press and hold M + move the right joystick up/down to adjust four brightness levels (25%/50%/75%/100%) .
- Turn Off Lights: Hold SHARE+ R3.

### 5. Joystick Calibration & Dead-Zone Settings



- Calibration (requires cont roller to be in sleep mode):  
Press and hold '':+ 0 + HOME; the RGB light cycles through red, green, and blue. Rotate the joysticks 3 times each, then press x; the lights turn off to confirm completion .
- Dead-Zo ne Mode: Press and hold M + L3/R3 for 2 seconds to toggle between no-dead- zone mode (green light) and default mode (blue light). Note: Se ttings ar e not sa ved a fter power off; default mode is active.

## 6. Reset to Factory Settings

In the off state, hold L3 + R3 + HOME; the RGB light turns red for 1 second before resetting.

## Technical Specifications

- Input Voltage/Current: N/A
  - Operating Time: N/A
  - Weight: N/A
  - Dimensions: N/A
  - Wireless Range: 10 Meters
- 

## FAQ

**Q: How do I connect the controller to different platforms?**

**A:** For wired connections, use a USB cable and press the corresponding button. For wireless connections, unplug the USB cable after initial connection and press the designated button.

**Q: What is the maximum wireless range of the controller?**


**A:** The wireless range of the controller is 10 meters.

**Q: How can I adjust the RGB lighting on the controller?**

**A:** To switch between RGB modes, press SHARE + OPTIONS. Adjust brightness using

M + right stick up or down. To turn off RGB lighting, hold SHARE and press R3.

## Documents / Resources

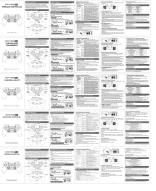	<a href="#">DATA FROG P03 Wireless Controller [pdf] User Manual</a> P03 Wireless Controller, P03, Wireless Controller, Controller
---	--

## References

- [User Manual](#)

## Related Posts



[Gioteck GC2 Wireless Game Controller User Manual](#)

GC2 Wireless Game Controller 4 5 6 7 8 9 10 11 12 13  
14 15 18 19...



[LG PWLSSB21HPWLSSB21H Wireless Remote  
Controller Instruction Manual](#)

LG PWLSSB21HPWLSSB21H Wireless Remote  
Controller Unit Data: Max Number of Indoor Units (Group  
Control) 16 Temperature Value Fahrenheit...



[tekkiwear PS4 Wireless Controller User Manual](#)

tekkiwear PS4 Wireless Controller User Manual Control  
design Direction pad SHARE button Tactil panel Options  
button ,6,7 and...

[arVin Xbox Wireless Controller User Manual](#)

arVin Xbox Wireless Controller User Manual Notice: Platform operation system required:  
10S 13.0+/ Android 10.0+. Support 1Phone/iPad Android...



DATA  
FROG

controller, DATA FROG, P03, P03 Wireless Controller, Wireless  
Controller

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.