



DATASHUR Pro C iStorage PIN Protected Hardware User Guide

[Home](#) » [DATASHUR](#) » DATASHUR Pro C iStorage PIN Protected Hardware User Guide 

Contents

- [1 DATASHUR Pro C iStorage PIN Protected Hardware](#)
- [2 introduction](#)
- [3 EXCEPT FOR THE LIMITED WARRANTY](#)
- [4 First Time Use](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

DATASHUR®

DATASHUR Pro C iStorage PIN Protected Hardware



introduction

- iStorage Product Disclaimer and Warranty iStorage warrants that on delivery and for a period of 36 months from delivery, its Products shall be free from material defects. However, this warranty does not apply in the circumstances described below. Storage warrants that the Products comply with the standards listed in the relevant data sheet on our website at the time you place your order. These warranties do not apply to any defect in the Products arising from: fair wear and tear; willful damage, abnormal storage or working conditions, accident, negligence by you or by any third party; if you or a third party fail(s) to operate or use the Products in accordance with the user instructions; any alteration or repair by you or by a third party who is not one of our authorized repairers; or any specification provided by you.
- Under these warranties we will, at our option, either repair, replace, or refund you for, any Products found to have material defects, provided that upon delivery: you inspect the Products to check whether they have any material defects; and you test the encryption mechanism in the Products.
- We shall not be liable for any material defects or defects in the encryption mechanism of the Products ascertainable upon inspection on delivery unless you notify such defects to us within 30 days of delivery. We shall not be liable for any material defects or defects in the encryption mechanism of the Products which are not ascertainable upon inspection on delivery unless you notify such defects to us within 7 days of the time when you discover or ought to have become aware of such defects. We shall not be liable under these warranties if you make or anyone else makes any further use of the Products after discovering a defect. Upon notification of any defect, you should return the defective product to us.
- If you are a business, you will be responsible for the transportation costs incurred by you in sending any Products or parts of the Products to us under the warranty. and we will be responsible for any transportation costs we incur in sending you a repaired or replacement Product.
- If you are a consumer, please see our terms and conditions. Products returned must be in the original packaging and in clean condition. Products returned otherwise will, at the Company's discretion, either be refused or a further additional fee charged to cover the additional costs involved. Products returned for repair under warranty must be accompanied by a copy of the original invoice. or must quote the original invoice number and date of purchase. If you are a consumer, this warranty is in addition to your legal rights in relation to Products that are faulty or not as described. Advice about your legal rights is available from your local Citizens' Advice Bureau or Trading Standards office. The warranties set out in this clause apply only to the original purchaser of a Product from storage or an iStorage authorized reseller or distributor. These warranties are non-transferable.

EXCEPT FOR THE LIMITED WARRANTY

- PROVIDED HEREIN, AND TO THE EXTENT PERMITTED BY LAW, ISTOREAGE DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ALL WARRANTIES OF MERCHANTABILITY; FITNESS FOR A PARTICULAR PURPOSE, NONINFRINGEMENT. ISTOREAGE DOES NOT WARRANT THAT THE PRODUCT WILL OPERATE ERROR-FREE. TO THE EXTENT THAT ANY IMPLIED WARRANTIES MAY NONETHELESS EXIST BY OPERATION OF LAW, ANY SUCH WARRANTIES ARE LIMITED TO THE DURATION OF THIS WARRANTY. REPAIR OR REPLACEMENT OF THIS PRODUCT, AS PROVIDED HEREIN, IS YOUR EXCLUSIVE REMEDY. IN NO EVENT SHALL ISTOREAGE BE LIABLE FOR ANY LOSS OR ANTICIPATED PROFITS, OR ANY INCIDENTAL, PUNITIVE, EXEMPLARY, SPECIAL, RELIANCE OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOST REVENUES, LOST PROFITS,

LOSS OF USE OF SOFTWARE, DATA LOSS, OTHER LOSS OR RECOVERY OF DATA, DAMAGE TO PROPERTY. AND THIRD-PARTY CLAIMS, ARISING OUT OF ANY THEORY OF RECOVERY, INCLUDING WARRANTY, CONTRACT, STATUTORY OR TORT, REGARDLESS OF WHETHER IT WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOTWITHSTANDING THE TERM OF ANY LIMITED WARRANTY OR ANY WARRANTY.

- REPAIR OR REPLACEMENT OF THIS PRODUCT PROVIDED HEREIN, IS YOUR EXCLUSIVE REMEDY. IN NO EVENT SHALL I STORAGE BE LIABLE FOR LOSS OR ANTICIPATED PROFITS, OR ANY INCIDENTAL, PUNITIVE, EXEMPLARY, SPECIAL, RELIABLE OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOST REVENUES, LOST PROFITS, LOSS OF USE OF SOFTWARE, DATA LOSS, OTHER LOSS OR RECOVERY OF DATA, DAMAGE TO PROPERTY AND THIRD-PARTY CLAIMS, ARISING OUT OF ANY THEORY OF RECOVERY, INCLUDING WARRANTY, CONTRACT, STATUTORY OR TORT, REGARDLESS OF WHETHER IT WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOTWITHSTANDING THE TERM OF ANY LIMITED WARRANTY OR ANY WARRANTY. IMPLIED BY LAW, OR IN THE EVENT THAT ANY LIMITED WARRANTY FAILS OF ITS ESSENTIAL PURPOSE IN NO EVENT WILL I STORAGE'S ENTIRE LIABILITY EXCEED THE PURCHASE PRICE OF THIS PRODUCT 4823-2548-5683.3 datahub PRO+C Quick Start Guide The datahub PRO+C is

supplied in the 'Initial Shipment State' with no pre-set User PIN.

- An 8-15 digit User PIN must be created before the drive can be used as set out below under 'First Time Use'. The datahub PRO+C may need to be charged before use for 30-60 minutes by inserting into a powered USB port.
- **PIN Requirements:**
 - **Must be between 8-15 digits in length** : Must not contain only consecutive numbers (3-8-2-3-4-3-6-7-8, 7-8-9-0-12-34)

First Time Use

1. Press KEY button once. All LEDs switch on, solid RED and blinking GREEN and BLUE LEDs.
2. Press the KEY button TWICE (double-click). LEDs switch to a blinking BLUE LED.
3. Enter your New (8-15 digit) User PIN and press the KEY button TWICE (double-click).
4. Blinking BLUE LED will switch to a blinking GREEN LED.

Re-enter your New (8-15 digit)

User PIN and press the KEY button TWICE (double-click). Solid RED LED will switch to a solid GREEN LED indicating the User PIN has been successfully created and drive unlocked. To unlock the datahub PRO+C with the User PIN, follow the steps as set out below. Unlocking with the User PIN

1. Press KEY button once. RED LED will blink.
 2. Enter your User PIN and press the KEY button once. Solid RED LED will switch to a solid GREEN LED indicating the User PIN has been successfully entered and the drive unlocked.
- **Note:** Once datahub PRO+C has been successfully unlocked, the solid GREEN LED will remain on for 30 seconds only, during which time the datahub PRO+C needs to be connected to a powered USB port to format the drive. To configure the drive, refer to the user manual pre-loaded on your datahub PRO+C. To lock the datahub PRO+C,

save all data and safely eject the drive.

- **Note:** Once datahub PRO'C has been successfully unlocked, the solid GREEN LED will To lock the datahub PRO'C, save all data and safely eject the drive.

Documents / Resources

	<p>DATASHUR Pro C iStorage PIN Protected Hardware [pdf] User Guide</p> <p>Pro C iStorage PIN Protected Hardware, Pro C, iStorage PIN Protected Hardware, PIN Protected Hardware, Protected Hardware, Hardware</p>
---	---

References

- [User Manual](#)