

# DAVOLINE

## DAVOLINE IOS ULTRA 60 GR-IX

 
### BUILT-IN EXTRACTOR

#### Instructions on mounting and use

 
#### Contents [ [hide](#) ]

- [1 SLIDE HOODS GUIDE](#)
- [2 GENERAL](#)
- [3 SAFETY PRECAUTION](#)
- [4 INSTALLATION INSTRUCTIONS](#)
- [5 FIX TERRING VERSION](#)
- [6 USE AND MAINTENANCE](#)
- [7 Finding the problems and maintenance.](#)
- [8 DISPOSAL AND RECYCLING](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)

 
 
 
 
## SLIDE HOODS GUIDE

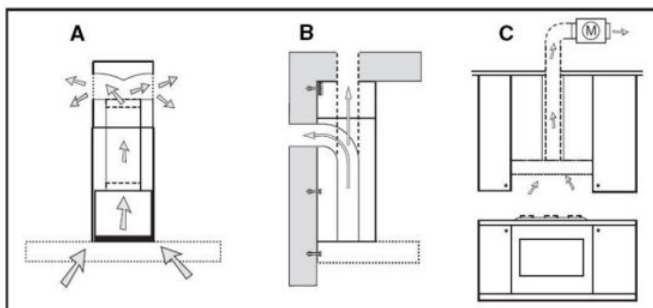

**Fig.1**

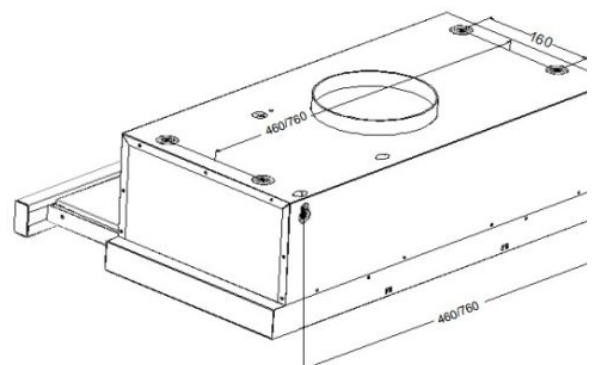

**Fig.2**

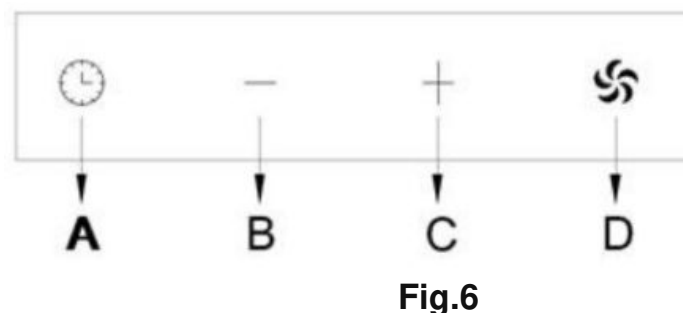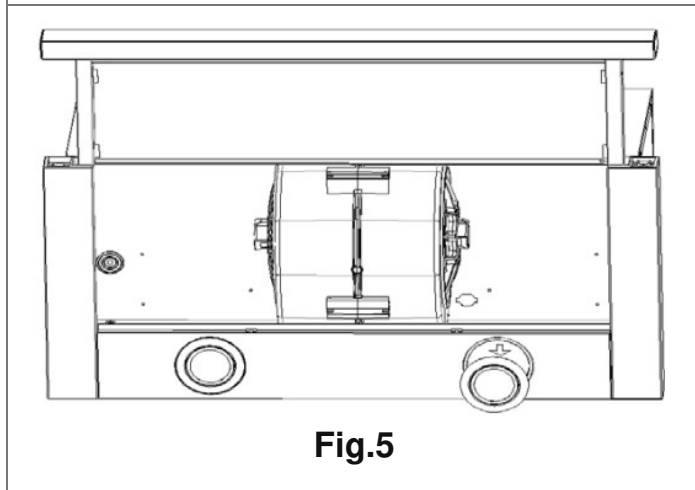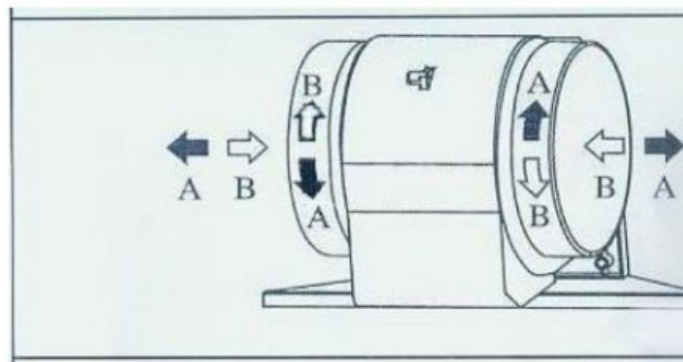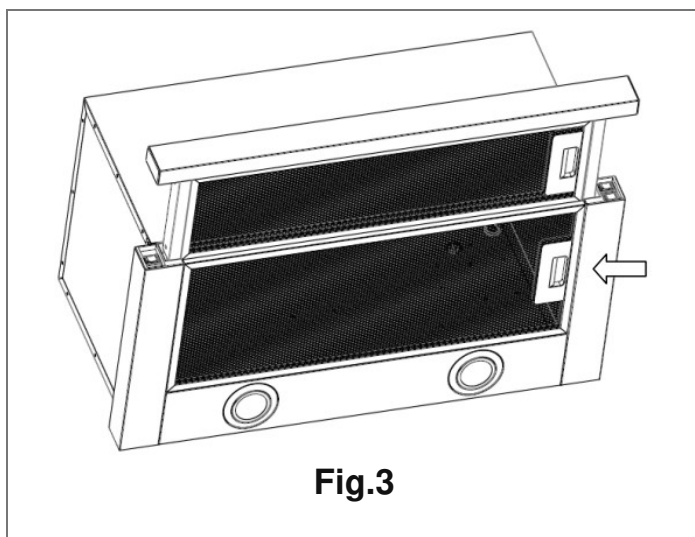

## GENERAL

Carefully read the following important information regarding installation safety and maintenance. Keep this information booklet accessible for further consultations. The appliance has been designed for use in the ducting version (air exhaust to the outside – Fig.1B), filtering version (air circulation on the inside – Fig. 1A), or with an external motor (Fig.1C).

## SAFETY PRECAUTION

-Take care when the cooker hood is operating simultaneously with an open fireplace or burner that depends on the air in the environment and are supplied by other than electrical energy, as the cooker hood removes the air from the environment which a burner or fireplace need for combustion. The negative pressure in the environment must not exceed 4Pa ( $4 \times 10^{-5}$  bar). Provide adequate ventilation in the environment for a safe operation of the cooker hood.

Follow the local laws applicable for external air evacuation.

## **Before connecting the model to the electricity network:**

Control the data plate (positioned inside the appliance) to ascertain that the voltage and power correspond to the network and the socket is suitable. If in doubt, ask a qualified electrician.

### **– WARNING!**

- In certain circumstances, electrical appliances may be a danger hazard.
- Do not check the status of the filters while the cooker hood is operating.
- Do not touch bulbs or adjacent areas during or immediately after prolonged use of the lighting installation.
- Flambe cooking is prohibited underneath the cooker hood.
- Avoid free flame, as it is damaging to the filters and a fire hazard.
- Constantly check the food frying to avoid overheated oil may become a fire hazard.
- Disconnect the electrical plug prior to any maintenance.
- This appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure they do not play with the appliance.
- There shall be adequate ventilation of the room when the rangehood is used at the same time as appliances burning gas or other fuels.
- There is a risk of fire if cleaning is not carried out per the instructions.

K) Under the hood, allow the use of up to 6 stoves.

L) The range hood should not be routed to the exhaust gas for exhaust gas or other fuels used in hot flue smoke.

M) directly against the fire-roasting hood.

N) If the power cord is damaged, you can only use the company's dedicated power line replacement.

O) non-professional non-disassembly of the machine.

## **INSTALLATION INSTRUCTIONS**

Assembly and electrical connections must be carried out by specialized personnel.

### **Electric Connection**

The appliance has been manufactured as a Class I; therefore, an earth cable is necessary.

The connection to the mains is carried out as follows:

|           | IEC227       | North America |
|-----------|--------------|---------------|
| L=live    | Brown        | Black         |
| N=neutral | Blue         | White         |
| E=earth   | Green/Yellow | Green         |

If not provided, connect a plug for the electrical load indicated on the description label. Where a plug is provided, the cooker hood must be installed so that the plug is easily accessible.

An omnipolar switch with a minimum aperture of 3mm between contacts, in line with the electrical load and local standards, must be placed between the appliance and the network in the case of direct connection to the electrical network.

- The minimum distance between the support surfaces of the cooking pots on the cooker top and the lowest part of the cooker hood must be at least 65 cm.

Do not connect the cooker hood exhaust to the same conductor used to circulate hot air or for evacuating fumes from other appliances generated by sources other than an electrical source.

Before proceeding with the assembly operations, remove the anti-grease filter(s) (Fig.5) so that the unit is easier to handle. In the case of assembly of the appliance in the suction version, prepare the hole for the evacuation of the air.

- **Fasten the chimney hood.**

First, install them in the positions with suitable self-tapping screws after taking them out, then drill the holes respecting the distances indicated (Fig.1). Fix the appliance to the wall and align it in a horizontal position to the wall units when the appliance has been adjusted, definitely fix the hood using the screws.

If the model of your chimney hood needs to shift from pipe emission to filter model, you can get help from the installation instructions after you get the charcoal filters. (Fig.4

To transform the hood from a ducting version into a filtering version, ask your dealer for the charcoal filters and follow the installation instructions.

## **FIX TERRING VERSION**

After installing the hood and the ductwork, fix the filter as described in the paragraph for installation of the hood inside the hood. The charcoal filters must be fitted in the ducting unit located inside the hood. Fig.3

## **USE AND MAINTENANCE**

- Before using the hood, please open the pull-out shell.
- It is recommended to operate the appliance before cooking.

It is recommended to leave the appliance in operation for 15 minutes after cooking is terminated in order to eliminate cooking vapors and odour.

The proper function of the cooker hood is conditioned by the regularity of the maintenance operations, in particular, the active carbon filter.

- The anti-grease filters capture the grease particles suspended in the air and are therefore subject to clogging according to the frequency of use of the appliance.

To prevent fire hazard, it is recommended to clean the filter at a maximum of 2 months by carrying out the following instructions:

1. Remove the filters from the cooker hood and wash them in a solution of water and neutral liquid detergent, leaving them to soak.
2. Rinse thoroughly with warm water and leave to dry.
3. The filters may also be washed in the dishwasher.

Before removing the filters, you should remove the outside filter first, then pull the pull-out shell to the farthest distance position prior to removing the inside filter.

When installing the filters, install the inside filter with the pull-out shell in the farthest distance position, and then install the outside filter.

The aluminum panels may alter in color after several washes. This is not a cause for customer complaint nor replacement of panels.

- The active carbon filters purify the air that is released into the environment. The filters

are not washable nor reusable and must be replaced at a maximum of every four months. (Fig.4)

To remove the charcoal filters, place one hand on one filter at a time and turn it toward the front part.

The charcoal filter can now be removed. Always ensure to replace both filters at the same time.

- Clean the fan and other surfaces of the cooker hood regularly using a cloth moistened with denatured alcohol or non-abrasive liquid detergent.
- The illumination installation is designed for use during cooking and not for prolonged general illumination of the environment. Prolonged use of the illumination installation notably reduces the duration of the bulb. Use a one-edged screwdriver or any other appropriate tool to lift and remove the overhead light fixture. Replace the damaged lamp. Use only halogen lamps as the original specification, avoiding contact with your hands. Return the light fixture to its position. (Fig. 5)

- **FUNCTION KEYS: (Fig.6)**

A == Automatic Stop Timer —15 minutes

B == Speed 1/“ ”Control

C == Speed 2/“ ”Control

D == Speed 4

E == Light

By pressing key B C, or D individually, the speed for each key will be the same as above table. At the same time indicated light will flash on each function key button. To stop the speed function, press key A.

If Speed 3 is required press key C to adjust“ ”. In the Speed 3 program, both key B and key C indication lights will flash on each function key button.

To turn on the light, press key E. To turn off the light, press key E again.

When the appliance and light are ON together or separately, press key A, the Automatic Stop Timer will start the 15-minute countdown. The indication light on the key A button will flash for the duration. To stop the Automatic Stop Timer Function before the 15-minute time frame, press key A again.

## Finding the problems and maintenance.

| Problem | Possible reason | Solution |
|---------|-----------------|----------|
|---------|-----------------|----------|

|                               |   |  |
|-------------------------------|---|--|
| Hood doesn't work             | No electric supply                              | Check that the plug is connected                   |
|                               |   | Check that the main switch is turned on            |
|                               | Unfold the pull-out shell                       | Folded the pull-put shell                          |
| Poor airflow                  | Aluminum grease filters are clogged             | Clean the filters and replace them when dry        |
|                               | Charcoal filters clogged                        | Replace the charcoal filters                       |
| Motor running but no air flow | Butterfly valve jammed                          | Contact technician                                 |
| Motor cuts after a            | High-temperature safety device activated        | The kitchen is not sufficiently ventilated         |
|                               | The hood is installed too near the cooking area | The hood must be at least 65cm from the stove      |
| Strong cooking smell          | Charcoal filters not                            | In recirculating mode, charcoal filters must be    |
| Oil dripping onto the stove   | Oil cup missing or not installed                | Remove the aluminum filter and replace the oil cup |
|                               | Aluminum grease filter saturated                | Wash the aluminum grease filters                   |
| Whirring sound                | Something in contact                            | Contact with technician                            |

This product can be used by children at and above 8 years old and by persons whose physical, sensory, or mental capabilities were not fully developed or who lack experience and knowledge, provided that they are supervised or trained on the safe usage of the product and the risks it brings out. Children should not play with the product. Cleaning and maintenance work should not be performed by children unless they are supervised

by someone. Children under the age of 3 should be kept away unless continuously supervised.

- Packaging materials are dangerous for children. Keep packaging materials in a safe place away from the reach of children.
- Electrical products are dangerous for children. Keep children away from the product when it is in use. Do not allow them to play with the product. Use the child lock to prevent children from intervening with the product.

## **DISPOSAL AND RECYCLING**

### **Important instructions for the environment**

Compliance with the WEEE Directive and Disposing of the Waste Product: This product complies with the EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed of with other household wastes at the end of its service life. The used device must be returned to the official collection point for recycling of electronic devices. To find these collection systems, please contact your local authorities or retailer where the product was purchased. Each household plays an important role in the recovery and recycling of old appliances. Appropriate disposal of used appliances helps prevent potential negative consequences for the environment and human health.



### **Compliance with RoHS Directive**

The product you have purchased complies with the EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

### **Package information**

Packaging materials of the product are manufactured from recyclable materials by our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.





**Importer:**

**MULTIKOMPLEX BUDAPEST LTD.**

The expert in cooker hoods... since 1995


**H-1211 Budapest, Mansfeld Peter Street 27.**

**tel.: (36-1) 427 0325**

[www.multikomplex.hu](http://www.multikomplex.hu)



## Documents / Resources

|   |   |
|---|---|
|  | <a href="#">DAVOLINE ULTRA 60 GR-IX Built In Extractor [pdf]</a> Instruction Manual<br>ULTRA 60 GR-IX Built In Extractor, ULTRA 60 GR-IX, Built In Extractor, E<br>xtractor |
|---|---|

## References

- [User Manual](#)

 Built-In Extractor, DAVOLINE, Extractor, ULTRA 60 GR-IX, ULTRA 60 GR-IX Built In

 DAVOLINE Extractor

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.