




DAYTECH EC-680P Watch Receiver User Manual

[Home](#) » [DAYTECH](#) » DAYTECH EC-680P Watch Receiver User Manual 

Contents

- [1 DAYTECH EC-680P Watch Receiver](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Detail Function Setting](#)
- [5 Documents / Resources](#)



DAYTECH EC-680P Watch Receiver



Product Information

The EC-680P Watch Receiver is a versatile device that offers various features to facilitate communication and emergency calls. It comes with a range of functions and a user-friendly

interface.

- OLED display with touchscreen operation, providing a working life of up to 50,000 touches
- Flexible wearing options: can be worn as a watch or attached using a pin
- Patent design allows for copying functions between two watches or between a watch and a PC
- Large capacity: supports up to 400 aid bell call buttons
- Can function as an emergency call button to contact other receivers or watches
- Different service types available, including CALL, SOS, AID, ORDER, DRINK, WATER, PARK, etc.
- Displays 3 calling records with service type, calling time, and time called
- Can store up to 99 call records for easy reference
- Easy assembly with watch belt or pin belt
- Rechargeable 3.7V Li-ion battery with a working time of 12 hours
- Battery replacement is quick and easy if needed
- Available in two colors: Black and White

Product Usage Instructions

Note: Charge the watch to power on when first used.

Key Operation:

To enter the function setting, long press the designated key.

Menu List:

The menu list provides access to various settings and functions of the EC-680P Watch Receiver. Use the touchscreen operation to navigate through the menu and select the desired options.

EC-680P Watch Receiver User Manual



Features

1. OLED display with touch screen operation (Working life: 50,000 touches)
2. Flexible wearing types: watch type & pin type
3. Patent design: Copy function between 2 watches or watch & PC


4. Capacity: 400pcs Aidbell call buttons in max
5. Can work as emergency call button to call other Receivers or Watches.
6. Different service types are available: CALL, SOS, AID, ORDER, DRINK, WATER, PARK and etc
7. Show 3 calling records with service type, calling time & time called a.store up to 99 call records
8. Easy to assemble watch belt or pin belt
9. Rechargeable 3.7V Li-ion battery with 12 hours working time
10. Easy to replace battery if broken
11. Two colors are available: Black & White

Key Operation

Power on	Long press "<" Key
Power off	Long press "<" to choose "Turn off!" and Long press "< & >" Key at same time
Wake up	Short press "<" Key
Enter setting	Long press "<" to choose "Enter Menu" and Press "<" & ">" Key at same time to input password '98"
Exit setting	Long press "<" Key
Enter next menu	Short press "<" Key
Confirm menu choice	Press "<" & ">" Key at same time
Page up	Short press "<" Key
Page down	Short press ">" Key
Digit choice	Short press "<" & ">" Key at same time
Adjust number	Short press "<" or ">" Key

General	Bluetooth define / Bluetooth word / Back light time / Prompt times
Pair buttons	General mode / 9999 mode
Prompt mode	Vibration / Buzzer / Vibration & Buzz
Display mode	Single / List Display
Auto clear time	Set auto clear time
Copy Data	Copy watch A settings to watch B
Date & Time	Set current Date & Time
Remind mode	Prompting times / Time interval
Restore default	Delete Call / Delete calling record / Restore all

Enter Function Setting

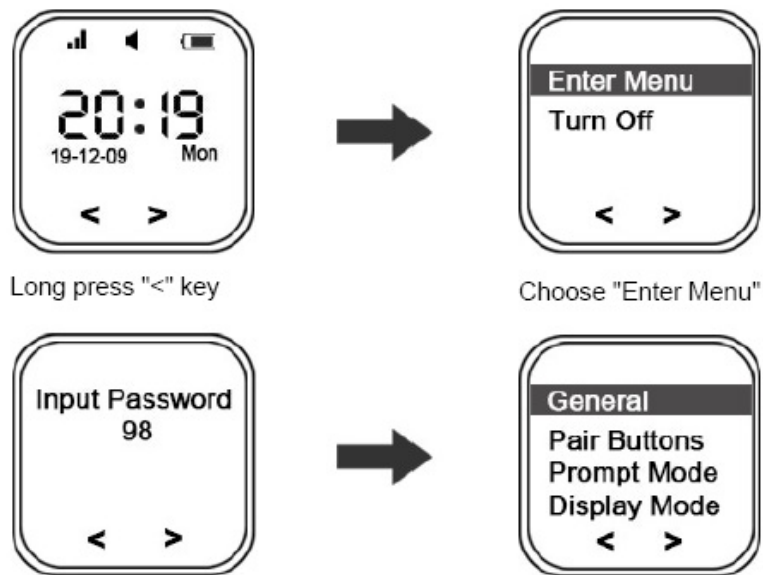

Press "<" & ">" Key at same time, Press "<" twice to input Password :93.
Enter Function setting.

Detail Function Setting

General Setting



1. Button Define (Default setting)·

CAN: DO


A:03

B:01

CO2

D:DO+D1

To define each key m ,,,,mell call bl.tton to have specific service type Press each key m ,,,,dbell call bl.tton to match· A , B , C , D , CAN· types if necessary Normally, no need to set this function

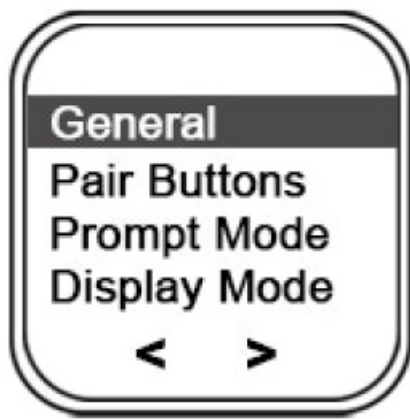



2. BLItion Word (Set Service Type) .

1. Call
2. Bill
3. Order
4. Low

Sort press "<" key to choose ottBr service types for "ABCD" keys from Call /Pay/ Order/ Pa-k/SOS/ Aid/ 8'11 / Dnnk/ Low/ Water/ (Blank)



3. Back Light time: To set Back Light Time from 5s to 15s (Default setting:1 Os)

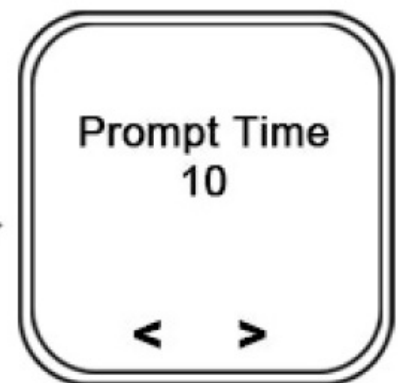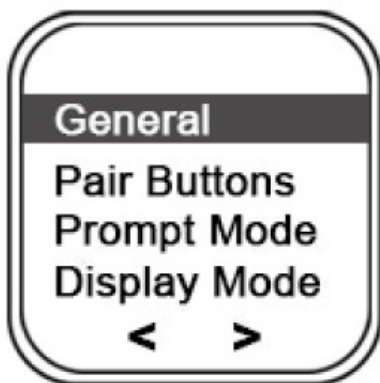

4. Prompt Time: Tos et Prompt Time from 1slo15s (Default setting:105)



2. Pair Buttons: edit call buttons with letters & numbers



1. General Mode: Edit call buttons with letters & numbers

Short press "<" or ">" to choose number from 0-9 & "A-Z"


Short press "<" & ">" key together to choose next digit

After editing, press any key on the call button for 3s to pair

(400pcs call buttons in max)

Long press "<" key to exit

Note EC-680W & EC-680P can work as emergency call button. Press "<" & ">" key at same time on other EC-680W & EC-680P or other wireless receiver to pair under "Pair Buttons".

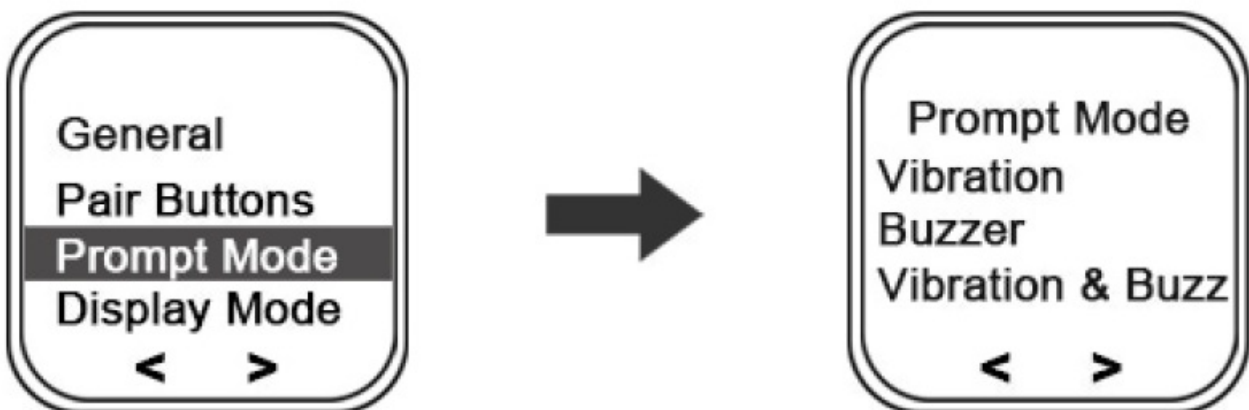


2. 9999 Mode Edit call button with numbers only

Short press "<" or ">" to choose number from "0-9" only. Short press "<" & ">" key together to choose next digit

After editing, press any key on the call button for 3s to pair (400pcs call buttons in max). Long press "<" key to exit.


3. Prompt Mode: Vibration I Buzzer/ Vibration & Buzzer

4.

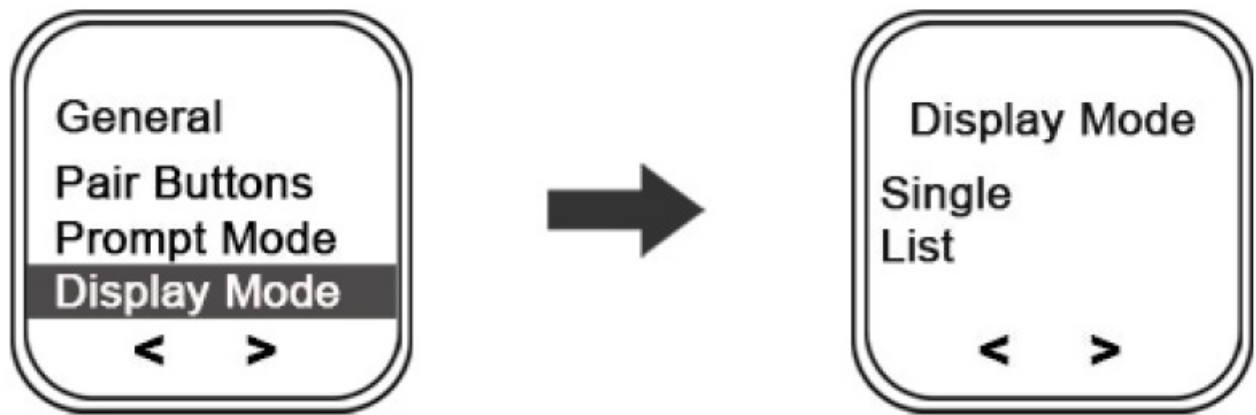

Short press "<" or ">" key to choose Prompt Mode Long press "< • key to exit

Display Mode: Single / list display

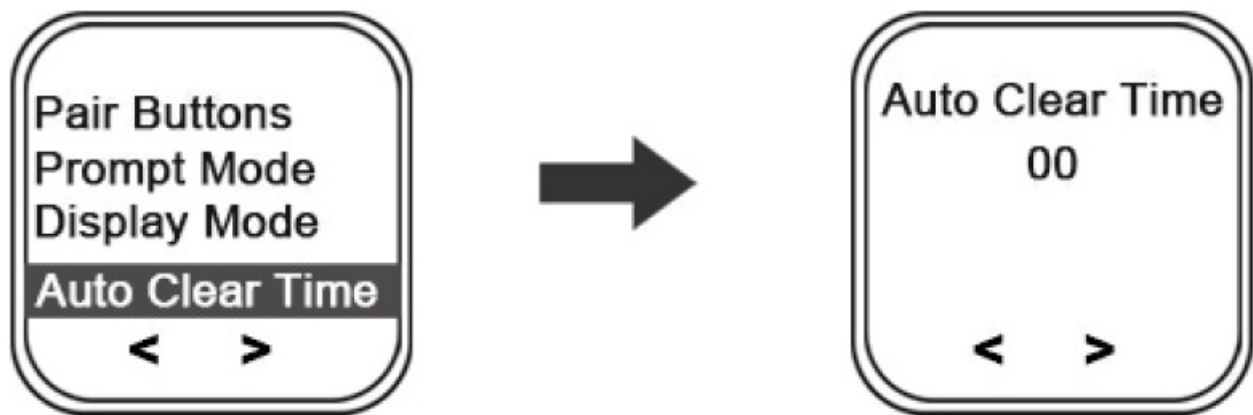


Short press "<" or ">" key to choose Single or List. Long press "<• key to exit.

5. Auto Clear Time: 00-895Short press "<" or ">" key to choose Auto Clear Time from 00 to 99s Lmg press "<" key to exit

Note: ·00· means need to cane? the callings via cancel key on each l'<dbell call bliton. It _..11 not support tee cancel on EC-680\N or EC-680P itself.

6. Copy data: Copy/ Be Copied

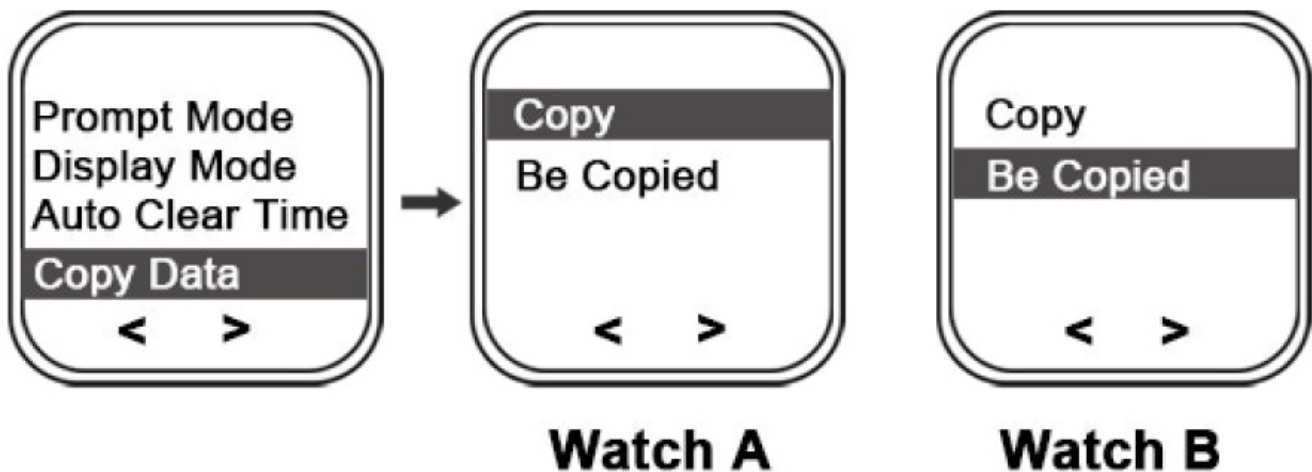

1. Copy between watches:

Copy datafromWatdIA(·copy·)to watch B("Be cor;ed")


In Watch A, short press "<" & ">" key to enter "Copy" status

In Watch B, short press "<" & ">" key to enter "Be copied" status

2. Backup via PC

Copy data from Watch A to PC via f'Jcbell software

Then, download the copied data to Watch B via f'Jdbell software.

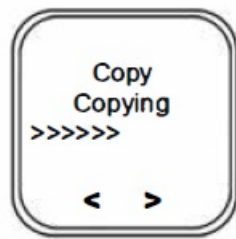

Watch A



Watch B


Watch A

When copy is completed, it will show as follows:



Watch A

Long press "<" key to exit.

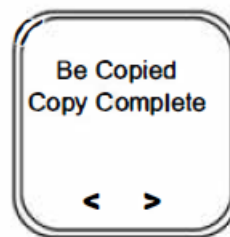


Watch B

Watch A

Long press "<" key to exit


Date & Time

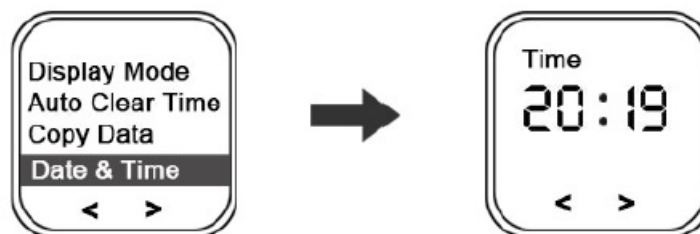

1. Time

Short press "<" & ">" key to enter "Time" setting

Short press "<" & ">" key to choose current Hours & Minutes Long press "<" key to exit

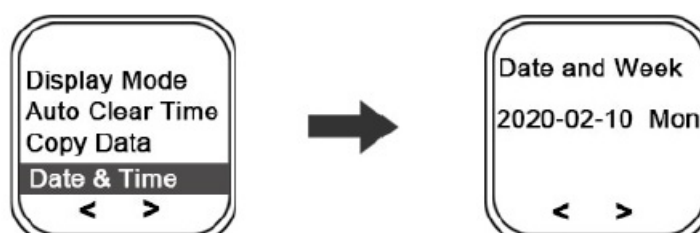


2. Date:

Short press "<" & ">" key to enter "Date and Week" setting

Short press "<" & ">" key to choose current Year-Month-Day & Week Long press "<" key to exit

Remind Mode

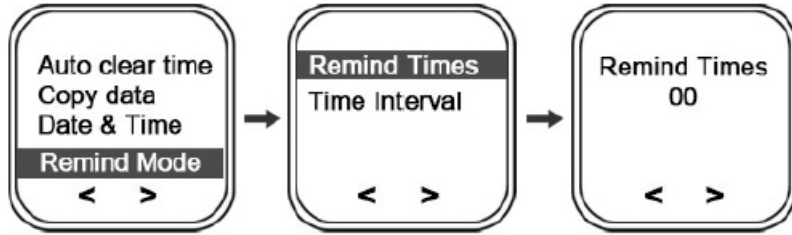

1. Remind Times (DefaLJt setting 00)

Short press "<" or ">" key to choose Remind Times from 00 to 09s. Loog press "<" key to exit.



2. Time Interval (Default setting 60)

Short press "<" or ">" key to choose Time Interval from 10 to 99s Long press "<" key to exit.

Restore Default



- ## 1. Delete Caller

Short press "<" or ">" key to enter "Delete Calle(Loog press "<" key to exit.



- ## 2. Delete Record

Short press"<" or">" key to enter "Delete Record" Long press"<" key to exit.

