



DAYTECH P4 Wireless Calling system User Manual

[Home](#) » [DAYTECH](#) » DAYTECH P4 Wireless Calling system User Manual 

Contents

- [1 DAYTECH P4 Wireless Calling system](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Description](#)
- [5 Function Key Guide](#)
- [6 Operation Guide](#)
- [7 Specification of Call Button](#)
- [8 How to Attach Strap and Replace Battery of Call Button](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)



DAYTECH P4 Wireless Calling system



Product Information

The P4 Wireless Calling system is a pager receiver designed to be used with multiple wireless call buttons. It is ideal for use in restaurants, coffee shops, hospitals, or communities to alert staff or provide service.

Specification of Pager

- Voltage: 12V
- Current: 1A
- Capacity: Multiple up to 1000pcs wireless call button
- Number Range: 0001~9999, A001~F999
- Working Temperature: -20-80 degrees Celsius
- Receiving Sensitivity: -105dBm
- Frequency: 433MHZ

Specification of Call Button

- Button battery: 23A 12V alkaline battery (included)
- Button Waterproof Standard: IPX5
- Button Size: Diameter 2.4 inch, thickness 0.7 inch
- Button with built-in antenna

Product Usage Instructions

Function Key Guide

- Press [FUN] key for 3 seconds: Enter setting status or Exit setting status
- Press [SET] key: Adjust number
- Press [MOVE] key: Adjust the number position
- Press [ENT] key: Confirm the setting

How to Cancel a Call

In the calling status, hold down [ENT] key to cancel the call. Once canceled, the Pager will go into standby status.

How to Configure Button (F-01)

1. Press [FUN] for 3 seconds and the screen will show [F-01].
2. Press [ENT], it will show [0001].
3. Set a number you want by pressing [SET] and [MOVE].
4. Press [ENT] to confirm, the number you set will flash.
5. Press a Button and it will send a signal to the receiver. If button configure successfully, the receiver will go to the next number automatically.
6. After setting, press [FUN] twice to go back to standby status.

How to Clear Button Record (F-02)

1. Press [FUN] for 3 seconds and the screen will show [F-01].
2. Press [SET] to reach [F-02].
3. Press [ENT], it will show [0001].
4. Press [SET] and [MOVE] to select the number you want to delete.
5. Press [ENT] to delete the number.
6. After setting, press [FUN] twice to go back to standby status.

How to Adjust Volume (F-05)

1. There are 8 sound levels available. 1 means mute, and 8 means loudest. The default level is 6.
2. Press [FUN] for 3 seconds and the screen will show [F-01].
3. Press [SET] until it shows [F-05].
4. Press [ENT], it will show a number between 0-8.
5. Change the number between 0-8 by pressing [SET].
6. Press [ENT] to confirm the number you set.
7. After setting, press [FUN] twice to go back to standby status.

How to Delete All Numbers (F-07)

1. Press [FUN] for 3 seconds and the screen will show [F-01].
2. Press [SET] to adjust until it shows [F-07].
3. Press [ENT], it will show [F7 – 1].
4. Under F7-1, press [ENT] to delete all the numbers.
5. Press [ENT] to confirm the setting.
6. After setting, press [FUN] twice to go back to standby status.

To attach a strap and replace the battery of the call button, please refer to the instructions provided on www.daytech-group.com.

Description

P4 Wireless pager receiver is designed to configure with multiple wireless call button. And cater for the restaurant, coffee shop, hospital or communities for call/service alert.

Use Tips

1. one call button could call multiple receivers at the same time
2. the paging system just one-way, for example the customer press the button ,then the waitress will go to know what's they need
3. you even can use wireless call system play games at party(like jeopardy),exciting your Imagination fully
4. If the wireless signal range is decreased, please replace the battery of call button
5. Call Button Just Some Simple Waterproof Function so Can Not Be Placed in The Water The Receiver and the button in kits have been configured. PLUG-AND-PLAY

Function Key Guide

- Press [FUN] key for 3 seconds: Enter setting status or Exit setting status
- Press [SET] key: Adjust number
- Press [MOVE] key: Adjust the number position
- Press [ENT] key: Confirm the setting

How to Cancel a Call

- In the calling status, Hold down [ENT] key to cancel the call.
- If the call have been canceled. The Pager will be in standby status.

Operation Guide

How to Configure Button (F-01)

1. Press [FUN] for 3 seconds and the screen will show [F-01].
2. Press [ENT], it will show [0001].
3. Set a number you want by pressing [SET] &[MOVE]
4. Press [ENT] to confirm, the number you set will flash.
5. Press a Button and it will send a signal to receiver,if button configure successfully,the receiver will go to next number automatically
6. After setting, press [FUN] twice back to standby status.

How to Clear Button Record (F-02)

1. Press [FUN] for 3 seconds and the screen will show [F-01].
2. Press [SET] to reach [F-02].
3. Press [ENT], it will show [000 1].
4. Press [SET] & [MOVE] to get the number you want to delete.

5. Press [ENT] to delete the number
6. After Setting, press [FUN] twice back to standby status.

How to Adjust Volume (F-05)

There are 8 sound levels for your choice. "1" means mute, 8 means loudest. Default is 6

1. Press [FUN] for 3 seconds and the screen will show [F-01].
2. Press [SET] until it shows [F-05].
3. Press [ENT], it will show a number between [0-8].
4. Change number between 0-8 by Press [SET].
5. Press [ENT] to confirm the number you set.
6. After Setting, press [FUN] twice back to standby status.

How to Delete All Number(F-07)

1. Press [FUN] for 3 seconds and the screen will show F-01
2. Press [SET] to adjust, until it shows F-07 .
3. Press [ENT],it will show F7 – 1 .
4. Under F7-1, Press [ENT], All the numbers are deleted.
5. Press [ENT] to confirm the setting
6. After Setting, press [FUN] twice back to standby status.


Specification of Pager

1. **Voltage:** 12V
2. **Current:** $\leq 1A$
3. **Capacity:** Multiple up to 1000pcs wireless call button
4. **Number** 0001~9999, A001~F999
5. **Working Temperature:** -20°C-80°C
6. **Receiving Sensitivity:** $\geq -105dBm$
7. **Frequency:** 433MHZ


Specification of Call Button

1. Button battery: 23A 12V alkaline battery included
2. Button Waterproof Standard: IPX5
3. Button Size: Diameter 2.4 inch, thickness 0.7 inch
4. Button with built-in antenna

How to Attach Strap and Replace Battery of Call Button

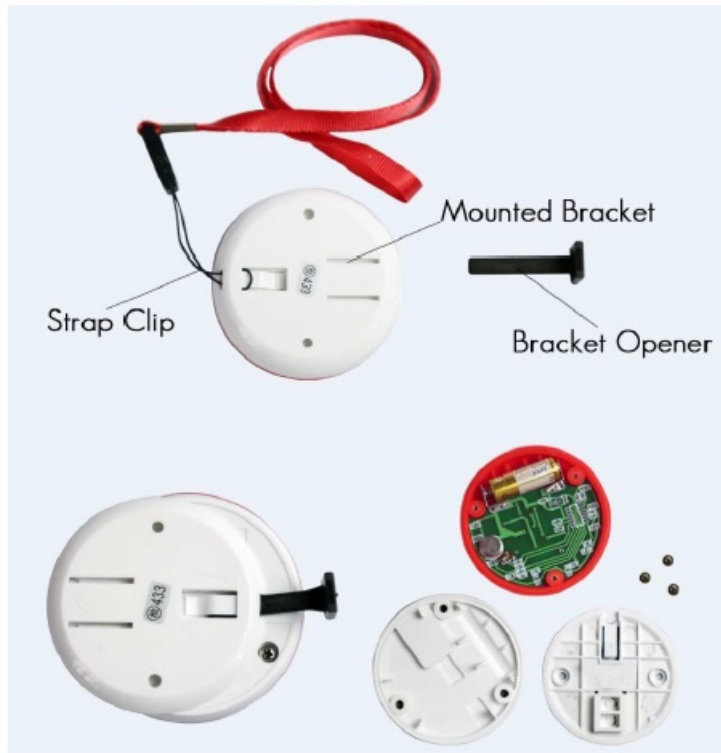

Documents / Resources

	DAYTECH P4 Wireless Calling system [pdf] User Manual P4 Wireless Calling system, P4, Wireless Calling system, Calling system
---	---

References

- [caregiver pager, elderly caregiver, senior care, elderly alarm, nursing pager – Quanzhou DAYTECH Electronic Technology Co., Ltd](#)