



DBX ZC-3 Wall-Mounted Zone Controllers User Guide

[Home](#) » [Support](#) » DBX ZC-3 Wall-Mounted Zone Controllers User Guide 


Contents



- 1 DBX ZC-3 Wall-Mounted Zone Controllers
- 2 FREQUENTLY ASKED QUESTIONS
- 3 VIDEO – PRODUCT OVERVIEW




DBX ZC-3 Wall-Mounted Zone Controllers




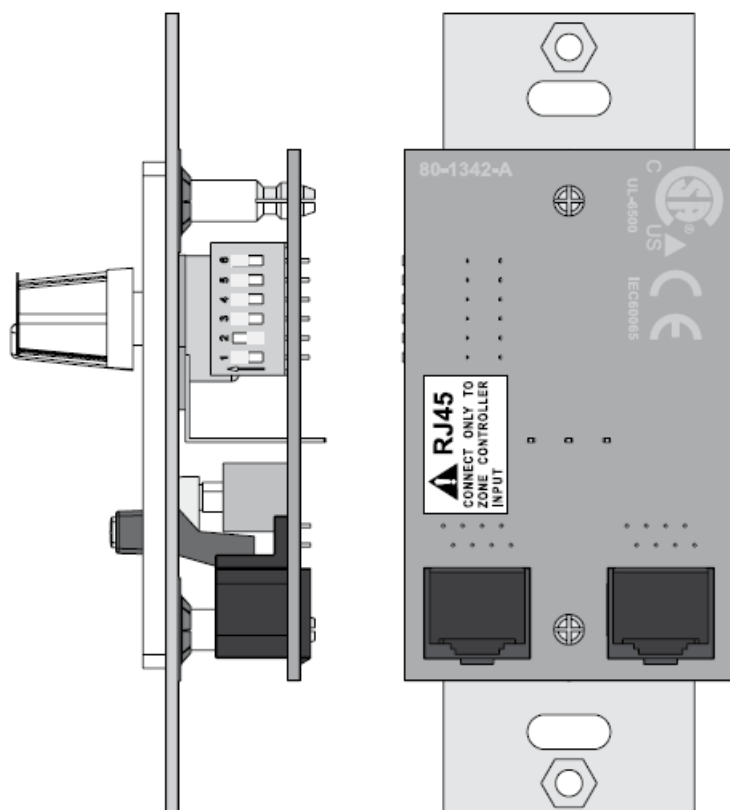

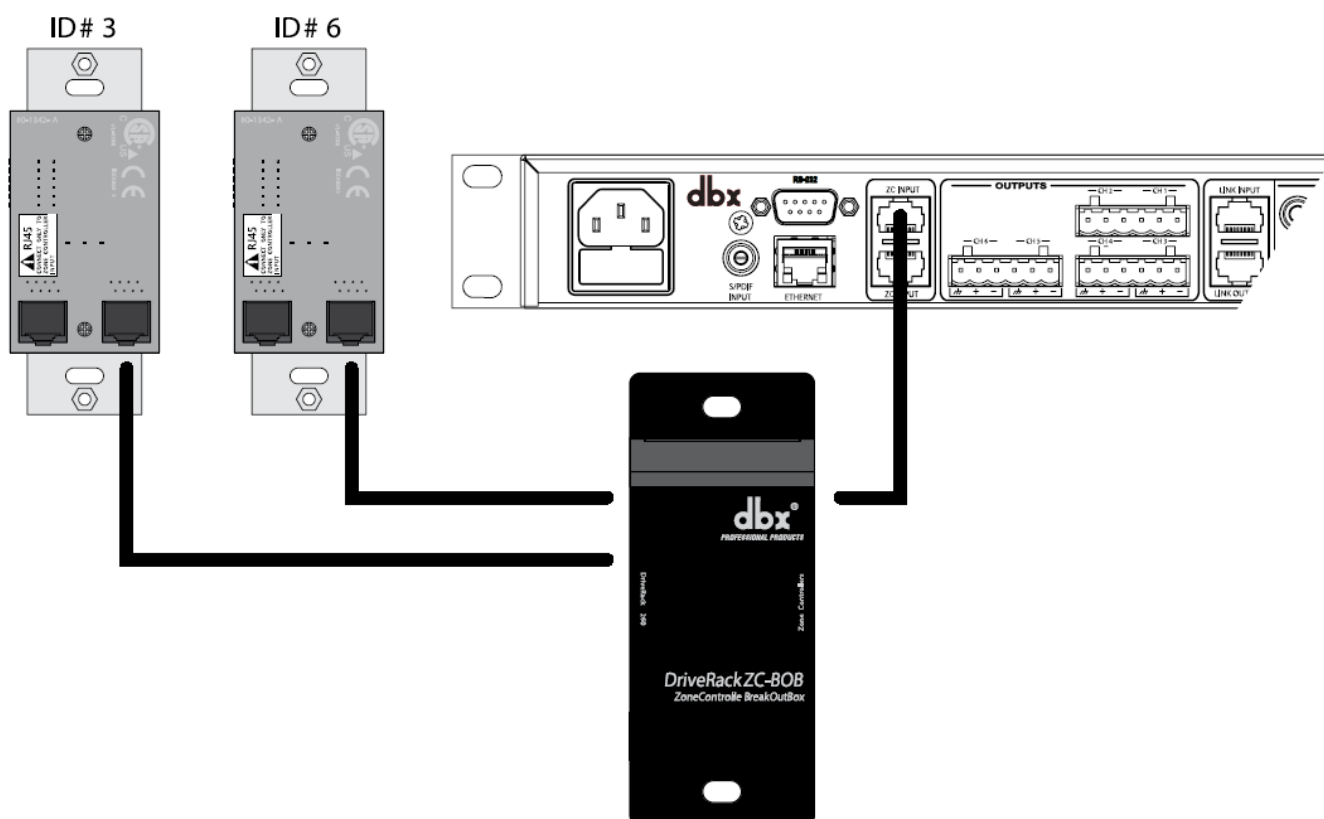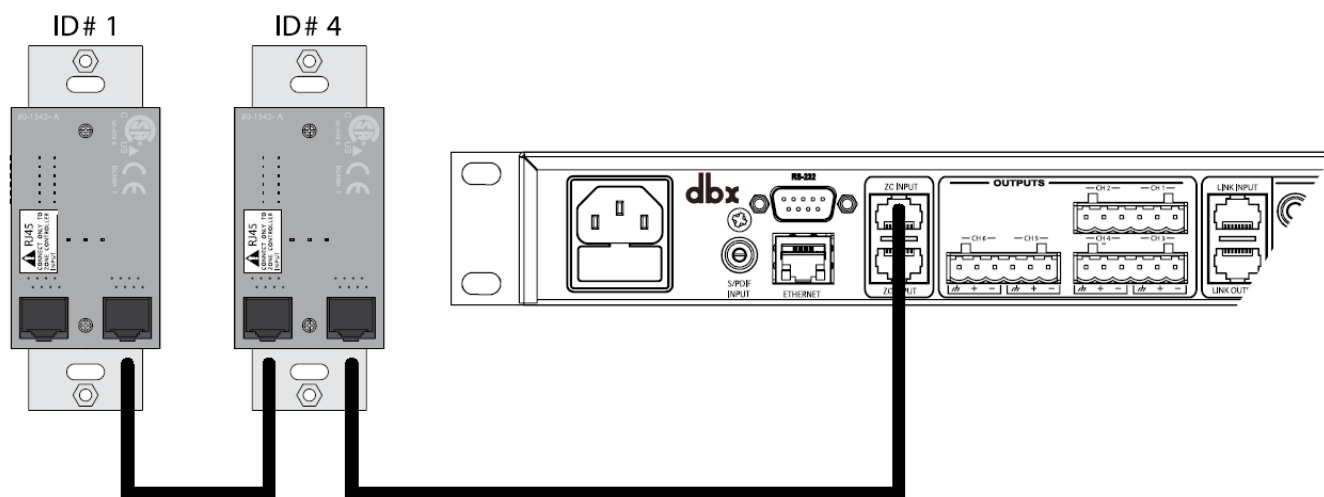

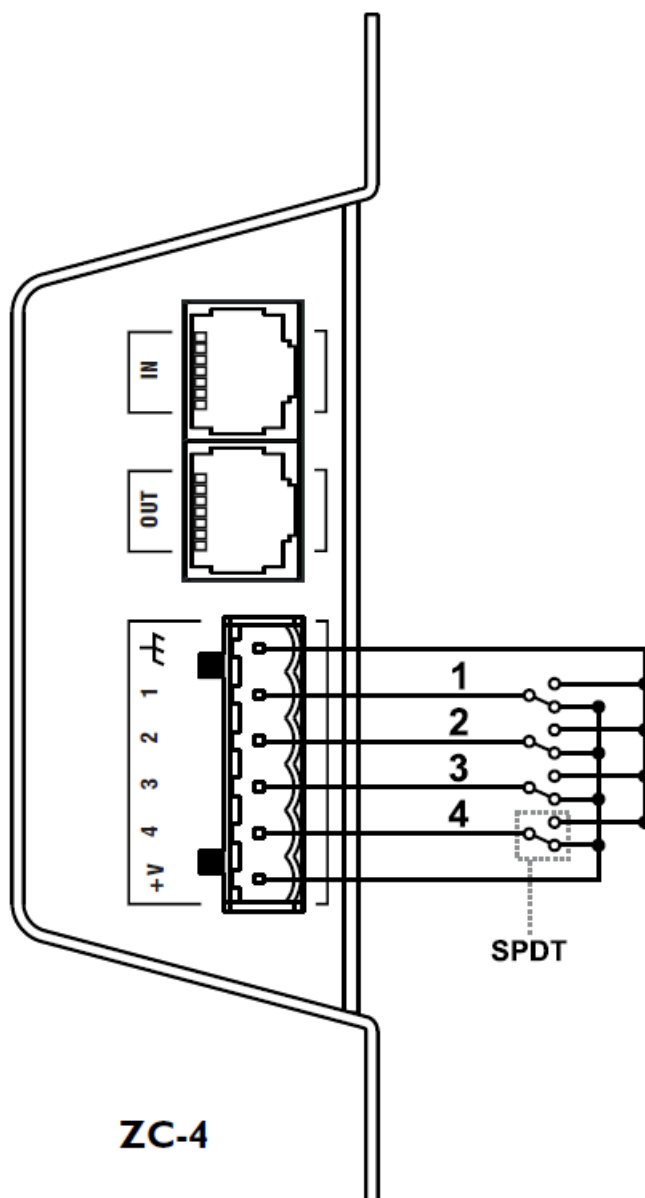

ZC-4




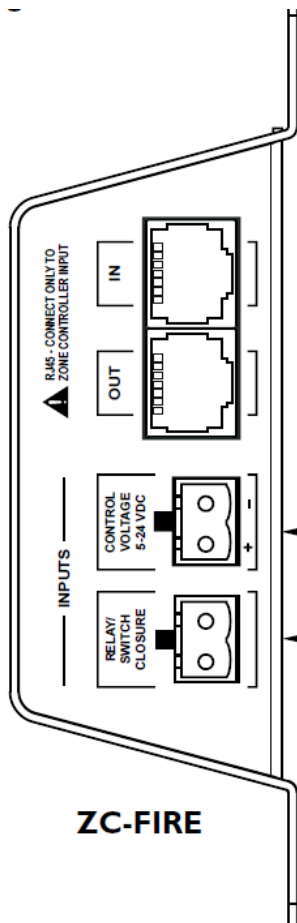



ZC-FIRE

Connect a 5-24V DC control voltage to this connector.

Or

 Connect a normally open or normally closed relay closure to this connector.

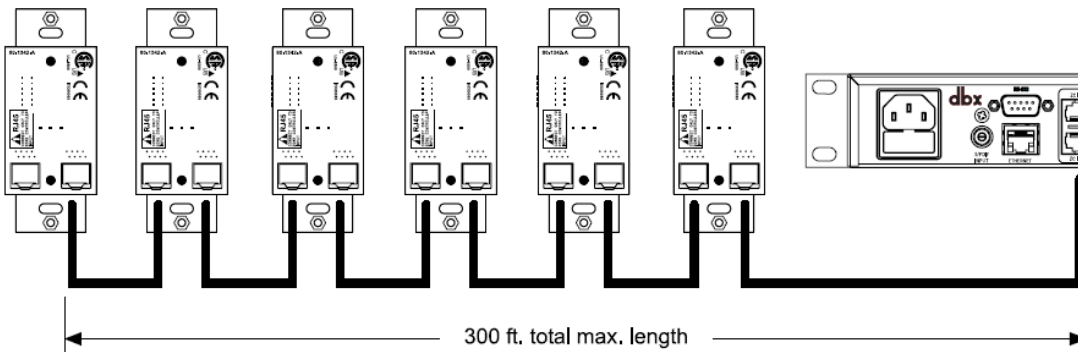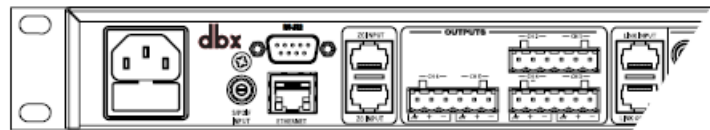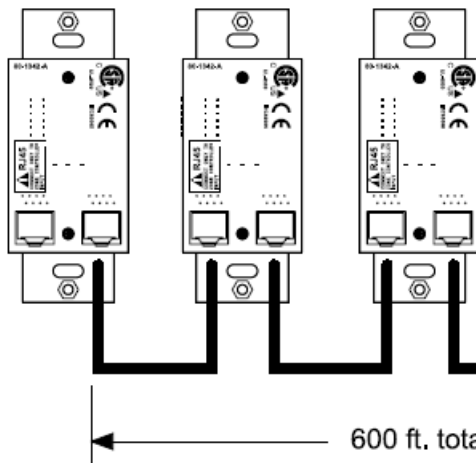

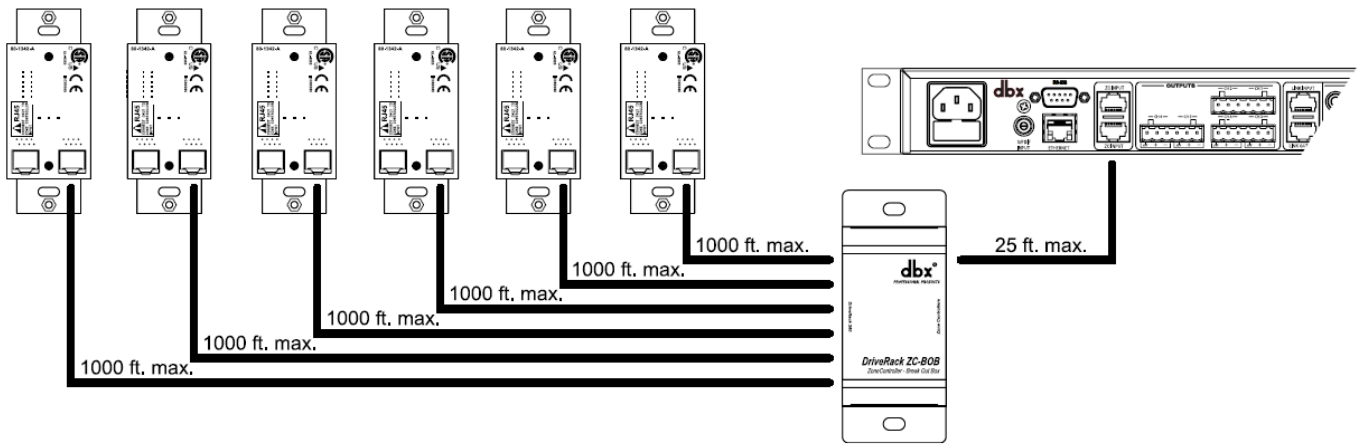

RJ-45
(8-Position)

White / Orange

1

RJ-45

(8-Position)

1 --- Voltage Reference

Orange

2

2 --- Controller 1/7

White / Green

3

3 --- Controller 2/8

Blue

4

4 --- Controller 3/9

White / Blue

5

5 --- Controller 4/10

Green

6

6 --- Controller 5/11

White / Brown

7

7 --- Controller 6/12

Brown


8

8 --- Ground




	DriveRack 220i	DriveRack 260	DriveRack 4800/4820	ZonePRO 640(M) / 641(M)	ZonePRO 1260(M) / 1261(M)	SC 32 / 64
ZC-1	X	X	X	X	X	X
ZC-2	X	X	X	X	X	X
ZC-3	X	X	X	X	X	X
ZC-4	X	X	X	X	X	X
ZC-6			X	X	X	X
ZC-7			X	X	X	X
ZC-8			X	X	X	X
ZC-9			X		X	X
ZC-Fire			X	X	X	X
ZC-BOB	X	X	X	X	X	X


ZC-1, ZC-2, ZC-3, ZC-6, ZC-7

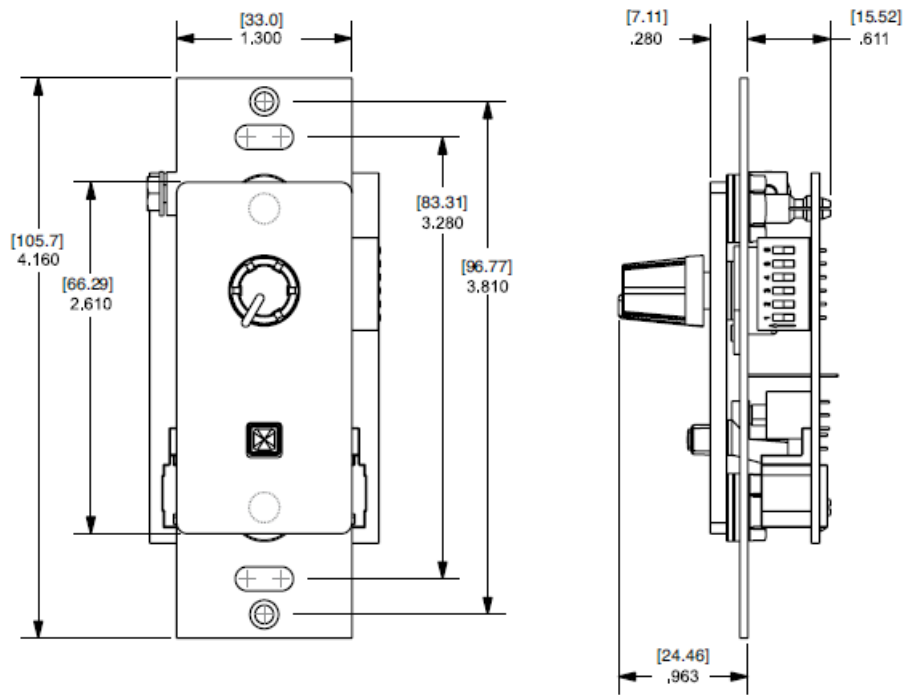


ZC-8 and ZC-9

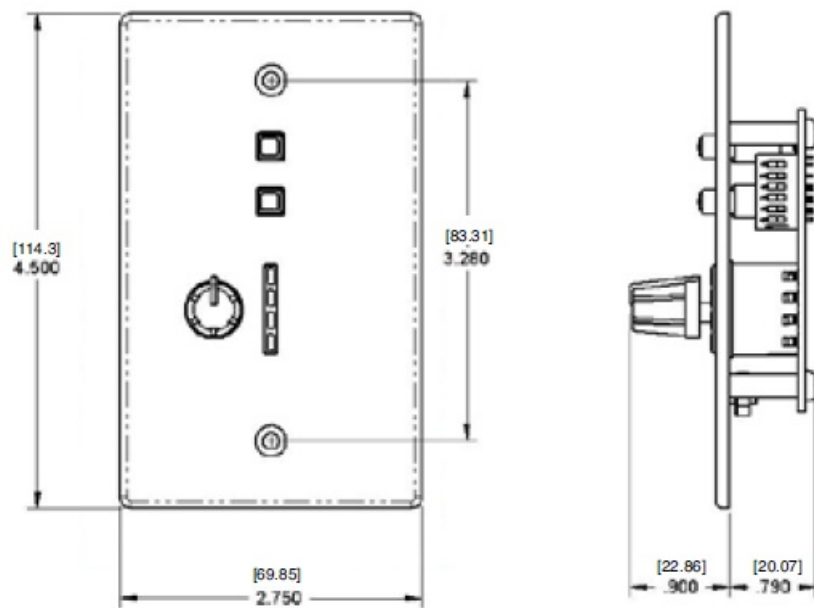

ZC-4, ZC-BOB and ZC-Fire

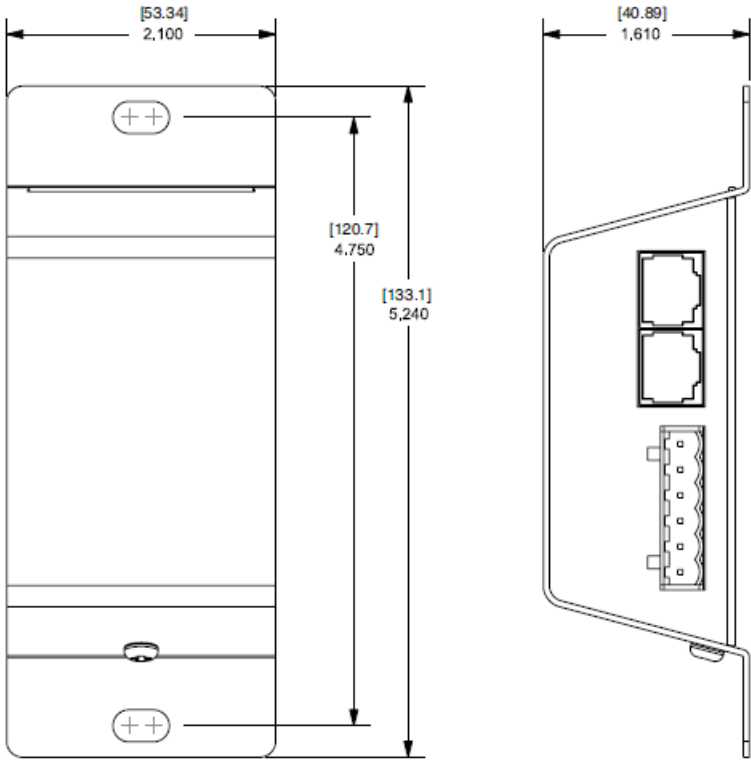


ZC-1, ZC-2, ZC-3, ZC-6, ZC-7, ZC-8 and ZC-9 EU Models

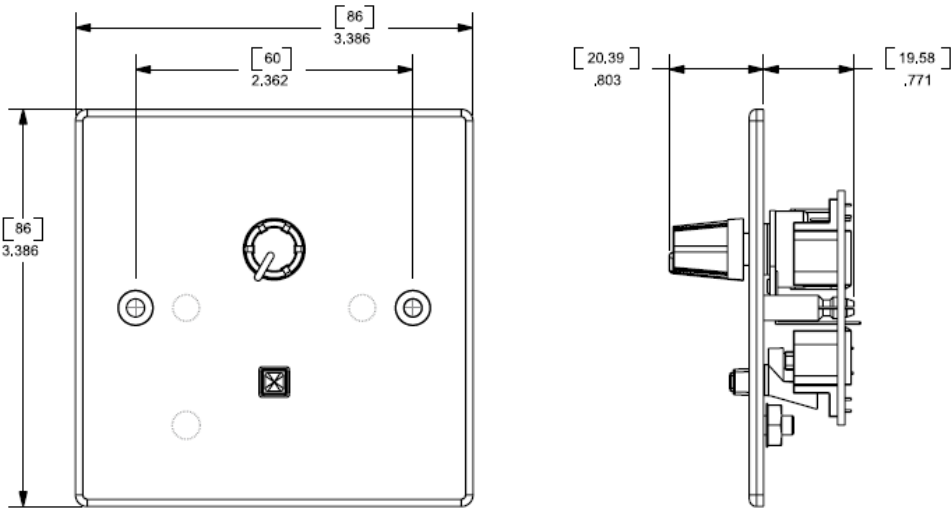

FREQUENTLY ASKED QUESTIONS

 VIDEO – PRODUCT OVERVIEW



[Download the PDF link: 3-Wall-Mounted-Zone-Controllers-User-Guide-1.mp4](#)