



Deadbolt G00-KPDA619 Electronic Keypad User Guide

[Home](#) » [Deadbolt](#) » Deadbolt G00-KPDA619 Electronic Keypad User Guide 

Deadbolt G00-KPDA619 Electronic Keypad




Contents

- [1 OVERVIEW OF THE LOCKSET](#)
- [2 HOW TO LOCK / UNLOCK / PROGRAM THE LOCKSET](#)
- [3 RESTORE TO FACTORY SETTINGS](#)
- [4 TROUBLESHOOTING](#)
- [5 Access code list](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

OVERVIEW OF THE LOCKSET

1. ENTER / LOCK BUTTON

1. Red light: Represents an incorrect entry or the unit is programming mode.
2. Yellow light: Flashes when the batteries are low in power.
3. Green light: Represents a correct entry.
4. Press  to activate or lock the lockset

2. KEYPAD

 
1. Unlocks the lockset by entering a valid User Code.
2. Programs the lockset by entering a valid Programming Code in Programming Mode.

3. MECHANICAL KEYWAY OVERRIDE

1. Lock or unlock the lockset by a valid key.

4. BATTERY COVER

1. Protects the batteries from unexpected damage.

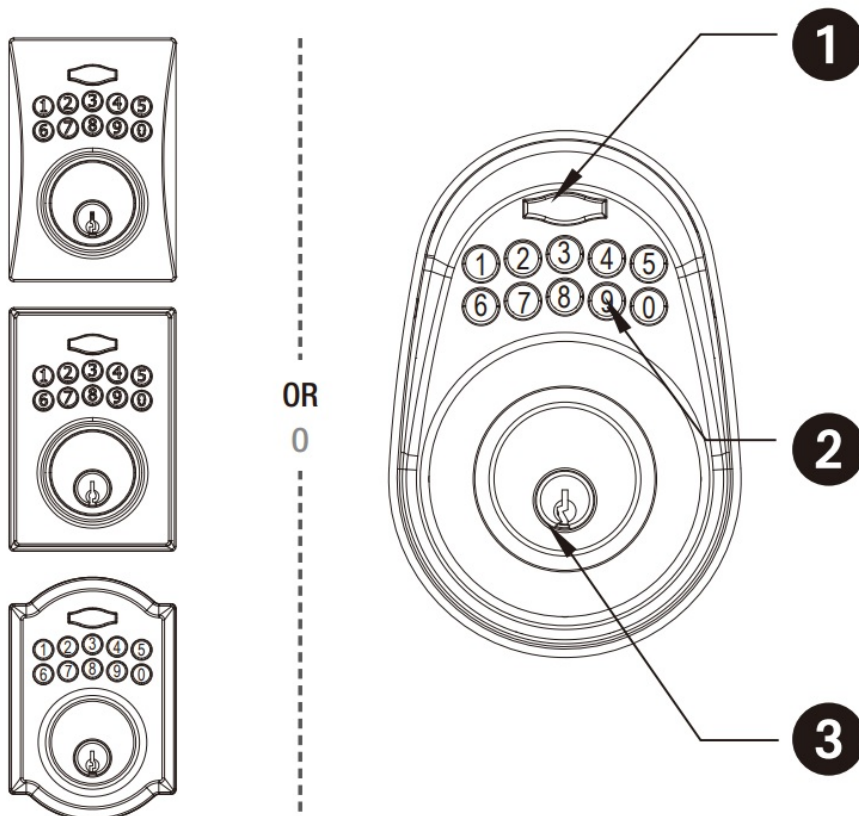


5. [SET] BUTTON

1. Press set button for 1 second to enter programming mode. Press set button again to exit programming mode.
2. Please refer [2]-(2) to for more information about programming mode.

6. INTERIOR THUMBTURN

 1. Locks or unlocks the lockset manually.

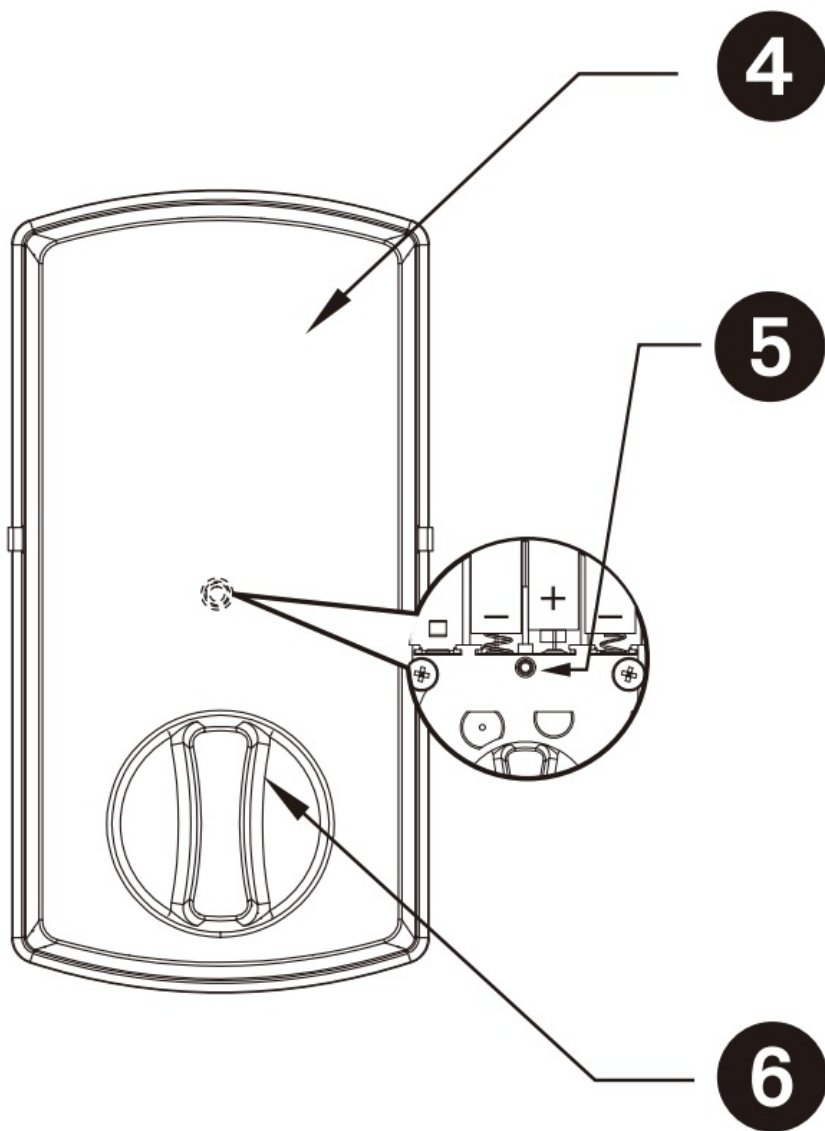

HOW TO LOCK / UNLOCK / PROGRAM THE LOCKSET

HOW TO LOCK / UNLOCK THE LOCKSET

- To lock

 


- Press “ ” to lock



OR

- Use a mechanical key to lock.

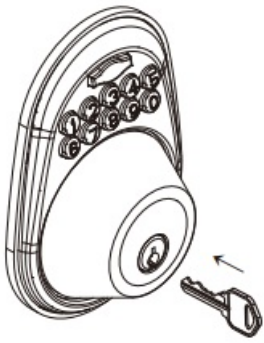

- To unlock

 


- Enter valid User Code or Programming Code



OR

 


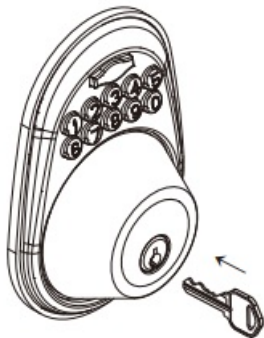








- Use a mechanical key to unlock.










 







Keypad is temporarily disabled for 1 minute after 4 consecutive incorrect entries.


HOW TO PROGRAM THE LOCKSET


BASIC SETTINGS

Change Programming Code	<ul style="list-style-type: none"> Programming Code can be used to program or unlock the lockset. The default Programming Code is “123456”. 	Press [SET]	Programming Code (4-6 digits)	→  → ① → ① →  →	New Programming Code (4-6 digits)	
Add a User Code(S)	<ul style="list-style-type: none"> User Code can be used to unlock the lockset. User Code capacity: 10 sets (4-6 digits). 	Press [SET]	Programming Code (4-6 digits)	→  → ② → ① →  →	New User Code (4-6 digits)	Add another code 
Delete individual User / Single-entry Code(s)	<ul style="list-style-type: none"> Delete individual User Code(s). 	Press [SET]	Programming Code (4-6 digits)	→  → ③ → ① →  →	User Code / Single-entry Code (4-6 digits)	Delete another code 
Delete all User / Single-entry Codes	<ul style="list-style-type: none"> Delete all User & Single-entry Codes 	Press [SET]	Programming Code (4-6 digits)	→  → ④ → ① →  → 		

ADVANCED SETTINGS


Add Single-entry Code(s)	<ul style="list-style-type: none"> Single-use User Code can only be used once to unlock the lockset. Single-use User Code capacity: 5 sets (4 digits). 	Press [SET]	Programming Code (4-6 digits)	→  → ② → ① →  →	Single-entry Code (4 digits)	Add another code 
Vacation Mode	<ul style="list-style-type: none"> Vacation mode temporarily disable ALL User Codes 	Press [SET]	Programming Code (4-6 digits)	→  → ⑤ → ① →  →	Turn On- (1) Turn Off- (0)	 
Volume Control	<ul style="list-style-type: none"> Turn on / off door lock operation volume. Volume is always on in the programming mode. 	Press [SET]	Programming Code (4-6 digits)	→  → ⑥ → ① →  →	Turn On- (1) Turn Off- (0)	 
Auto-lock	<ul style="list-style-type: none"> Auto-lock is disabled by default. 	Press [SET]	Programming Code (4-6 digits)	→  → ⑧ → ① →  →	Turn On- (1) Turn Off- (0)	 

Auto-lock Delay Timer	<ul style="list-style-type: none">• Default Auto-lock Delay Timer : 10 seconds.• Auto-lock Delay Timer range: 10 -99 seconds.	Press [SET]	Programming Code (4-6 digits)	→↶→⑦→⑩→↷→	Enter New Amount (10 – 99)	
-----------------------	--	-------------	-------------------------------	-----------	----------------------------	---


-  The lockset will exit the programming mode and resume to the stand-by status if no input is made in 30 seconds.
- 3 Beeps means something was entered incorrectly. Please redo the step again.


RESTORE TO FACTORY SETTINGS

 Remove one battery

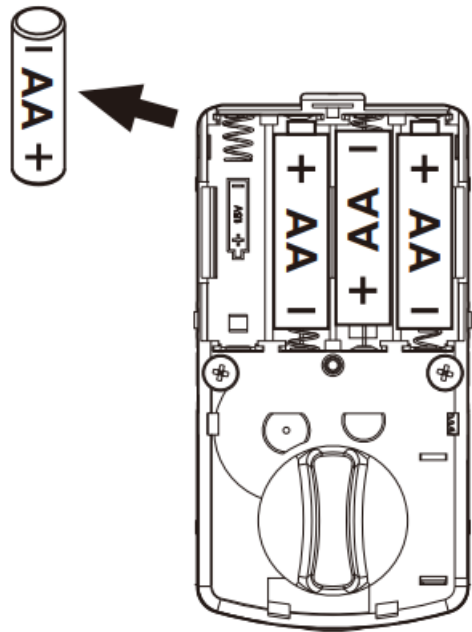

 Press and hold SET button while inserting the battery back. Hold the set button until long beep over.

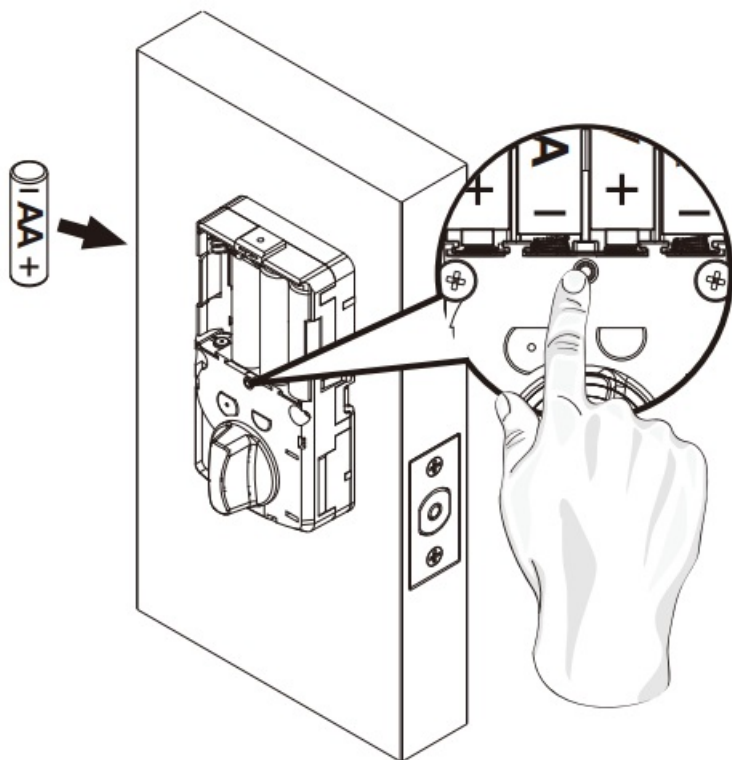

1.  This will erase all stored information, including bolt direction
2. Please re-enter the default Programming Code to set up the lock after restoring to factory settings.


TROUBLESHOOTING

INSTALLATION

QUESTIONS	ANSWERS
A. The latch does not operate correctly after installation.	<ol style="list-style-type: none"> 1. Make sure the backset on the latch is set to the proper length. 2. Make sure prior to installation latch bolt is retracted and key is not in lockset when installing the deadbolt. 3. Please restore to factory setting and enter the default Programming Code to set up the lock.
B. Feel a bump while turning the thumbturn or the key?	<ol style="list-style-type: none"> 1. Please execute lock & unlock function to allow the motor to reposition itself again. 2. The battery is low if the battery indicator light keeps flashing. Please replace with four new batteries. 3. Please restore to factory setting and enter the default Programming Code to set up the lock.
C. Fail to set up the lock.	<ol style="list-style-type: none"> 1. Please make sure the lock is installed correctly. 2. Please install the fresh batteries and make sure the cable is connected correctly.


OPERATION

QUESTIONS	ANSWERS
A. Battery indicator keeps flashing.	<ol style="list-style-type: none"> 1. The batteries are getting low, please replace with four new batteries for the best performance (alkaline batteries only).

B. Keypad not responding.	<ol style="list-style-type: none"> 1. Make sure the batteries are installed properly. 2. The batteries are getting low if the battery indicator keeps flashing. please replace with four new batteries for the best performance (alkaline batteries only). 3. Make sure the cable is well-connected to the port, and was not damaged during installation. 4. Please make sure the lock has been set up and complete the bolt direction determination.
C. Programming Code can not be changed.	<ol style="list-style-type: none"> 1. Please refer to [2] – (3) in the user guide to restore factory setting and reprogram all codes.
D. What should I do if wrong code was entered?	<ol style="list-style-type: none"> 1. Press  button once and continue to input code according to regular procedures.
E. Can not delete all User Codes .	<ol style="list-style-type: none"> 1. Make sure the whole code entering process is completed within 30 seconds, otherwise the unit will time out. 2. Make sure the Programming Code has been entered correctly.
F. Can not add a new User Code.	<ol style="list-style-type: none"> 1. Make sure the whole code entering process is completed within 30 seconds, otherwise the unit will time out. 2. Make sure the Programming Code has been entered correctly. 3. The new User Code will not be accepted when the capacity is full. Try to delete any or some existing User Codes and then add new one(s) again. A User Code must be at least 4 to 6 digits.

G. "Auto lock" does not function.	<ol style="list-style-type: none"> 1. The batteries are low on power if the battery indicator keeps flashing. Please replace with four new batteries for the best performance. (Alkaline Batteries Only). 2. Please refer to 2 – in the guide to enable the Auto-Lock function.
H. Lockset is not able to unlock / lock by keypad.	<ol style="list-style-type: none"> 1. Make sure you have entered the correct User Code. 2. The battery is low if the battery indicator light keeps flashing. Please replace with four new batteries. 3. Make sure the cable is firmly connected. 4. Check the cable for any damage that may have occurred during installation. 5. Make sure the batteries are properly installed. (Alkaline batteries only) 6. Check the strike plate to make sure it is properly aligned and clear so the bolt can freely move in the hole.

QUESTIONS	ANSWERS
I. Lockset is unable to reset.	<ol style="list-style-type: none"> 1. Remove batteries, then press on the keypad to make sure there's no remaining power. Press and hold SET button while inserting the battery back. Hold the set button until long beep over. Please refer to [2] -(3) in the user guide to restore factory settings. 2. The battery is low if the battery indicator light keeps flashing. Please replace with four new batteries. Hold the set button until long beep over.
J. How to operate the lock set in darkness?	<ol style="list-style-type: none"> 1. Press any button to activate the lockset back light.

<p>K. The red indicator is still on after setting is completed.</p>	<ol style="list-style-type: none"> 1. Check if [SET] button is jammed. 2. Re-install the batteries. 3. The lockset is still in Programming mode. Press [SET] button again or wait 30 seconds to exit.
<p>L. The lockset locks when I enter my code and unlocks when I press the .</p>	<ol style="list-style-type: none"> 1. Uninstall the interior and exterior assemblies. <p>Before re-installation, please follow these guidelines:</p> <ol style="list-style-type: none"> 1. Make sure the bolt is in the retracted position. 2. Do not have any key in the cylinder during installation. 3. Make sure the torque blade is inserted horizontally. 4. Reset the unit to factory settings and reprogram the programming code and use r codes.
<p>M. I cannot remove my key unless it is in the locked position.</p>	<ol style="list-style-type: none"> 1. Un-install the interior and exterior assemblies. <p>Before re-installation, please follow these guidelines:</p> <ol style="list-style-type: none"> 1. Make sure the bolt is in the retracted position. 2. Do not have any key in lock cylinder. 3. Make sure the torque blade is inserted horizontally.
<p>If the lock appears to be damaged or does not operate properly, please contact customer service for further assistance.</p>	

Access code list




After changing your Programming Code, do not pass your Programming Code to anyone else.

Programming Code	
Name	User Code

[illegible]

[illegible]

 Documents / Resources

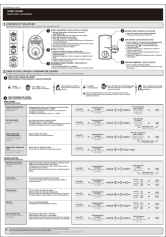	<p>Deadbolt G00-KPDA619 Electronic Keypad [pdf] User Guide G00-KPDA619 Electronic Keypad, G00-KPDA619, G00-KPDA619 Keypad, Electronic Keypad, Keypad</p>
---	--